

# **NOSTART USER MANUAL & PROGRAMMING INSTRUCTIONS**

## **GENERAL DESCRIPTION**

The NOSTART relay system is designed to replace existing vehicle relays in order to provide vehicle immobilisation. No installation work is required, all compatible vehicle relays are removed from the factory designed socket and a NOSTART relay is simply inserted into the empty socket. Specific vehicle notes may be found at [www.nostart.com](http://www.nostart.com).

## **DISARMING**

*Remote systems:* to disarm a NOSTART relay, simply turn the vehicle's ignition switch to the ON position and press the main button on a valid remote control. On some vehicles the system can be disarmed without the ignition being on.

## **PROGRAMMING NEW REMOTE CONTROL**

1. NOSTART Relay must be armed
2. Turn ignition to full crank position.
3. Press small button on master remote control.
4. Press large button on new remote control to be coded vehicle should start immediately.

Note: Please ensure manual vehicles are in neutral and place foot on the clutch.

## **EMERGENCY OVERRIDE**

An individual override procedure card is provided with every NOSTAR Relay.