

# NOSTART USER MANUAL & PROGRAMMING INSTRUCTIONS

## GENERAL DESCRIPTION

The NOSTART relay system is designed to replace existing vehicle relays in order to provide vehicle immobilisation. No installation work is required, all compatible vehicle relays are removed from the factory designed socket and a NOSTART relay is simply inserted into the empty socket. Specific vehicle notes may be found at [www.nostart.com](http://www.nostart.com).

## DISARMING

*Remote systems:* to disarm a NOSTART relay, simply turn the vehicle's ignition switch to the ON position and press the main button on a valid remote control. On some vehicles the system can be disarmed without the ignition being on.

## PROGRAMMING NEW REMOTE CONTROL

1. NOSTART Relay must be armed
2. Turn ignition to full crank position.
3. Press small button on master remote control.
4. Press large button on new remote control to be coded vehicle should start immediately.

Note: Please ensure manual vehicles are in neutral and place foot on the clutch.

## EMERGENCY OVERRIDE

An individual override procedure card is provided with every NOSTAR Relay.

## CAUTION:

### To assure continued FCC compliance:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

### FCC Label Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.