

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules, these limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

70: 2M 082

RADIO FUN

WALKIE TALKIES FEATURES

- 9-Volt battery operated
- ON/OFF volume control to normal listening
- Push-TO-Talk release to listen button switch
- Powerful signal (4-transistors)
- Flexible antenna for best transmission & reception
- Morse code signal switch
- Communication distance approx up to 100m
- Belt-Clip for ease of carrying
- Fashion and special design for easy handing

HOW TO OPERATE YOUR TRANSETTE

- 1.Turn the "ON-OFF"switch(Fig.2)to "ON" and adjust the volume control to normal listening level.
- 2.Best transmission and reception are obtained when the FLEXIBLE ANTENNA(Fig.1)is held in vertical
- 3.Press the "PUSH-TO-TALK" button (Fig.3) for transmitting and speak in a normal voice level into the speaker/microphone grille (Fig.4).
- 4.Release the "PUSH-TO-TALK"button (Fig.3) for receiving .
- 5.Open BATTERY COMPARTMENT(Fig.7)and snap in a 9-voltbattery.Replace door firmly.
- 6.To send MORSE CODE signals pushing the" PUSH-TO-TALK"button (Fig.3) press the signal code key (Fig.5) and quickly release to send a.(dot) or hold key longer to send a-(dash). You can practice MORSE CODE without transmitting to other units by pressing the code key and not push the "PUSH-TO-TALK" button.
- 7.BELT CLIP (Fig.6) on back for easy carry.

- 1.You walkie talkies have been fully adjusted prior to shipment be sure not to touch the internal components other than replacing the battery
- 2.When the sound becomes weak , it is time to change the battery.
- 3.After use ,always turn the ON/OFF/VOLUME CONTROL switch to the "OFF" position
- 4.Keep your set in dry place.
- 5.Take out batteries when walkie talkie are not in use.
- 6.Do not use rechargeable battery.

