

RACING TEAM

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING,
AND RETAIN THIS INSTRUCTION FOR FUTURE REFERENCE.

PLEASE REFER TO FREQUENCY LABELING UNDER VEHICLES AND BEHIND CONTROLLERS. THE
27MHz CONTROLLER CONTROLS THE 27MHz VEHICLE. THE 49MHz CONTROLLER CONTROLS
THE 49MHz VEHICLE.

RADIO CONTROL FREQUENCY

FOR INTERFERENCE-FREE RESULTS, DO NOT OPERATE THESE VEHICLES WITH OTHER RADIO-
CONTROLLED TOYS NOT INCLUDED IN THIS SET WITHIN TRANSMISSION RANGE.

TRANSMITTER AND RECEIVER

SINCE RADIO WAVES CONTROL THIS VEHICLE AND IN ORDER TO AVOID INTERRUPTION, DO
NOT OPERATE THIS VEHICLE NEAR ELECTRICAL OR TELEPHONE LINES, CB INTERFERENCE, CD
PLAYERS, MOBILE PHONES, ELEVATORS, STEEL GIRDERS, OTHER ELECTRONIC DEVICES AND
NEAR HIGHWAYS.

INSTALLING THE BATTERIES

REMEMBER TO SET THE "ON-OFF" SWITCH AT BOTTOM OF THE VEHICLE TO "OFF" POSITION BEFORE INSERTING
THE BATTERIES.

UNSCREW AND OPEN BATTERY COMPARTMENT COVER TO INSERT BATTERIES IN THE VEHICLE AS SHOWN IN FIGURE.

MAKE SURE ALL BATTERIES ARE AT THE CORRECT POLARITY.

CLOSE THE COVER AND TIGHTEN THE SCREW.

TO INSERT BATTERY IN THE CONTROLLER, OPEN BATTERY COMPARTMENT COVER TO INSERT BATTERY AS SHOWN IN FIGURE.

CLOSE THE COVER AND TIGHTEN THE SCREW.

DO NOT LEAVE BATTERIES IN THE VEHICLE AND TRANSMITTER WHEN THE TOY IS NOT IN USE.

DO NOT MIX OLD AND NEW BATTERIES TOGETHER.

DO NOT MIX ALKALINE, STANDARD(CARBON-ZINC) OR RECHARGEABLE(NICKEL-CADMUM) BATTERIES.

DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

FOR BEST PERFORMANCE, ALKALINE BATTERIES ARE RECOMMENDED.

OPERATING THE VEHICLE

FOR YOUR SAFETY, NEVER PLAY WITH THIS TOY ON THE STREET.

TURN THE "ON-OFF" SWITCH AT THE BOTTOM OF THE VEHICLE TO "ON" POSITION, THEN THE VEHICLE WILL GO BACKWARD IN CIRCULAR PATH.

PULL THE TRIGGER DOWNWARD ON THE TRANSMITTER, THE VEHICLE WILL RESPOND IN GOING STRAIGHT FORWARD.

TO CHANGE DIRECTION OF THE VEHICLE, JUST RELEASE THE TRIGGER; THE VEHICLE WILL GO BACKWARD IN CIRCULAR PATH. UNTIL THE CAB FACES THE DIRECTION AS YOU DESIRE, PULL TRIGGER DOWNWARD AGAIN. THE VEHICLE WILL GO FORWARD IN THE DIRECTION AS YOU WANT.

OPERATION TIPS

1. OPERATE ONLY ON SMOOTH (BUT NOT SLIPPERY), DRY AND CLEAN SURFACE.
2. DO NOT PLAY WITH THIS TOY IN GRASS, SAND OR CARPET.
3. DO NOT DRIVE THE TOY THROUGH WATER.
4. ALWAYS POINT THE CONTROLLER ANTENNA UPWARD FOR BETTER TRANSMISSION.
5. DO NOT MAKE ANY PHYSICAL CONTACT WITH THE CONTROLLER ANTENNA WHILE OPERATING.
6. KEEP THE TOY IN A DRY AND COOL PLACE AFTER PLAYING. DO NOT LEAVE IT DIRECTLY UNDER SUNLIGHT.

"Modifications not authorized by the manufacturer may void users authority to operate this device"

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.