



INSTALLATION INSTRUCTIONS (CONTINUED)

Installation of the Rechargeable Battery

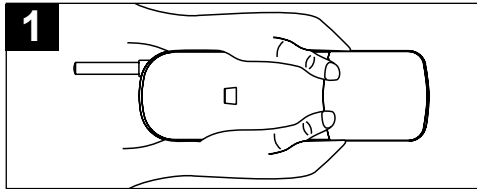


Remove the battery cover located on the rear of the handset by pressing on the top cover and sliding it downward.

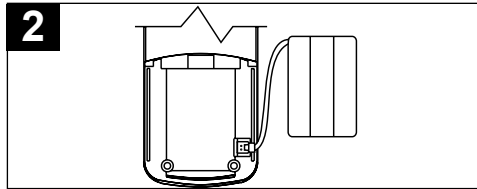

Plug the new battery into the rechargeable battery plug and insert the rechargeable battery into the battery compartment.

NOTE: The plug will fit only one way. If you have difficulty, be sure the plug and socket are aligned properly.

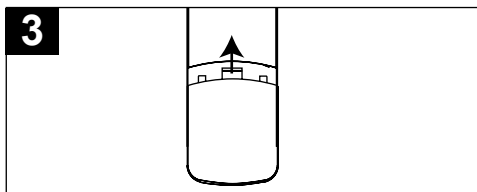

Put the battery cover back on by sliding it upward until it clicks into place.

Charging the Rechargeable Battery

Be sure the rechargeable battery be fully charged 12 hours prior to initial use. The handset's rechargeable battery will be charged when it's on the base's charge contacts; the CHARGE indicator will light when it is placed in the base.


NOTES:

- LOW BATTERY will appear in the display and the handset will beep every 30 seconds when the battery power is low and needs recharging. If the battery becomes weak while you are on a call, the TALK indicator will blink and the handset will beep once; end the call immediately and return to the base for recharging.
- Every few months, or when charging becomes abnormal, clean the contacts of the handset and the base with a standard pencil eraser.
- To maximize battery life, fully discharge the battery every month or two. To do this, simply unplug the telephone line cord and press the TALK button until the battery is discharged, and then recharge it.


SET-UP INSTRUCTIONS

SETTING THE LANGUAGE


Set the language (ENGLISH, SPANISH, FRENCH) as follows:

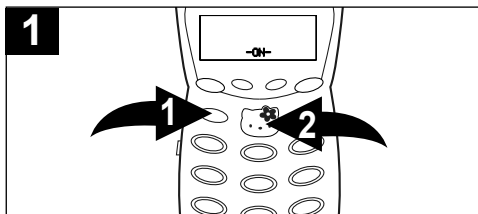


Press and hold the ERASE button ❶ for more than two seconds or press the TALK button ❷ twice to clear any displayed number and return to the Standby mode.

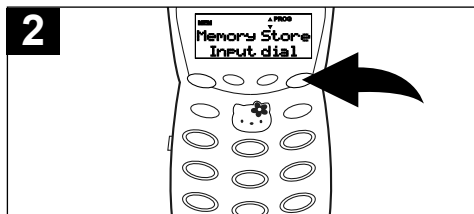


While in the Standby mode, press the PROG button.

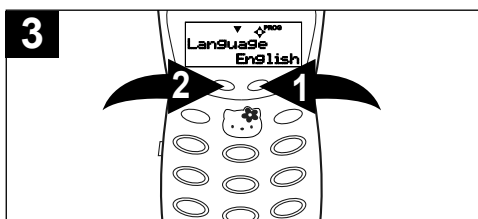

Press the REVIEW/VOLUME ▲ button ❶ once or the REVIEW/VOLUME ▼ button ❷ three times to enter the Language menu.

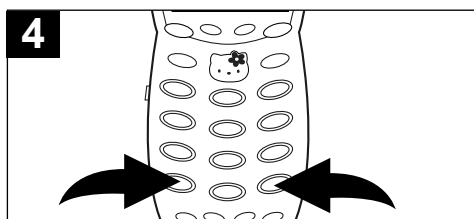

Press the ◀ or ▶ button ❶ to select the desired language (ENGLISH, SPANISH, FRENCH).

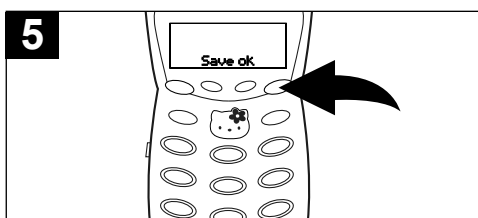


Press the PROG button again to store the language; "Save ok" will appear in the display for three seconds and a confirmation tone will be heard.


SET-UP INSTRUCTIONS (CONTINUED)

SETTING THE AREA CODE


In order for the Caller ID redial feature to work properly, you must set the phone to your local area code as described below. If you live in a town with more than one area code, do not enter an area code for this option.

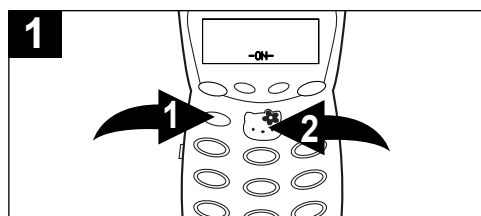


Press and hold the ERASE button ❶ for more than two seconds or press the TALK button ❷ twice to clear any displayed number and return to the Standby mode.

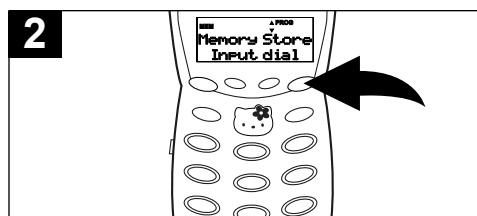


While in the Standby mode, press the PROG button.

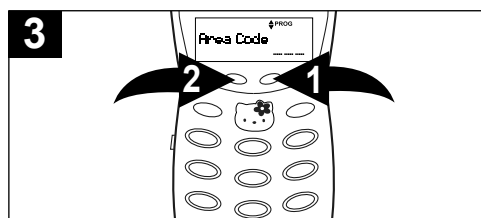

Press the REVIEW/VOLUME ▲ button ❶ twice or the REVIEW/VOLUME ▼ button ❷ twice to enter the Area Code menu.

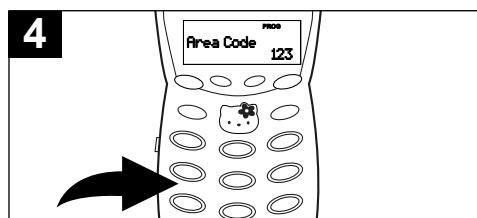

Use the Key buttons to enter in the area code.

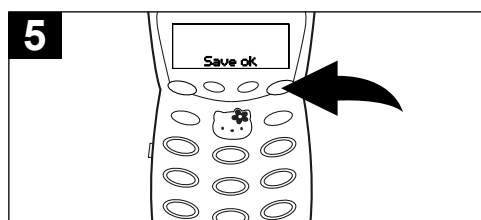


Press the PROG button again to store the area code; "Save ok" will appear in the display for three seconds and a confirmation tone will be heard.


SET-UP INSTRUCTIONS (CONTINUED)

SETTING THE LCD CONTRAST


If you find the LCD screen difficult to read, set the contrast level as follows:

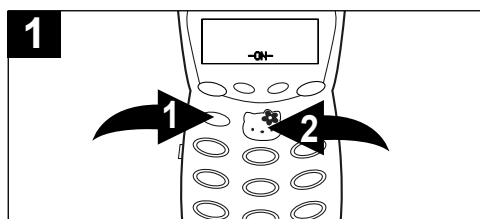


Press and hold the ERASE button ❶ for more than two seconds or press the TALK button ❷ twice to clear any displayed number and return to the Standby mode.

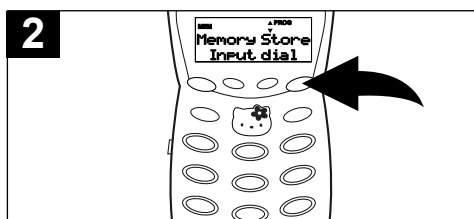


While in the Standby mode, press the PROG button.

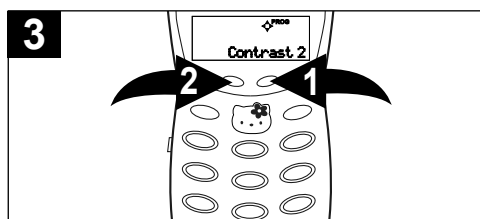

Press the REVIEW/VOLUME ▲ button ❶ three times or the REVIEW/VOLUME ▼ button ❷ once to enter the Contrast menu.

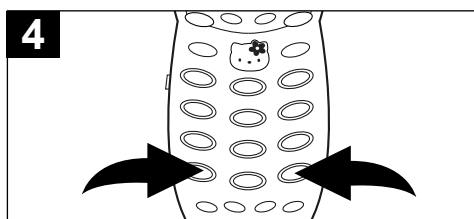


Press the ◀ or ▶ button to select one of the three contrast levels (3 being the darkest, 1 being the lightest).

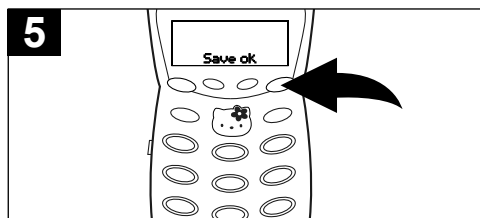

Press the PROG button again to store the contrast level; "Save ok" will appear in the display for three seconds and a confirmation tone will be heard.


BASIC OPERATION

RINGER SWITCH

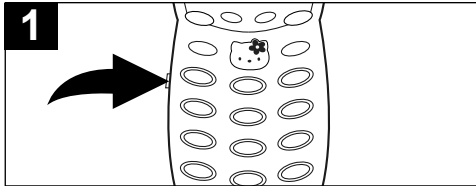

Slide the RINGER ON/OFF switch on the side of the handset to the ON position to turn the ringer on. Slide the RINGER switch to the OFF position to turn the ringer off.

STONE/PULSE SWITCH

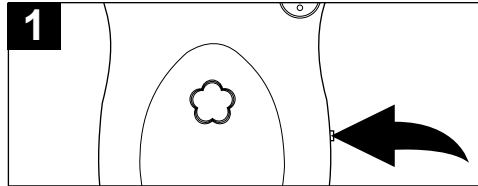

Slide the TONE/PULSE switch on the side of the base to TONE or PULSE to match the service provided on your telephone line. If you are not sure of your service, please contact your telephone company.

AUTO TALK AND AUTO STANDBY


The Auto Talk feature will allow you to answer a call by simply removing it from the base, there is no need to press the TALK button.

The Auto Standby feature allows you to hang up the phone by simply returning it to the base.


CONNECTING THE HEADSET

For hands-free conversation, a headset (not included) can be connected to the 2.5mm headset jack on the side of the handset unit. The handset receiver and microphone are disabled when a headset is connected. When the headset is connected, press the TALK button to answer or place a call. Refer to the headset manufacturer's manual for more details.

PLACING A CALL

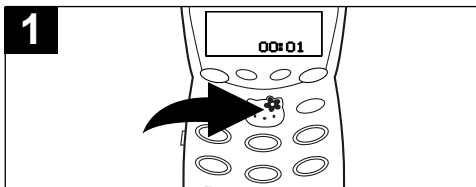

After the battery has been fully charged, press the TALK button and listen for a dial tone; the timer will appear in the display.

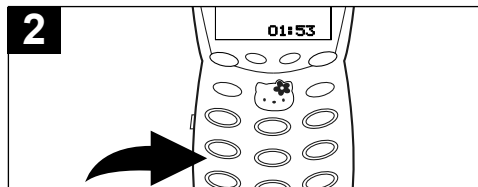


Press the Key buttons (0-9) to dial the phone number you wish to call. Ten seconds after dialing, the display will show the amount of time you have been on the phone.

BASIC OPERATION (CONTINUED)

RECEIVING A CALL

The last 99 incoming calls are saved in the Caller ID log.

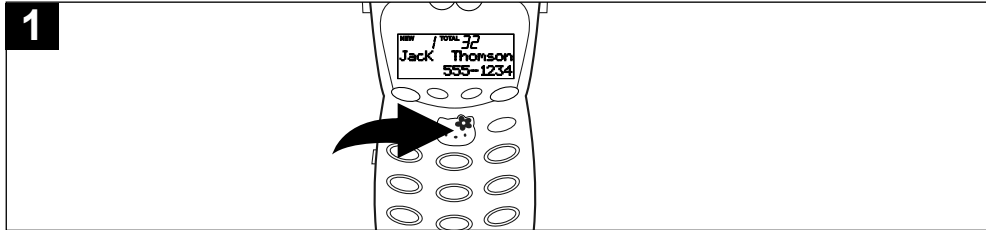


Make sure that the Caller ID service is turned on by your phone company. When you receive a call, the display will show the name of the caller and number of the call. To answer the call if the handset is out of the base, press the TALK button. If the handset is in the base, simply remove it from the base. The display will show the amount of time you have been on the phone.

NOTES:

- The incoming call indicator will blink on the base unit, even if the RINGER switch is off and a call is received.
- If you subscribe to Caller ID, the time and date are automatically set when the first call is received.
- If a call is received from an area which does not provide caller ID service, the display will show, "UNKNOWN". If a call is received from outside the Caller ID area, the display will show, "OUT OF AREA".
- If a call is received from a caller that has blocked his/her information, the display will show, "PRIVATE CALL".
- Calls picked up on the first ring will not be logged in the Caller ID log.
- Call Waiting calls are shown in the Caller ID log if you subscribe to the extra feature from the phone company that allows this.
- If there are new calls, "NEW" will blink in the display.
- If a call is received from the same number more than once since the last records were reviewed, no new entry is made, but the repeat (REP) indicator and the number of repeat calls is displayed.

BASIC OPERATION (CONTINUED)


REDIALING A NUMBER

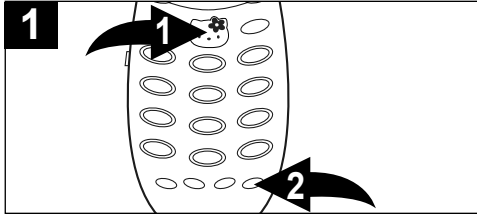

Press the TALK button ❶, followed by the REDIAL button ❷ to automatically redial the last number dialed on this handset (up to 32 digits).


NOTE: Please note that only the last number you called on this handset can be stored in the Redial memory.

CHANNEL SELECTION

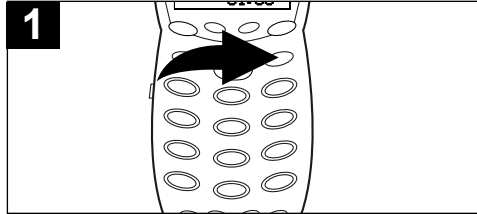


This telephone allows you to select a channel from the frequencies available to transmit signals from the base unit to the handset. If the existing channel becomes noisy or starts having interference while in the Talk mode, press the CHN (Channel) button on the handset for better reception.

ENDING A CALL

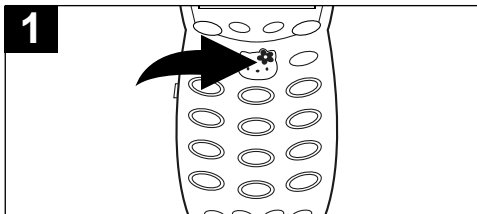

To end a call, simply return the handset to the base, or press the TALK button on the handset.

ADJUSTING EARPIECE VOLUME

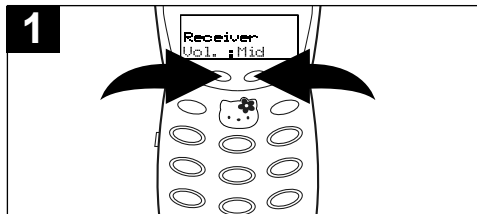

To adjust the volume in the earpiece, simply press the REVIEW/VOLUME ▲/▼ buttons during a call until the desired volume level is reached.

OUT OF RANGE WARNING

The handset and base communicate up to a maximum range. The distance can be affected by the weather, power lines or other cordless telephones. You are out of range and should move closer when:

- You hear noise or static.
- Pressing the TALK button generates three short beeps.
- Pressing the CID button when a number is displayed generates three short beeps.
- You cannot receive an incoming call.