



RADIO CONTROL MICRO RACER

Instruction Sheet

1. Charging Your Micro Racer:

Open compartment door to charging chamber and lock racer firmly into charging position. Once racer is securely locked into charger, push charge button. A red light will appear on left side indicating vehicle is being charged. Red light will automatically shut off when charge is complete. Charge time will be approx. 90 secs. (Depending on battery strength.)

Note: Make sure front of racer is always facing left when charging.

Note: If charging light does not go on, this means the car is not in correct position to charge.

2. Operating Your Micro Racer:

Left Hand Switch Controller-

Push controller up (forward) or down (reverse) to move racer.

Right Hand Switch Controller-

Push controller left or right for full function steering of the racer.

Green light will illuminate when racer is operating. Before operating your racer, make sure the antenna is fully extended. (See illustration below for reference)



Note: Make sure front of racer is facing left when charging.

3. Controller Unit:

Please note your controller can also be used as storage for the racer within the recharge chamber. (see illustration above for reference)

Trouble Shooting:

 
If green light does not illuminate during operation, you may need to replace old batteries with new batteries. Never mix old and new batteries.

Note:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment

4. Micro Speed Body Styles:

Your Micro Speed Body can Pop-Off to change body styles. Use coin behind front bumper to remove racer body. (See illustration below for reference).



Caution:

Do not use force to remove body as you may damage body or chassis.

Special Note:

 
Only Use Micro Speed Replacement Bodies!

Important Note On Steering Adjustment:

Adjustment of steering may be necessary after prolonged use. You may adjust the front steering by adjusting the lever on the bottom of front wheels. Always use racer on a clean flat surface. Never operate racer on carpeting! (See illustration above for reference)

Battery Requirements-

Requires 3 AAA Batteries for Controller/ Charger. (Not Included)



CAUTION: To avoid battery leakage:

1. For best performance, always use new alkaline batteries.
2. Do not mix old and new batteries.
3. Always remove dead batteries.
4. Remove batteries before storing.
5. Do not mix alkaline, lithium, "standard", "heavy duty", or rechargeable nickel cadmium batteries.
6. Insert batteries correctly.
7. Always follow toy and battery manufacturer's instructions regarding use and disposal.

This device complies with RSS-210 of Industry Canada. Operation is subject to following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

27-143 MHz TX RF-76.4 dBm/m @ 3m.
49-860 MHz TX RF-75.3 dBm/m @ 3m.