

Appendix E. Operational Description

1) Functions

Only the audio data stored in the Handy-Karaoke unit will be played through the Audio system.

2) Operation Method (Utility)

- ① Turn on the Audio system.
- ② Connect the wireless antenna into the Handy-Karaoke unit.
- ③ Turn on the power of the Handy-Karaoke unit and the LCD should display 0000 .
- ④ Tune the reception of the audio into bands not occupied by broadcasting (as the systems without Auto-Mute function). Refer to operation manual or product specifications to verify the Non-Occupied bands. Doubled with occupied band may cause noises.
If the system makes noises, reset reception bands up or down for clearer reception.
- ⑤ Set frequency shown on LCD of the Handy-Karaoke unit as the same with the bandwidth set up on the Audio system.
- ⑥ Choose the songs to be sung from the songbook and input the number of the songs by the numeric buttons.
(Refer ④ & ⑤ of page 8)
- ⑦ Push the PLAY/STOP button and the song will start to play.

☛ Using Handy-Karaoke by battery operation

- * Open the battery lid at the rear of the unit and insert batteries (4 x 1.5V AAA batteries)
- * When batteries wear, the LCD displays LOW every 10 seconds and a beeping sounds
(the unit can be used a while in this condition, but noises may occur and the batteries should be change at this moment)
- * To save the batteries' wear, if Non-Play mode occurs for more than 5 minutes, the unit will automatically cut off the power
- * Battery wear is about 3~4 hours consecutive use and about 10 hours maximum