



Dear *Encore! Compact Karaoke®* Owner:

Congratulations! You now own the ultimate entertainment system. This compact karaoke system has the most exciting new technology and most advanced system ever designed.

Unlike other conventional karaoke units, you can enjoy *Encore! Compact Karaoke®* anywhere/any place you like; at home, a friend's house, in a car or at outdoor gatherings with friends and family, it's so easy. If you don't sing well, but aspire to greater heights, *Encore!* will help you improve and gain confidence. If you're already a great singer, you understand the need for practice. *Encore!* will make you the envy of everyone, even professionals.

We are proud of our patented microphone with over 250 of the most commonly requested songs built into the microphone. If any of your favorite songs are missing, please visit our website, www.encorekaraoke.com to download the songs you like, or purchase our already created song cartridges. (To download songs, you will need the Music Download Device.)

If you have any difficulty operating your microphone, please read through this instruction manual or visit our website for frequently asked questions (FAQ page) and the "How It Works" page. You may also call Monday-Friday 9 am to 5 pm, PST, Toll Free (866) 887-7727.

From Nationwide Distributors, Inc. we wish you hours of enjoyment and hope this brings your family and friends closer together.

Thank you for choosing
Encore! Compact Karaoke®.

P.S. Please take a moment to fill out and mail the enclosed warranty registration card. If you prefer, you may register through our website, www.encorekaraoke.com. This assures you will receive prompt service and important updates.

TABLE OF CONTENTS

- PRODUCT INFORMATION ————— 1
- METHOD OF CONNECTION ————— 3
- DESIGNATIONS AND FUNCTIONS OF PART ————— 6
- MAIN FUNCTION ————— 7
- MENU/DETAIL FUNCTION ————— 10
- SPECIAL FUNCTIONS ————— 11
- BATTERY INSERTION / REMOVAL ————— 12
- SONG CARTRIDGE / BATTERY RECHARGE ————— 13
- SAFETY RULES FOR MANAGING BATTERY ————— 14
- SAFEGUARDS FOR USE ————— 15
- SAFEGUARDS ————— 16
- WARRANTY POLICY ————— 17
- INFORMATION TO USER ————— 20
- COPYRIGHTS AND SONG LIST ————— 22

Instructions

PRODUCT INFORMATION

1. SET LIST:

A COMPLETE SET CONSISTS OF FIVE(5) ITEMS :



Microphone
ECKS1 A/V Cable
AVC1 A/C Adapter
Adp1




Song Book
SB1

Antena
Ant1

PRODUCT INFORMATION

2. OPTION ITEMS: (must be purchased separately)


SPECIAL INTRODUCTORY OFFER: When you purchase a Music Download Device (Model no. DD1) you get one memory chip (Model No. MC8M) free.

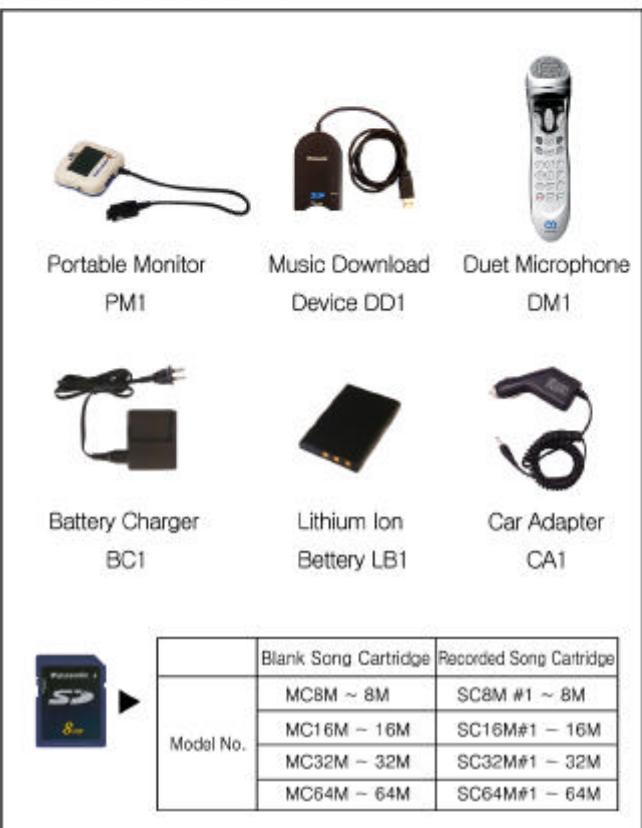

If you want to purchase option item(s), please call Monday - Friday 9 am to 5 pm, PST, Toll Free (866) 887-7727 or visit our website (www.encorekaraoke.com)

METHOD OF CONNECTION

How to connect with TV

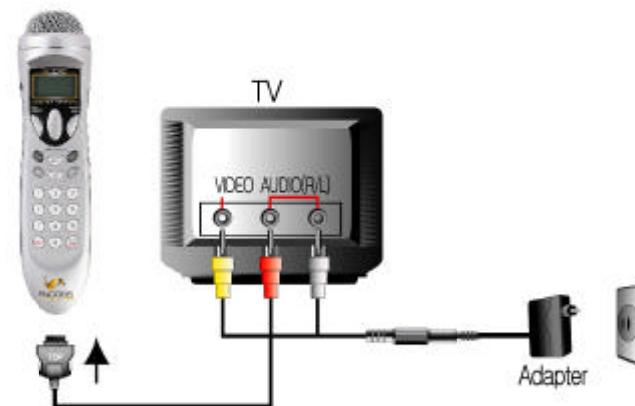

1. Make sure connector is clean, and does not come in contact with any foreign substances.
2. Connect video (yellow) and audio (red & white if applicable) connectors to TV.
3. Turn on TV and set TV mode as Video.
4. First, connect the adapter with jack(black) and insert A/V Cable into the bottom of the microphone. Insert A/V Cable into the Mic. until it clicks with the mark **TOP** facing up, and pull out carefully by pressing both right and left buttons. (Rechargeable Lithium-Ion battery can be used instead of adapter.)
5. Turn on Mic by pressing **POWER**.
6. Press **START STOP** to start or stop playing.

METHOD OF CONNECTION

How to connect to FM Radio




1. Connect A/V Cable and Adapter as shown.
2. Turn on the Radio at low volume.
3. Turn on Mic by pressing **POWER**.
4. Select the frequency Between FM104Mhz to FM108Mhz if you hear static, press **MENU** and select the frequency that do not give static.
5. Select song by using **0 ~ 9**.
6. Press **START STOP** to start playing.

*** Note :**

- Depending on models of Radio, A/V cable connection position may be different.
- Rechargeable Lithium-Ion Battery Can be used instead of Adapter.

METHOD OF CONNECTION

How to connect with TV and Stereo

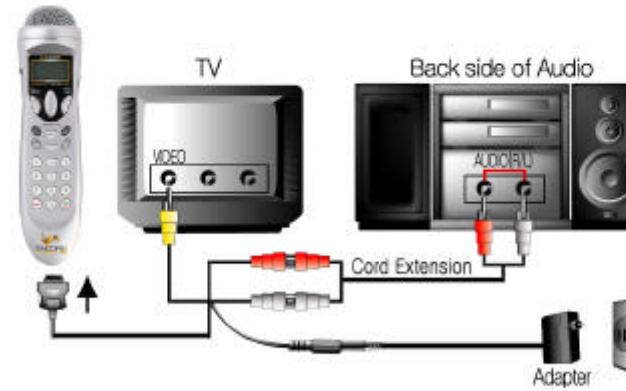

You can connect with stereo by using extended cord.















*** Note:**

              If the Audio system has "Line-In" or "Aux" terminals, use the A/V Cable included in this set and this will ensure the finest audio quality.

DESIGNATIONS AND FUNCTIONS OF PART

A. DESIGNATIONS:



MAIN FUNCTION	MAIN FUNCTION	MAIN FUNCTION
<p>B. FUNCTIONS:</p> <p>1. </p> <p>Press  to turn on and press for 2 seconds to turn off. "OFF" will appear on 13 LCD window.</p> <p>2. </p> <p>Press to start and press to stop.</p> <p>3. </p> <p>Press numbers to select songs, and press  to start playing.</p> <p>4. </p> <p>1) Select song number and press  to reserve (up to 32 songs). Reserved song numbers will appear on TV screen. 2) Press start, songs will play in the order reserved.</p> <p>5. </p> <p>1) Press reserved song number and press  to cancel reserved song. 2) Cancelled song will disappear from TV screen.</p>	<p>6. </p> <p>This is another feature of selecting songs. 1) Press , song list will appear on TV screen. Press  to scroll up and down to choose the song you wish, and press  to start song or press  to reserve the song. (you can reserve up to 32 songs) 2) If you wish to scroll song list by page, press  for page up, press  for page down. 3) Press  to stop this function.</p> <p>7. </p> <p>Press  to view functions and press  to select desired degree or quality of the function. (ie. high-low volume etc.)</p> <p>8. </p> <p>This function enables you to record or stop while playing. 1) Press  to record(up to 8 min) "Record" will appear on TV screen. 2) Press again  to stop the recording.</p> <p>9. </p> <p>This function is to re-play your recorded song. 1) Press  to listen into your recorded song . 2) "Play" will display on your TV screen. 3) Press  to stop.</p>	<p>10. </p> <p>This function is to adjust music key while playing. Press  to adjust music tempo by pressing  to scroll up and down.</p> <p>11. </p> <p>Scroll up and down to select song, and start to play song by pressing .</p> <p>12. </p> <p>Press  to change tempo of song at any time. (Before or during playing)</p> <p>13. LCD window</p> <p>14. Jack for Duet Microphone</p> <p>15. Jack for A/V cable</p> <p>16. Antenna</p> <p>17. Song Cartidge (memory chip)</p> <p>18. Jack for headphones (ordinary headphone may be used)</p>

FUNCTIONAL SET-UP METHOD

- Each time  is pressed, a different function will display on TV screen. Press  to adjust volume.
- To Reset the microphone to its original set up, hold down  and press 

YOU CAN CONTROL THE BELOW FUNCTION BY PUSHING 

1. MIC	controls the volume of the mic
2. DUET MIC	controls the volume of the duet mic
3. VOLUME	controls the volume of the music
4. MELODY	controls the volume of the melody
5. ECHO	controls echo of the mic
6. ECHO DELAY	(Maximum: 15, Minimum: 0) controls echo delay of the mic
7. FM	controls echo delay of the mic
8. SCORE DISPLAY	controls by 0.1Mhz from FM 104Mhz to 108Mhz decides if score displays on TV 100: Encore! 95~99: Rock/Roll Hall of Fame 90~94: Future Grammy Winner! 85~89: Bravo! 80~84: You're a Superstar! 75~79: Take A Bow 70~74: You'll need an Agent! 60~69: Look out Nashville! 50~59: An "A" for Effort! 40~49: Keep your day job. 30~39: Where's a gong! 0~29: Anybody there?
9. POWERAUTO	The power of the mic will turn off when you haven't used it for 5 minutes.
10. MAIN MIC	controls On/Off of the main mic
11. KEY BEEP	controls the volume of key sound
12. ADD CHIP PIC	only uses additional chip pictures

FUNCTION OF DRUM SOUND TABLE

1. FUNCTION OF DRUM SOUND TABLE

You can change Drum Sound by pressing  while playing music.

You can select Drum Sound by pressing 

DANCE SET
STANDARD SET
POWER SET
ELECTR. SET1
ELECTR. SET2

2. SPECIAL MODE PERFORMANCE

If pressing  when not playing any song, Special Performance Mode will start.

You have to select Special Mode after selecting the songs you want, And then, select 1, 2 or 3.


1. Continuous Play : This will play songs continually in the order from the selected song.
2. Repeat Play: This will play the same song repeatedly.
3. Random Play: This will play any song at random.

1. BATTERY INSERTION


1. Insert bottom of the Rechargeable Lithium-Ion battery first and then press firm at the upper part.



2. Make battery Compartment cover fit at the bottom, and then press the upper part for closure.

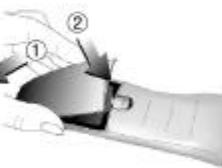

3. Be sure press the button down to hold the battery compartment cover firmly.

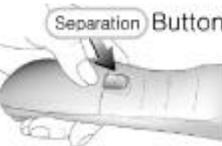


2. BATTERY REMOVAL

1. Turn off the power.



2. Remove the battery compartment cover by sliding button up.

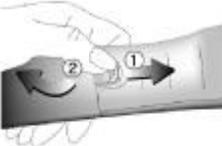

1. INSERT SONG CARTRIDGE

Pull song cartridge cap rubber and then insert song cartridge. Push one more, and it will be separated.



2. METHOD OF BATTERY RECHARGE

1. Plug into the power socket.
2. Insert the Connection part of Battery into the Connection part of Recharger. (See arrows)



3. WARNING

The life of Battery will be shortened when Battery is recharged before it is completely discharged.

SAFETY RULES FOR MANAGING BATTERY	REQUEST FOR USE	SAFEGURARDS	WARRANTY POLICY
<ul style="list-style-type: none"> ◦ Use only A/C Adapter and Battery supplied by manufacturer. <ul style="list-style-type: none"> - Never use the similar articles because it can cause explosion. ◦ Keep A/C Adapter and Battery away from flammable material or high temperature. ◦ Never put other metal objects close to Connection Terminal of Battery because it can cause explosion. ◦ Keep A/C Adapter and Battery clean because they may not be recharged if soiled by alien substances. <ul style="list-style-type: none"> - Keep terminal of Battery clean when not in use for a lengthy time. - Keep Battery in a dry place and at room temperature. ◦ Recharge and keep Battery in the room temperature <ul style="list-style-type: none"> - Battery may not be recharged in a high or cold temperature . ◦ Be certain that Battery is fully discharged before recharging. Failure to do so will results shortening the life of the Battery. 	<h4>ABOUT BATTERY</h4> <ul style="list-style-type: none"> ◦ Remove Battery from microphone when not in use, otherwise the minute current may cause the Battery over discharged. ◦ Suggest you carry an extra Battery when using this product outdoor as it lasts approximately 1-2 hours when used continually. ◦ When travelling, always have Battery recharger with A/C Adapter(Adp1). ◦ Please discard used batteries properly. <h4>ABOUT USING PRODUCT</h4> <ul style="list-style-type: none"> ◦ Using product for an extended time may generate some heat but it won't damage the microphone. ◦ This microphone is directional. Please hold the microphone 2~4 inches from the mouth horizontally. 	<p>SAFEGUARDS (Basic Safety Precautions)</p> <ul style="list-style-type: none"> ◦ Please read the following precautions to prevent danger prior to using this product. <ul style="list-style-type: none"> - Do not give impact to the microphone. - Use Only A/C Adapter or Rechargeable Lithium Battery provided by manufacturer. - Unplug the A/C Adapter and/or remove battery when not in use. - Do not bend or put heavy load on song cartridge. - Static electricity from TV may cause problems in Microphone. - Turn on TV power before connecting Microphone to TV with A/V cable cord. - Do not disassemble the microphone as any of the optional items. 	<p>Nationwide Distributors, Inc. ("Nationwide") warrants this Product, Encore Compact Karaoke ECKS1 (including option items), against defects in material or workmanship as follows:</p> <p>LABOR: For a period of 90 days from the date of purchase, if this Product is determined to be defective in material and/or workmanship, Nationwide will repair or replace the Product, at its option, at no charge. All claims must be received within the 90-Day Warranty period.</p> <p>After the 90-Day Warranty Period, customer is responsible for all costs associated with repair of the Product, including shipping charges.</p> <p>This Warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including but not limited to the antenna and accessories. This Warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Nationwide to service the Product. This warranty is valid only in the United States and Canada.</p> <p>Proof of purchase in the form of a bill of sale or receipted invoice and place of purchase, which is evidence that the unit is within the warranty period, must be presented to obtain warranty service.</p>

WARRANTY POLICY	WARRANTY POLICY	INFORMATION TO USER	INFORMATION TO USER
<p>This Warranty is invalid if the factory-applied model tag has been altered or removed from the Product.</p> <p>REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. NATIONWIDE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.</p> <p>Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights, which vary from state to state.</p> <p>For your convenience, NATIONWIDE DISTRIBUTORS, INC. has established telephone numbers for frequently asked questions:</p>	<p>For service assistance or resolution of a service problem, or for product information or operation, call:</p> <p>Nationwide Distributors, Inc. Toll free 1-(866)-887-7727</p> <p>Website: www.encorekaraoke.com FAQ Page</p> <p>or write to:</p> <p>Nationwide Direct Response Center 30621 Canwood Street Agoura Hills, CA 91301</p>	<p>NOTICES TO USER</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) This device may not cause harmful interference, and (2) this device must accept any interference that may cause undesirable operation.</p> <p>One or more of the following statements may be applicable:</p> <p>FCC WARNING</p> <p>CAUTION : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for Compliance could void the user's authority to operate the device.</p> <p>NOTE</p> <p>This device has been tested and found to comply with the limit for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. This device does not cause harmful interference to radio or television reception.</p>	<p>The user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the device and receiver. - Connect the device to a different circuit from that to which the receiver is connected.

M E M O

www.encorekaraoke.com