

Appendix F. Operating Manual

USER'S GUIDE

MODEL : KWF-901 / KWP-101 / 401

Note : The functions could be changed without notice.

1. Introduction

Congratulations on purchasing your AirData Pager. AirData is one of eights-line, word-messaging pager with following features. A full understanding of what this pager offers begins with reading AirData user's guide. This will provide helpful suggestions for both the first-time and experienced user. A detachable quick reference card on the back cover is included for your convenience. Hope your life will be fruitful with AirData pager.

Check Inside of Gift Box

Open the gift box of AirData pager and you can see following articles. If there are any absence, contact where you bought it.

- Main body
- Cradle
- RS-232C Cable
- 3.5" Floppy Diskette
- User's Guide
- Chain
- 2A Alkaline battery

Control Buttons



Enter Button

- ① Used to read a message
- ② Used to move sub folder from higher folder.
- ③ Used to start application software like phone book, world timer, black jack, etc.
- ④ Used to input character selected in writing menu.
- ⑤ Used to exit after saving in pager settings.



Escape Button

- ① Used to display function menus in the message screens.
- ② Used to escape from application software.
- ③ Used to move higher folder from sub folder.
- ④ Used to escape without saving in pager settings.
- ⑤ Used to delete character inputted in writing menu.



Direction Buttons

Used to move around the display.



Up/down Buttons

Used to scroll characters in writing function and pager settings.

Hot Keys



The pager's backlight automatically illuminates in low-light conditions and automatically turns off when the pager return to the Standby mode. You can manually turn the backlight on and off by pressing and holding these buttons more than one second.
If you do not need automatic illumination function, you can turn this function off in Set Etc. Menu. (See page xx)



Press and hold more than one second from any screen to start PDA mode.




Press and hold more than one second in any screen to change mode of pager. The mode will be changed between audible alert mode, vibration mode and mute mode.

Initial Screen



[Initial display screen]

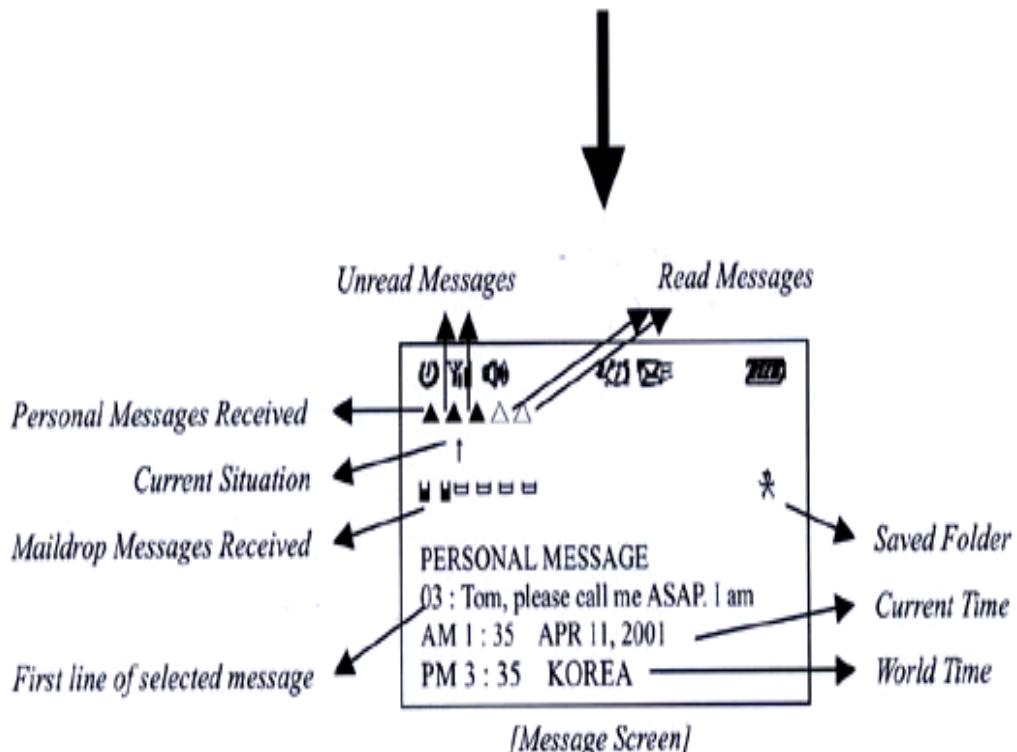

Hard Icons (Pager Indicators)



Powered On Indicator



High-Sensitivity Range Indicator



Mid-Sensitivity Range Indicator



Low-Sensitivity Range Indicator



Out of Range Indicator



Indicate Alarm was settled



Unread Message Indicator



Audible Alert Mode Indicator



Mute Mode Indicator



Vibration Mode Indicator



Scheduled Alarm Indicator



Scheduled plan Indicator



Battery Full Indicator



Battery 3/4 Full Indicator



Battery 1/2 Full Indicator



Battery 1/4 Full Indicator




Battery Low Indicator

3. Paging Mode


Unread Message Indicate

Your pager can have more than one unread message.  in top of screen indicates at least one unread message is in your pager. Your pager was programmed to alert every 10 minutes to remind you there are unread messages. If you do not need remind alert, set REMINDER OFF in Set Etc. menu. (See page xx)

Read Personal Message

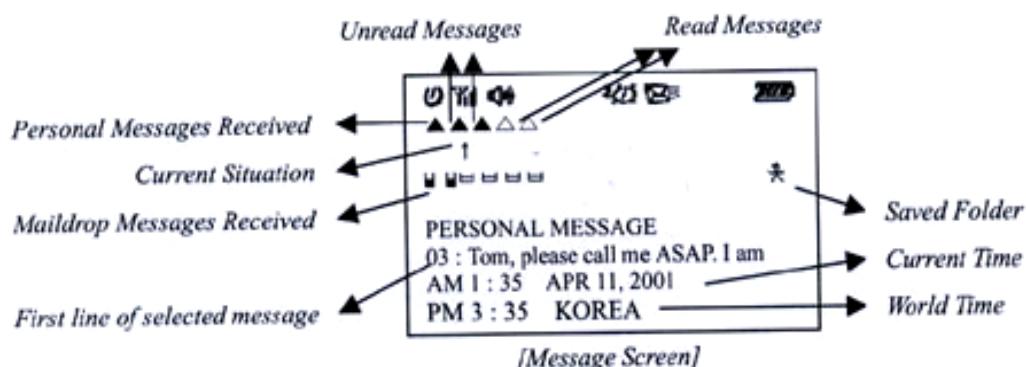


- ① In the *Message Screen*, you can see all status of messages at a glance. There are three kinds of messages – Personal, Maildrop and Saved Messages. In personal messages, '▲' is indicates unread message and '△' means read message and '□' means duplicated message.
- ② Press   to move ↑. ↑ indicates current message selected.
- ③ After select message you want to read, press  to read selected.

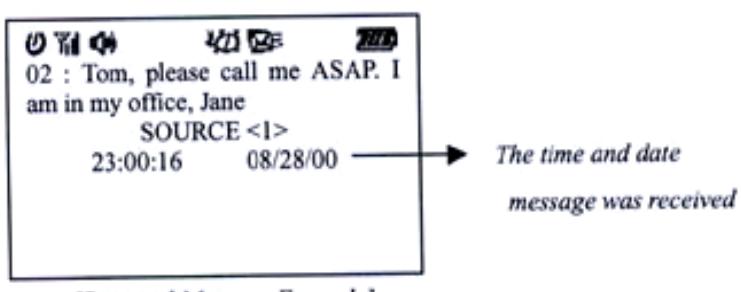

- ④ You can read message with  or . If you press  , message will be moved line-by-line, and if you press , the rest of message will be moved down screen-by-screen.

- ⑤ When you read a message, if you want to read the other personal messages, press   to see next or previous message.
- ⑥ The time and date message was received will be appeared on the end of message. If you press  or  when the time and date message was received were appeared, you can move to *Message Screen*.


Escape

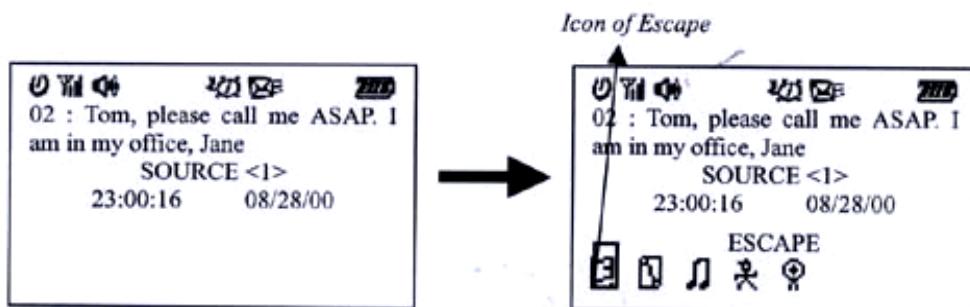

After check the message selected, if you want to move to Message Screen again, you can use ⑥ step of Read Personal Message. And in case the message is long, you can move to Message Screen by using function menu.

- ① Press  to see function menu.
- ② To move to Message Screen, press  when the cursor is on  (When function menu is appeared, always the cursor will be situated on .)
- ③ If you want to go back to message reading screen, press .

Delete Message

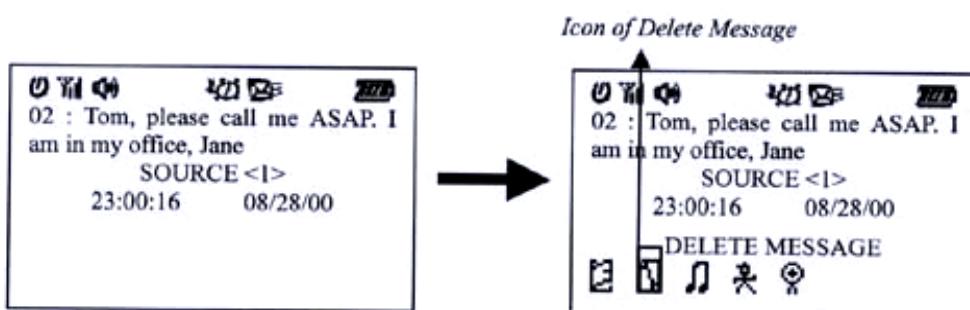

- ① After read message selected, if the message is not needed anymore, press  to see function menu.
- ② Press  when the cursor is on  to delete current message.