 


ROCK-O-RAMA
LIGHTS AND SOUNDS OF
CHRISTMAS®
Instruction Manual
Model No. 60411

Patent Pending

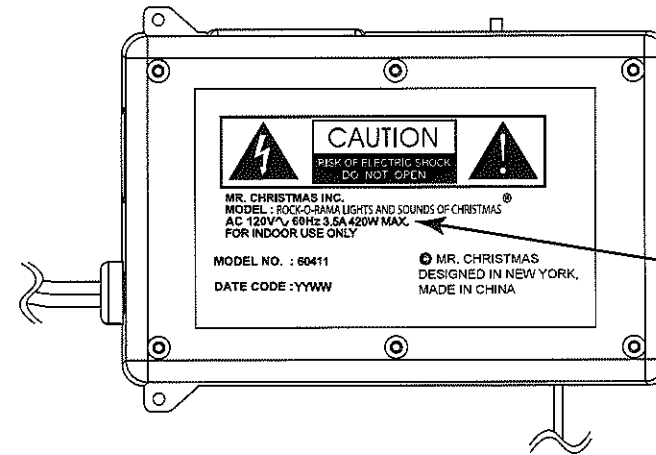

Rating: AC
120V~V 60Hz
420W Max.

WARNING—When using the ROCK-O-RAMA LIGHTS AND SOUNDS OF CHRISTMAS®, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. This product shall be connected directly to a GFCI outlet. The main plug of this product is used as the disconnect device and shall remain readily accessible and operable.

SAFETY RELATED GRAPHICAL SYMBOLS



WARNING—Is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



ELECTRIC SHOCK HAZARD—Intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



AC ONLY

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precaution should always be followed include the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used indoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
5. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire
7. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
8. This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
9. Do not use this product for other than its intended use.
10. Do not hang ornaments or other objects from cord, wire, or light string.
11. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
12. Do not cover the product with cloth, paper or any material not part of the product when in use.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
14. This product employs overload protection (fuse). A brown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional string or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
15. Read and follow all instructions that are on the product or provided with the product.

16. SAVE THESE INSTRUCTIONS.

TABLE OF CONTENT

1.	USE AND CARE INSTRUCTIONS	3
2.	USER SERVICING INSTRUCTIONS	3
3.	RATINGS	4
4.	DESCRIPTION	4
5.	INSTALLATION	4
6.	OPERATION	5
7.	SONG LIST	8
8.	TROUBLE SHOOTING	9
9.	WARRANTY	10
10.	FEDERAL COMMUNICATION COMMISSION CODE, PART	
	15	10

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live tree in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, crack in the lampholders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not to use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

Your ROCK-O-RAMA LIGHTS AND SOUNDS OF CHRISTMAS® comes with spare fuses to replace burn-out fuses located in the plug. Be sure to replace a burnt-out fuse with fuse of the same rating : 5A 125V UL listed fuse.

CAUTION: BEFORE REPLACING, ALWAYS DISCONNECT THE POWER SUPPLY CORD FROM THE POWER SOURCE

RISK OF FIRE. Do not replace attachment plug. Contains safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Turn fuseholder over to remove fuse.
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product).
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.



CONNECTING LIGHT STRINGS-MAXIMUM CAPACITY IS 420 WATTS

If connecting to a light string that does not have a Wattage (W) rating, calculate the wattage as follows: Multiply the current (___ A) which is on the flag-type tag by 120.

For Example: Light string is rated 120V,60Hz, 0.2 Amps. $0.2 \times 120 = 24$ Watts Add the wattage of each light string together for a total of 420 Watts or less. (Do not exceed 420 Watts.)

RATINGS

Model 60411

Control Box Rating: 120VAC, 60Hz, 3.5A, 420W

ROCK-O-RAMA Rating: "C" Cell X 3, 4.5V

DESCRIPTION

Thank you for purchasing the ROCK-O-RAMA LIGHTS AND SOUNDS OF CHRISTMAS®.

The maximum capacity is 420 watts

WARNING: DO NOT CONNECT LIGHTS STRINGS OR SETS IN EXCESS OF THE ABOVE CAPACITY.

INSTALLATION

Note: If you have not yet assembled your lighting, it may be useful to check your light strings before assembly to identify missing/faulty bulbs.

BEFORE INSTALLING : Consider how to best set-up your light show...

Capacity

 
The ROCK-O-RAMA LIGHTS AND SOUNDS OF CHRISTMAS® has a capacity of 420 Watts. Please refer to the packaging, instruction manual or the warning tags on your holiday lighting for the exact wattage of each item being plugged into the unit. In order not to exceed the 420 watts, you must add up the wattage of each item being plugged into the unit to attain the total wattage. See the "connecting light strings" section on page 3.

WARNING: DO NOT EXCEED 420 WATTS

OPERATION

1. Turn on the ROCK-O-RAMA power by sliding the switch on the back of the ROCK-O-RAMA to "18 SONG CYCLE" position.

PLAY ONE SONG /
OFF / 18 SONG
CYCLE

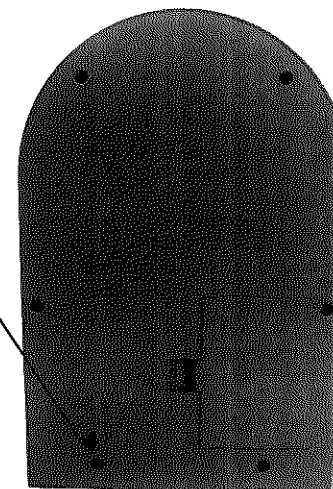

2. Plug your holiday lighting into the outlet provided on the control box (MAX. 420 WATTS).

3. Plug the control box line cord into a GFCI equipped outlet.

4. The ROCK-O-RAMA light will come on indicating your unit and the light string plugged in are working.

5. The mode selection switch allows you to choose different functions. (See FIG I)

OPERATION (continued)

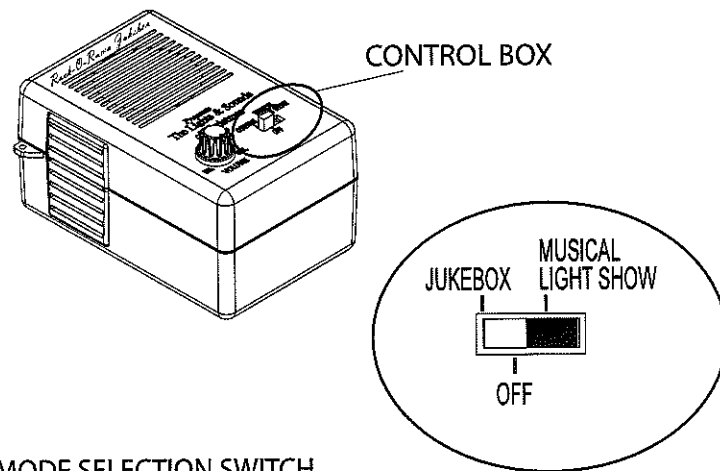 


FIG I: MODE SELECTION SWITCH

MUSICAL LIGHT SHOW : Move the switch to the " MUSICAL LIGHT SHOW" position on the control box . Music will start randomly and will continue playing and the light string will flash. Adjust the music volume by turning the volume knob on the control box clockwise or anticlockwise.

JUKEBOX : Switch to the "JUKEBOX", position on the control box. Lights will turn on and be steady. Unit is waiting for the song selection command from the ROCK-O-RAMA.

6. Turn the volume control to adjust music loudness.

OPERATION (continued)

Turn on the power by sliding the switch on the back of the ROCK-O-RAMA to the "18 SONG CYCLE" position.

Press a select song button on the front of the ROCK-O-RAMA and the lighting will turn "ON" until the selected song is finished. The control box will start playing the selected song and the light string connected to the control box will flash. The control box will continuously play 18 songs then stop.

Change the song playing by pressing the song button on the front panel of the ROCK-O-RAMA. Stop playing by pressing the "POWER OFF" button on the right hand bottom corner.

When the Rock-O-RAMA is playing, Press the "LIGHTS STEADY ON " button once, the lighting will change to steady on, and press again the lights will be steady on.

Turn the switch on the back of the unit to the "PLAY ONE SONG" position and the selected song will play after the song button is pressed. The music will stop after the song is finished.

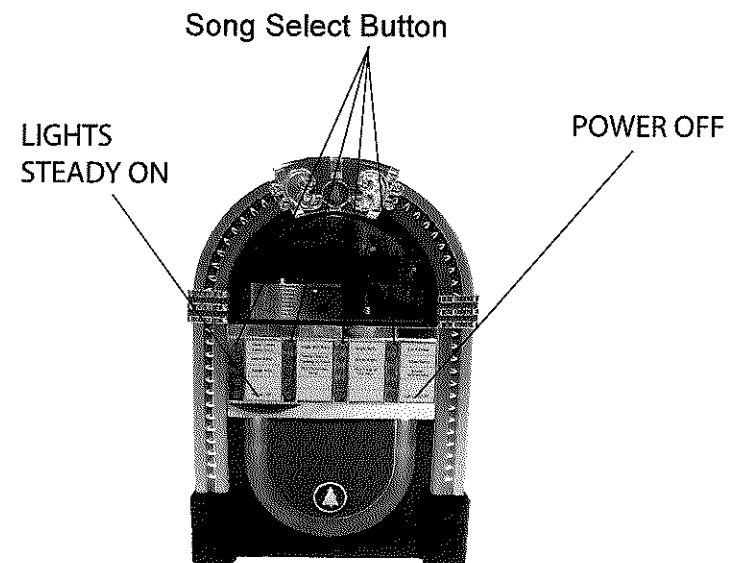 


FIG II

FUNCTIONS	CONTROL BOX SWITCHING POSITION	ROCK-O-RAMA
Select the song to play with flashing light effect	"JUKEBOX" position	Power switch to "18 SONG CYCLE" position, then press the song name button.
Stop playing song	"JUKEBOX" position	Power switch to "18 SONG CYCLE" position, then press the "POWER OFF" button. Song will stop, light will go "OFF"
Turn the light string ON/OFF (only work when the song is not being played)	"JUKEBOX" position	Power switch to "18 SONG CYCLE" position, then press "LIGHTS STEADY ON" button on the unit to turn the light string ON/OFF.
Song is continuously played with light effect (ROCK-O-RAMA no remote function)	"MUSICAL LIGHT SHOW" position	

SONG LIST

Frosty the Snowman	Santa Baby
Jingle Bells	Silent Night
12 Days of Christmas	Little Drummer Boy
Here Comes Santa Claus	Up on the Housetop
Deck the Halls	I Saw Mommy Kissing Santa Claus
This Time of the Year	Silver Bells
Jingle Bell Rock	Joy to the World
Carol of the Bells	Winter Wonderland
It's Beginning to Look a Lot Like Christmas	Have Yourself a Merry Little Christmas

TROUBLESHOOTING

Your ROCK-O-RAMA LIGHTS AND SOUNDS OF CHRISTMAS ® has been designed to give many seasons of trouble free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

PROBLEM	LIKELY CAUSE	SOLUTION
No lighting No music	No power	Make sure the unit plug is plugged into a working outlet and the output plug is properly plugged into the jack.
	Overloading caused by connecting light strings or decorative lighting outfits over 420W	Replace the fuse (follow the procedure as outlined in the fuse replacement section in this manual).
	Unit not activated	Move the power switch at the back of the ROCK-O-RAMA to "18 SONG CYCLE" and the switch on control box to either "JUKEBOX" or "MUSICAL LIGHT SHOW" press a song select button.
	Exhausted Batteries	Replace with new "C" Batteries
	Unit not being operated properly	See operation section, pages 5-7
No lighting but music plays	Faulty light string/bulbs	Checking light string for burnt out bulbs Suggestion : Check your light strings before installation
		Check your fuse in light string plug, and replace if damaged

For more information about this product. Please call 1-800-467-9627, or visit our website www.mrchristmas.com. We will be happy to help you.

WARRANTY

Mr. Christmas warrants to the original consumer/purchaser of the REMOTE CONTROL LIGHTS AND SOUNDS OF CHRISTMAS® that it will be free from defects in material and workmanship for a period of 90 days from the date of purchase. Any liability of Mr. Christmas under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser and a description of the defect. Please call warranty service at 1-800-467-9627 for a claim number and instructions on how and where to return the item. Mr. Christmas shall not be liable for any other damages or loss. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the limitation or exclusion may not be applicable to certain consumers/purchasers. This warranty does not cover defects caused by damage in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer/purchaser specific legal rights. The consumer/purchaser may be also have other rights which vary from state to state.

Federal Communications Commission Code, Part 15 :

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void user authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference. And
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada..

ROCK-O-RAMA LIGHTS AND SOUNDS OF CHRISTMAS® Manual de Instrucciones Modelo No. 60411

Patent Pending