


FCC ID PKJSATNOVA

-Operational description-

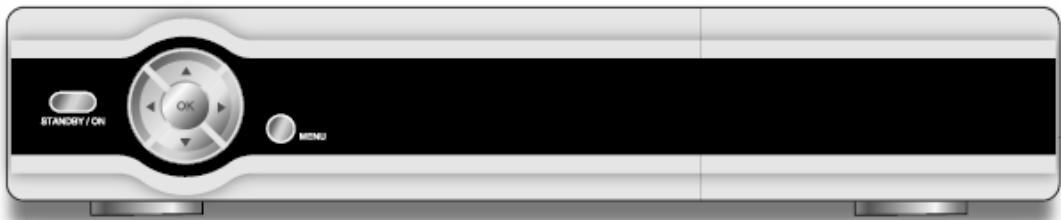

STANDBY / ON

Turn the power on/off.

MENU


Shows the menu application.

Channel ▲ ▼

Change channel, move menu, or input frequency value.

Volume ◀ ▶

Control volume, change item on menu or input frequency value.

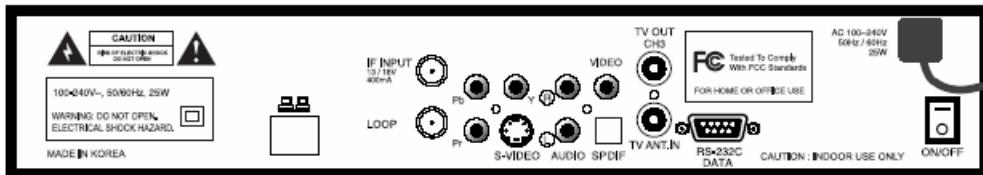

IP Connection

Network interface

IF INPUT

It receives signals from the LNB in the range of 950 ~ 2150MHz. Connect a satellite dish to DIGITAL.

LOOP

It sends signal to the another receiver.

YPbPr

Component analog video signal.

S-Video

It provides high definition screen.

AUDIO

It provides stereo audio output. Connect the audio on TV to AUDIO with RCA cable.

VIDEO

It provides composite video output. Connect the Video on TV to VIDEO with RCA cable.

SPDIF

Output for connection to a digital amplifier

TV OUT CH3

It provides a modulated audio and video from the receiver. Connect the TV/VCR on TV to TV/VCR with the RF cable.

TV ANT IN

The signal supplied to this connector from a TV antenna will be sent to TV antenna output. Connect a TV antenna to TV ANT IN.

RS-232C DATA

It receives data by connecting to PC for software upgrading. Connect with RS-232C cable a PC and receiver.

ON/OFF

The switch is to turn on or off the main power of the receiver mechanically.