 
 

1. BEGINNING

TM1700 (ALUMINUM) : Main Body

FRONT

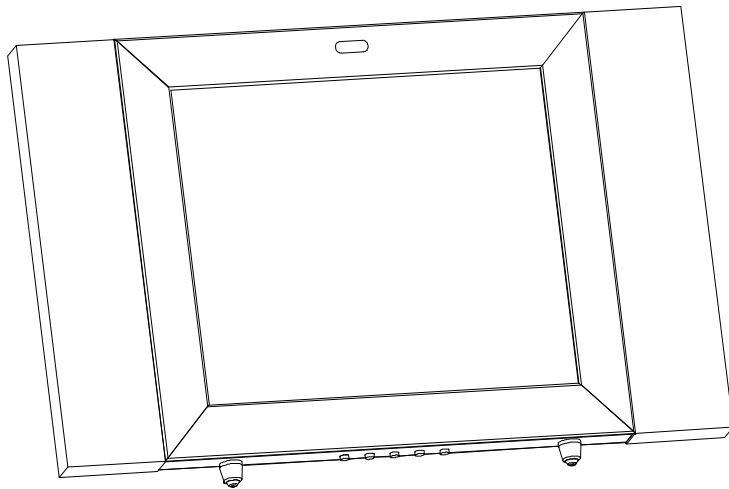

 
REAR

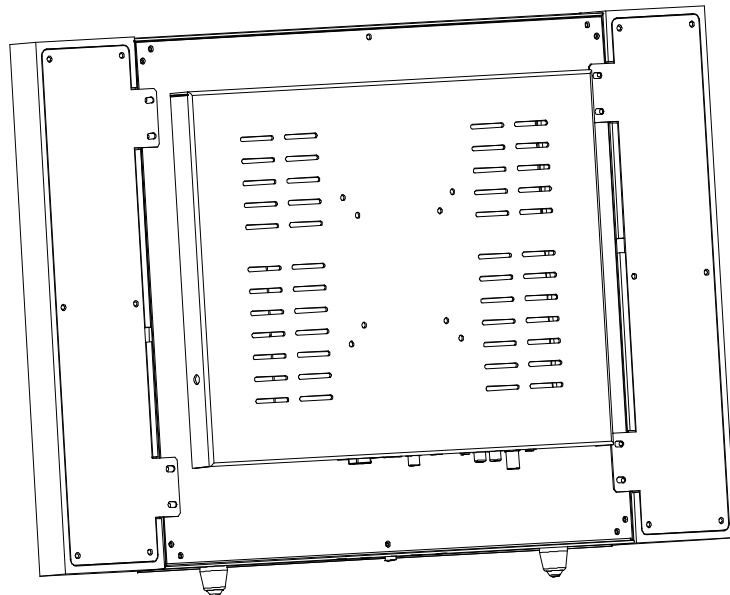


2.

1) Preparation for Installation


- Open box and check the Package list of accessories

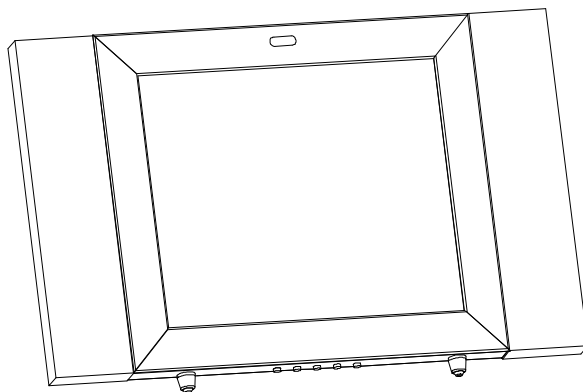


TM1700(ALUMINUM)
DISPLAY

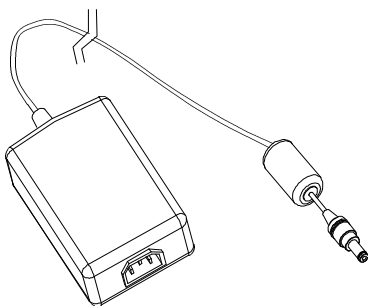 


POWER SUPPLY ADAPTOR

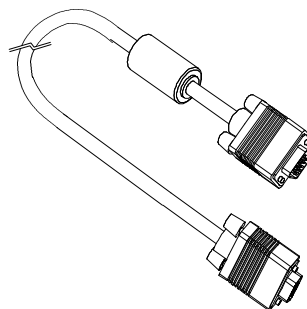 

MONITOR CABLE

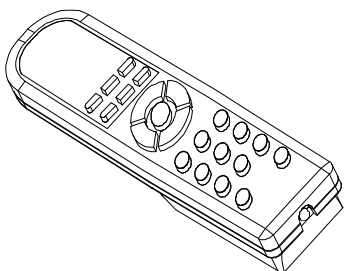 


MULTI-FUNCTION REMOTE CONTROL

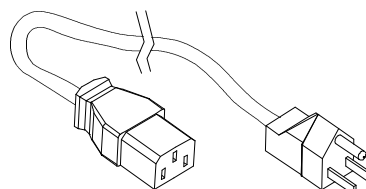 

PWER CABLE

3.

 1) Control buttons(front)

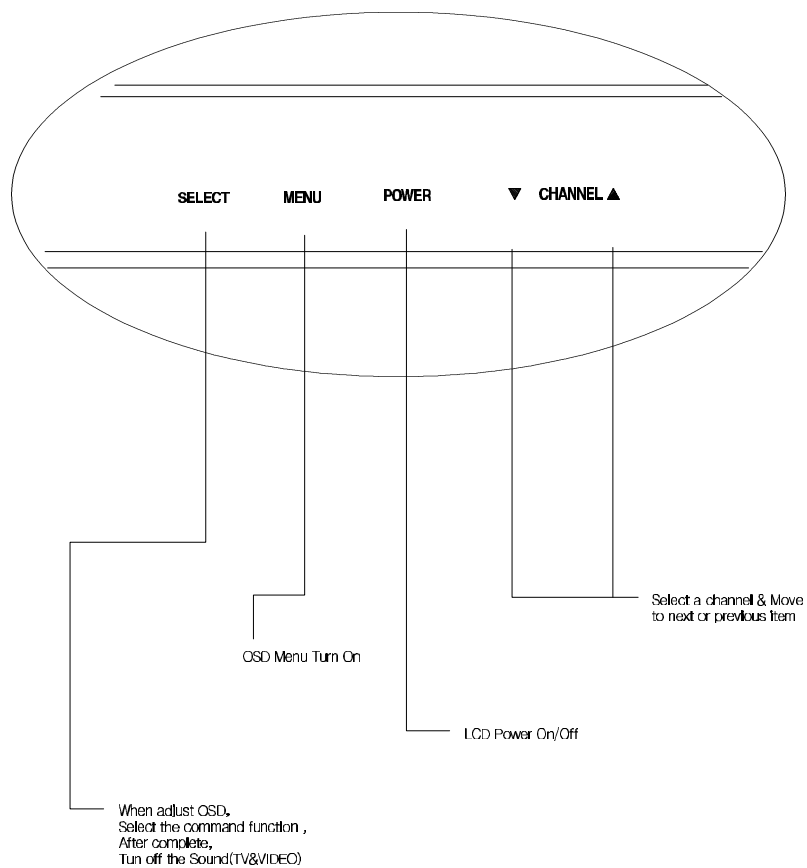

* The image of manual OSD may differ from the virtual image.

OSD(On Screen Display)

Basic control for OSD

—OSD Display Control

If you need to adjust the displaying, please adjust as the followings,

1. When you press the [MENU] button, OSD menu will appear on the monitor.
 2. You can select the icon with the [CHANNEL(▲/▼)] buttons.
 3. Press [SELECT/MUTE] button under the state of the selected icon.
 4. You can control the condition using [CHANNEL(▲/▼)] buttons.
 5. Command a function by press [SELECT/MUTE] buttons.
 6. If you press [MENU] button, OSD menu disappear from the screen.
- > If you want to move from the low to the high category, press [MENU] button.

 
Selection of TM1700 – Select the input mode.

-Conversion from Monitor mode to TV&Video mode

- You can select the PC Monitor, Tv and Video by using [MENU] button.

By pressing [MENU] button, there appears menu as the following.


1.The arrow(▶) is indicate the present set-up condition. Make the cursor positioning at source by pressing [▲][▼] buttons and press [SELECT] button.

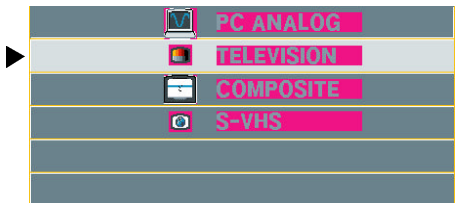


2.If you want to select TV, please make position the arrow on TV and then press [SELECT] button.

3. In the Video, there are COMPOSITE and S-VHS mode. So that it shall be selected the way suitable to surrounding apparatus.

 - Convert from TV&VIDEO Mode to Monitor Mode.

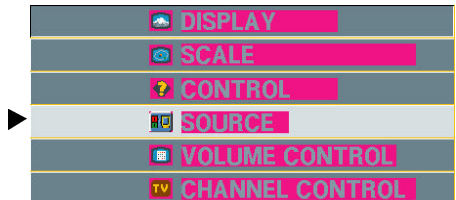

 1. Please made position the cursor on the {SOURCE} with pressing the [▲][▼] buttons, and pressing the [SELECT] button. There appears OSD Menu as like " Converting from TV mode to VIDEO mode." Making the position the cursor PC ANALOG and press [SELECT] button.

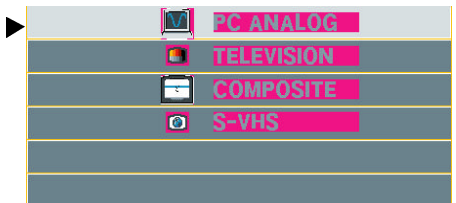

Basic form of OSD

The TM1700 DISPLAY having two kinds of the OSD as the Monitor and TV&VIDEO.



(OSD for Monitor Mode)

(OSD for TV, VIDEO Mode)

The position of beginning cursor in OSD of monitor is adjusted on the contrast display. Otherwise, the current resolution shall be shown in the bottom of the OSD. The position of beginning cursor in OSD of the TV and VIDEO mode is adjusted on the [SOURCE].

- SUGGESTIONS -

Just pushing select button, it acts as the function of removal sound and if you want to cancel the MUTE function, press the [SEELCT] button twice.



2) Adjusting OSD of PC Monitor

Control DISPLAY

- Control BRIGHTNESS

In the case of control BRIGHTNESS of full monitor, please adjust according to following procedure.

1. You can see the OSD menu, by using [MENU] button. Select the [DISPLAY], and then press the [SELECT].

2. Select the BRIGHTNESS by using [▲][▼] buttons, and then press [SELECT].

3. Control BRIGHTNESS by [▲][▼] buttons.



* Do the control the [CONTRAST],[PHASE] and [FREQUENCY], do as the same way prscribed above.

 
- Control for SHARPNESS

It shall be applied for control the distinction of display.

1. Press [MENU]. Select the [DISPLAY] and then press [SELECT] button.

2. Select the [SHARPNESS] by using [▲][▼] buttons and then press [SELECT] button.

3. Select the distinction level you want.

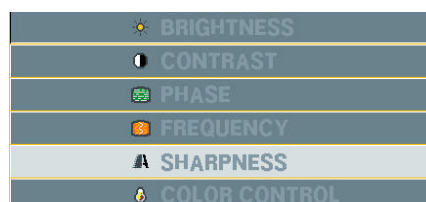


-CONTROL FOR COLOR

If you need to adjust the density of color, please adjust as the followings ;

1. Press [MENU]. Select the [DISPLAY] and then press [SELECT].

 
2. Select the [COLOR] by using [▲] [▼] button and then press [SELECT].

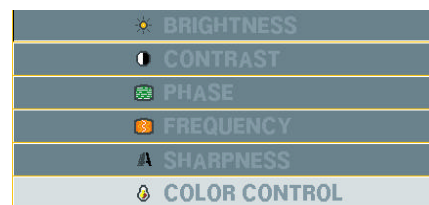

3. Select the [RED] by using [▲] [▼] buttons.



 4. Control the level by using [▲] [▼] buttons.

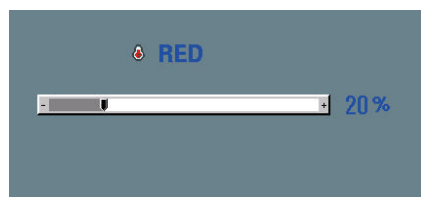

*** Control the GREEN, and BLUE, do as the same way prescribed above.**

 
Changing position of OSD

- Changing position of full screen


Please adjust according to the followings, when you make to change the position of screen of OSD. If you want to move your position of full screen,

1. Press [MENU]. Select the [POSITION&SCALING] and then press [SELECT].

2. Make the cursor positioning at [H-POSITION] and then press [SELECT].

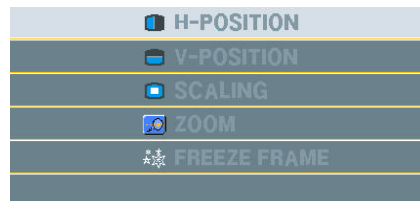

 3. You can move horizontally by using [▼] [▲] buttons.

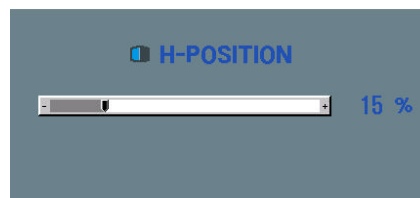


4. For moving to main OSD screen, please press [MENU] button. To exit OSD screen, please press more the [MENU] button.

The function of [SCALING] works control magnification of screen.

2. Make the cursor positioning at [SCALING] by using [▲][▼] buttons and then press [SELECT].

3. Select the function by using [$\blacktriangle$]
[$\blacktriangledown$] buttons and then press [SELECT].

 
- H-POSITION
- V-POSITION
- SCALING
- ZOOM
- FREEZE FRAME

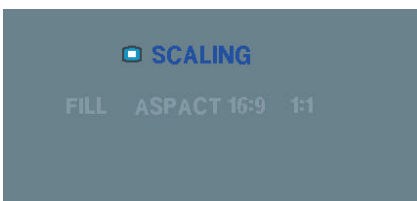

It shall be applied for scale up and down the screen of monitor.

2. Make the cursor positioning at [ZOOM] by using [▲][▼] buttons and then press [SELECT].

 - H-POSITION
- V-POSITION
- SCALING
- ZOOM
- FREEZE FRAME

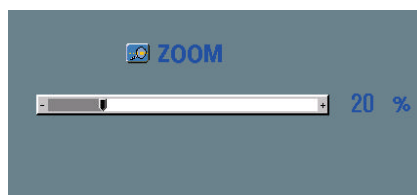


- FUNCTION OF FREEZE


It shall be applied to stop the favorable portion of the screen supplied by media.

1. Press [MENU]. Select the [POSITION&SCALING] and then press [SELECT].

 2. Make the cursor positioning at [FREEZE FRAME] by using [▲] [▼] buttons and then press [SELECT].

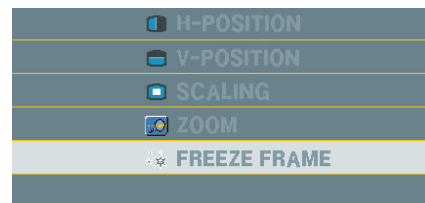

 3. If you select the [ON], screen will be stop.

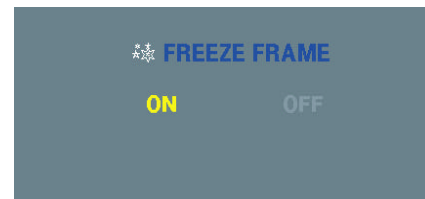

* It shall be applied to stop the favorable portion of the screen supplied by media.

 
4. Press the [MENU] continuously for moving to main OSD screen or exit OSD screen.

- Setting up the OSD BACKGROUND


It shall be applied to control the background of OSD menu.

1. Press [MENU]. Select the [CONTROL] and then press [SELECT].

2. Make the cursor positioning at [OSD BACKGROUND] by using [▲][▼] buttons and then press [SELECT].

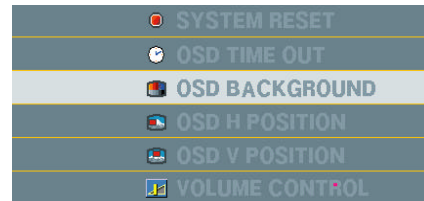

 3. Select the what you want between [OPAQUE] or [TRANSLUCENT].

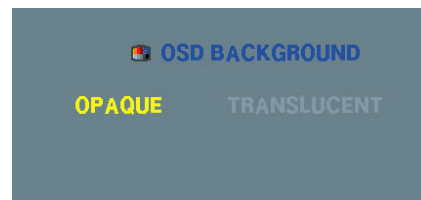


- Changing position of OSD


Please adjust according to the followings when you make to change the position of menu screen of OSD.

1. Press [MENU]. Select the [CONTROL] and then press [SELECT].

 2. Make the cursor positioning at [H-POSITION] by using [▲][▼] buttons and then press [SELECT].

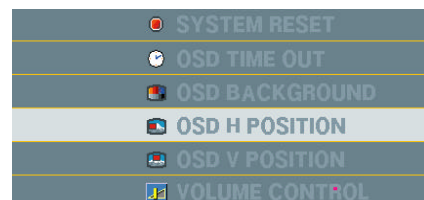


 3. You can move horizontally by using [▲][▼] buttons.

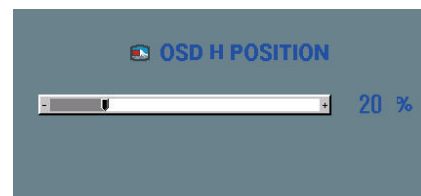

4. For moving to main OSD screen, please press [MENU] button. To exit OSD screen, please press more the [MENU] button.

 5. To move vertically the OSD, select the [V-POSITION] and do as the same way prescribed above.




- Setting up the VOLNME


It shall be applied to control the speaker sound.

1. Press [MENU]. Select the [CONTROL] and then press [SELECT].

 2. Make the cursor positioning at [VOLUME CONTROL] by using [▲] [▼] buttons and then press [SELECT].

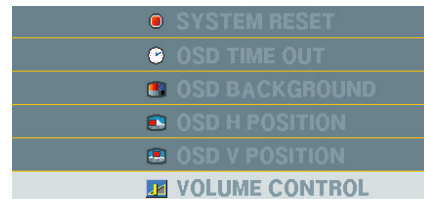

 
3. You can control the volume by using [▲] [▼] buttons.

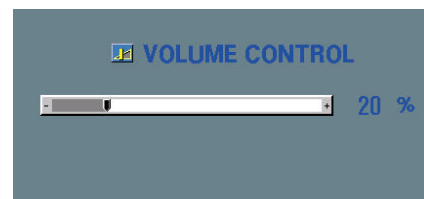



- Setting up AUTO CONFIG

It shall be applied to control the position and display quality by automatically.

 1. Press [MENU]. Select the [AUTO CONFIG] by using [▲] [▼] button and then press [SELECT].

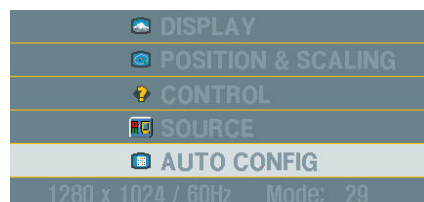

  2. Select the [YES] or [NO].

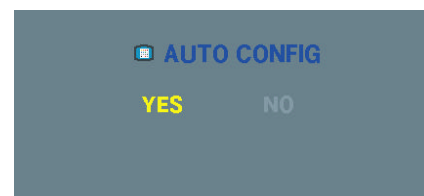

3) VIDEO MODE AND OSD CONTROL WHILE

DISPLAY Control

- COLOR Control

 
It shall be applied to control the density of color.

1. Press [MENU]. Select the [CONTROL] and then press [SELECT].

2. Make the cursor positioning at [COLOR] by using [▲] [▼] buttons and then press [SELECT].



3. You can control density of color by using [▲] [▼] buttons.

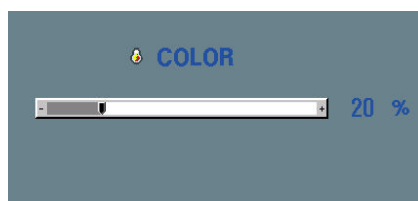

- HUE Control

It shall be applied to control the hue.

1. Press [MENU], Select the [CONTROL] and then press [SELECT]. Make the cursor positioning at [HUE] by [▲] [▼] buttons and then press [SELECT].



2. You can control the [HUE] by using [▲] [▼] buttons.

 


4) OSD control related TV Mode


Selection of the TV receiving signals

- Conversion between the AIR TV and CABLE TV

1. Press [MENU]. Select the [AIR/CABLE] and then press [SELECT].

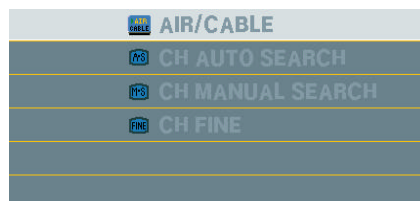

 2. You can select the broadcast system by using [▲] [▼] buttons.

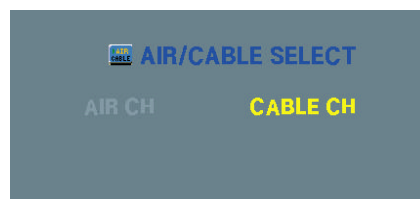

CONTROLLING TV CHANNEL

- Selection Channel

 
Selection channel by press [▲] [▼] button in the TV mode. However, while the OSD screen turn-on, it does not work that shall be controlled in the state of none menu screen of OSD.

- Auto channel searching and Make to memorize.

1. Press [MENU]. Select the [CHANNEL CONTROL] and then press [SELECT].



2. It state auto searching appearing the word "WAITING".

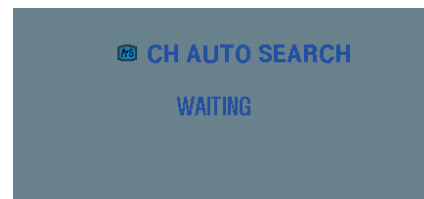


3. Completing the searching, there appears the word "FINISH".

3. After completing auto searching of channel, to delete unnecessary channels and to input favorable channels, do manually ADD/DELETE of channel.

- ADD/DELETE the objected channels.

To ADD/DELETE the objected channel selectively, please adjust as followings ;

 1. Press [MENU]. Select the [CHANNEL CONTROL] and then press [SELECT].

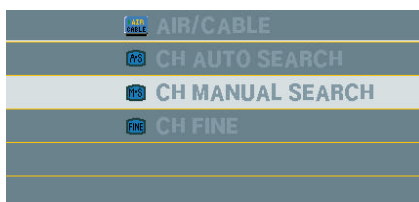


2. It's available to ADD and DELETE manually when illustrated as right.

[NEXT CH]: Next channel

[SAVE]: Add the channel

 [DELETE]: Delete the channel

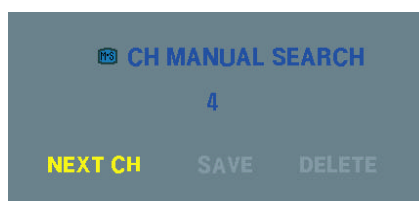


3. To move next channel, select the [NEXT CH] by using [▲] [▼] buttons.

4. To ADD/DELETE the channel, make the cursor positioning at [SAVE] or [DELETE].

CH FINE Function

It's the function to be set fine the screen when there is on-air the inputted broadcasting.

 1. Press [MENU]. Select the [CHANNEL CONTROL] and then press [SELECT].

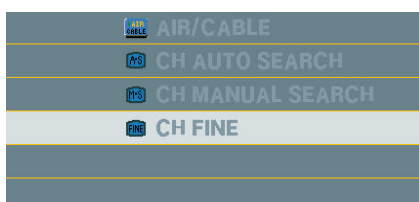

2. Make the cursor positioning at [CH FINE], and press [SELECT].

3. Select the favorite level by using [▲] [▼] buttons.



SAMPLE OF WARNING STATEMENT TO BE INCLUDED IN THE INSTRUCTION
MANUAL FOR CLASS B EQUIPMENT

FCC NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.