



Block diagram from Transmitter and ETACS

A. TRANSMITTER

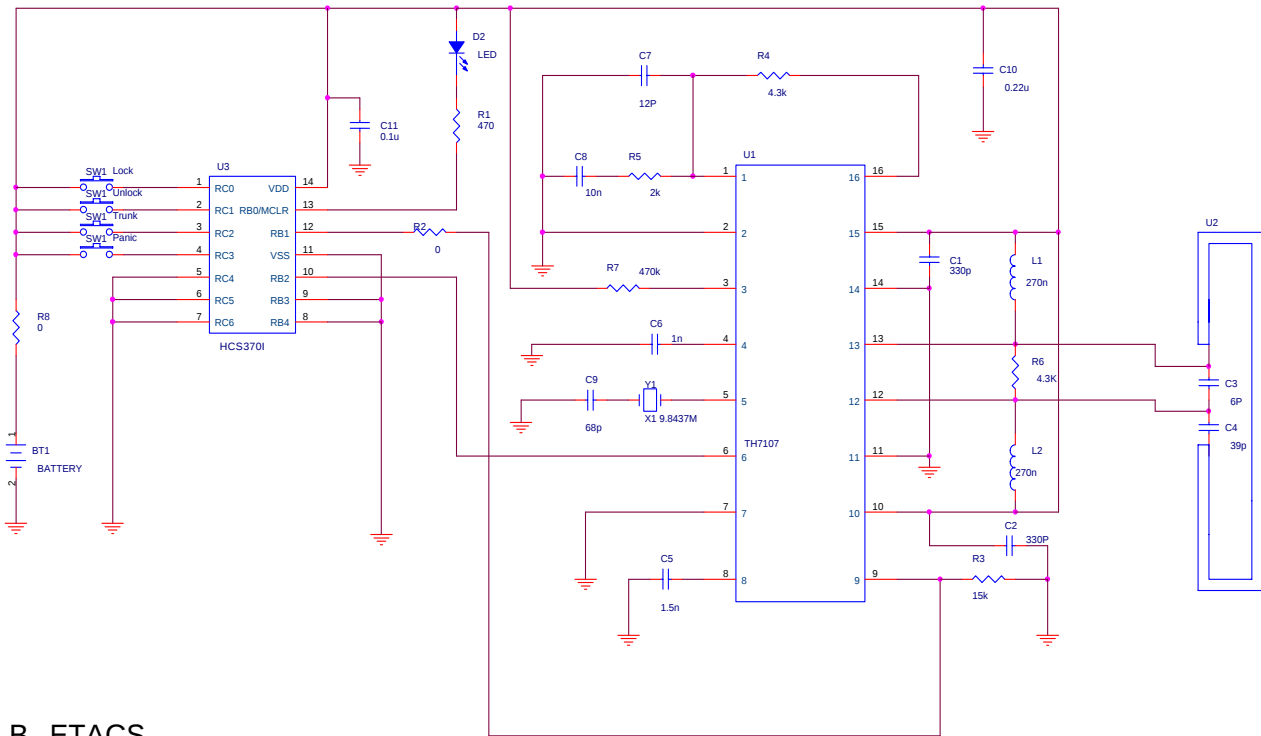

B. ETACS

A) RF PART

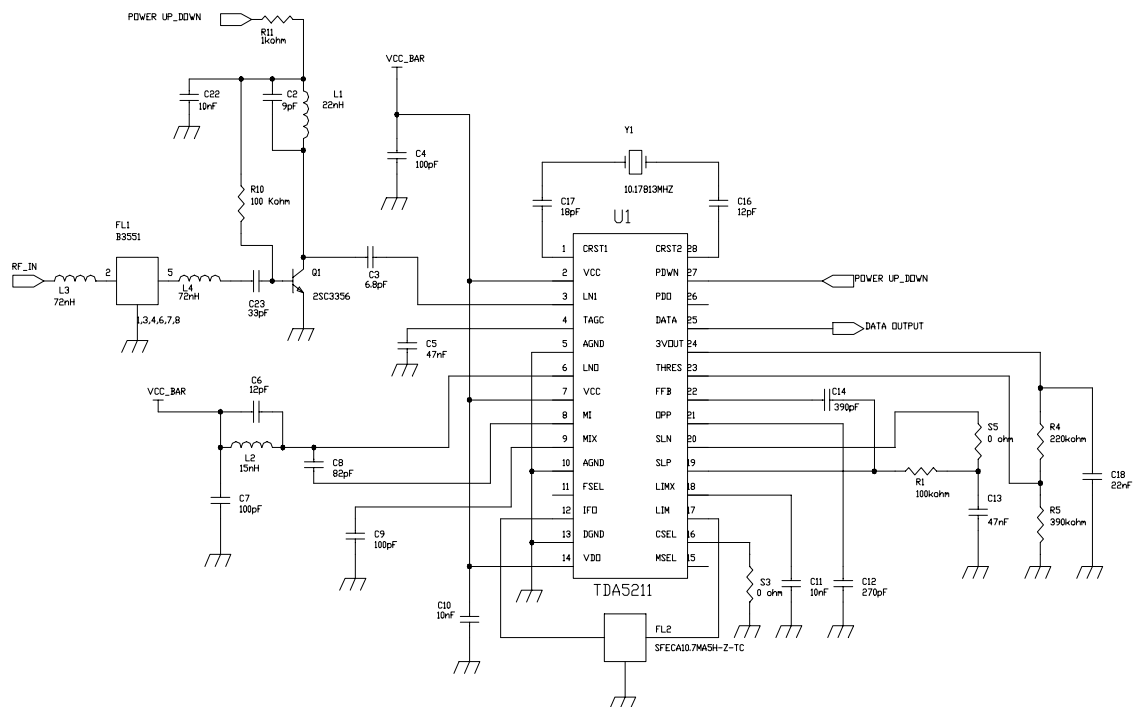

Block diagram from Transmitter and ETACS

C) connector

* CONNECTOR : KET MG641483 - 14P

3o	3m	3k			3e	3c	3a
3p	3n	3l	3j	3h	3f	3d	3b

3a : RR.FOG RELAY
 3b : Frt. WIND SHIELD RELAY
 3c : S/BELT LAMP
 3d : KEY ILLUMI LAMP
 3e : TAIL GATE RELAY
 3f : GND
 3h : TAIL GATE WARNING LAMP
 3j : ROOM LAMP
 3k : DOOR LOCK B+
 3l : ALT "L"
 3m : DRV. UNLOCK RELAY (US ONLY)
 3n : SUPER LOCK (ONLY)
 3o : LOCK RELAY
 3p : UNLOCK RELAY

* CONNECTOR : KET MG641872 - 36P

2y	2w	2u	2s	2q				2i	2g	2e	2c	2a	1q	1o	1m			1e	1c	1a	
2z	2x	2v	2t	2r	2p	2n	2l	2j	2h	2f	2d	2b	1r	1p	1n	1l	1j	1h	1f	1d	1b

1a : RKE SETTING	2a : TNS SW
1b : B+	2b : RR.FOG SW
1c : ACC SW	Drv.DOOR ACT SW(US ONLY)
1d : IG1 SW	2c : Drv. DOOR ACT SW
1e : KEYLESS SW	Pass DOOR ACT SW (US ONLY)
1f : CRASH (Air Bag)	2d : Frt. WIND SHIELD SW
1h : SPEED	2e : Seat Belt SW
1j : 4- DOOR SW	2f : HEAD LAMP SW
1l : Frt. RH DOOR SW	2g : MAIN DOOR SW (LOCK)
1m : Frt.LH DOOR SW	2h : MAIN DOOR SW (UNLOCK)
1n : VAS	2i : Drv. DOOR or PASS DOOR KEY SW (LOCK)
1o : TAIL GATE SW	2j : Drv.DOOR or PASS DOOR KEY SW (UNLOCK)
1p : TAIL GATE GLASS SW	2l : P/WINDOW AUTO
1q : RR.DEF. SW	2n : P/WINDOW UP
1r : CLUSTER SW (ONLY)	2p : P/WINDOW DOWN
PARKING SW (ONLY)	2q : HORN RELAY
	2r : HAZARD RELAY
	2s : RR.DEF. RELAY
	2t : P/WINDOW RELAY
	2u : WIPER RELAY
	2v : INT VOL.
	2w : INT SW
	2x : WASHER SW
	2y : TNS RELAY
	2z : GND