



**INTERNET TABLET**

**USER MANUAL**

# Content

Preface.....	3
Copyright .....	3
Control information .....	3
FCC Class B radio frequency interference statement.....	4
Recycling information .....	5
Prevent Hearing Impairment .....	5
Precautions.....	6
1. Know Your D2 Pad .....	8
1.1 Product View.....	8
2. First Use of D2 Pad.....	9
2.1 Managing and Charging the Battery .....	9
2.2 Turning On/Off.....	10
2.3 Connecting to the PC .....	11
3. The Home Screen.....	11
3.1 Home Screen.....	11
3.2 Wallpapers .....	13
3.3 Status Bar.....	14
3.4 Using the Touch Screen .....	14

3.5 Application Menu.....	15
4. Basic Settings .....	16
4.1 Wi-Fi and Network.....	17
4.2 Device .....	19
4.2.1 Sound .....	19
4.2.2 Display.....	20
4.3 Personal .....	20
4.3.1 Accounts and Sync .....	21
4.3.2 Location Services.....	21
4.3.3 Security .....	22
4.3.4 Language and Input Method.....	23
4.3.5 Backup and Reset.....	24
4.4 System.....	25
4.4.1 Date and Time .....	25
4.4.2 Accessibility.....	25
4.4.3 About the Tablet .....	26
1 Year Limited Warranty.....	27

## **Preface**

### **Copyright**

All rights reserved. This manual is protected by copyright and distributed under licenses restricting its use, replication and distribution. No part of this manual may be reproduced in any form without the prior written consent from D2. The product described in this manual may include copyrighted software of D2 (or other third parties). D2 (or other third parties) preserves the exclusive rights for copyrighted software, such as the right to distribute or reproduce the copyrighted software. Accordingly, and to the extent allowed by applicable law, any copyrighted software contained in the product described herein shall not be distributed, modified, reverse engineered, or reproduced in any manner without the prior written consent of D2 (or of other third parties).

All other product names, trademarks or logos mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective owners.

### **Control Information**

This device is in accordance with the requirements in Radio & Telecommunications Terminal Equipment Directive 1995/5/EC.

This device complies with the requirements in EMC Electromagnetic Compatibility Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.\*

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without RF striction.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE 2:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## **Recycling Information**

D2 values the importance of our environmental policy, and strongly believes in the protection of our Earth by properly disposing and recycling industrial technological instruments that have exceeded service life. These devices contain recyclable materials, which can be re-incorporated to new material after decomposition. In contrast, other materials are classified as dangerous and toxic substances. We highly recommend all users contact the relevant institutions based on the information we provide to recycle this product.

## **Prevent Hearing Impairment**

Caution: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.

## **Precautions**

This manual contains important information regarding safety measures and proper use of the product. To avoid accident, please be sure to read the manual carefully prior to using the product.

Keep the product away from high temperature, moisture or dust.

Do not expose the product to high temperature, especially in a window-closed vehicle during summer.

Avoid drop or strong collision of the product or heavy vibration of the TFT screen, as it may cause damage or abnormal display of the TFT screen.

Please choose appropriate volume. It is not recommended to use earphones in high volume. If ringing occurs in the ear, please lower the volume or stop using the device.

Please charge under the following circumstances:

- A. The battery icon indicates no power.
- B. The system automatically shuts down, and immediately shuts down again after restart.
- C. The operating button does not respond.
- D. The red icon is displayed in the lower right corner of the product.

Note: This product cannot be used with any unauthorized charger; otherwise it may burn the product, which is not covered by warranty. For any additional original charger, please contact customer service.

The Li-ion battery cells in the battery pack are not user serviceable.

When battery level is low, be sure to connect the power plug before formatting the D2 Pad or uploading/downloading applications to prevent system error.

D2 shall not be held liable for any loss of data caused by damage or repair of the product or any other reason. Please operate the product properly following the user manual's guidelines.

Do not disassemble the product. Do not use alcohol, thinner or benzene to clean the surface of the product.

Do not operate device where the use of electronic equipment is prohibited, such as on airplanes.

To avoid any accidents, please do not use the product when driving or walking on the street.

USB connection is for data transfer only.

\*As the product may undergo modifications and improvements, product specifications and design are subject to change without prior notice.

**NOTE:** Pictures in this manual are for reference only.

# 1. Know Your D2 Pad

## 1.1 Product View


No.	Item	Description
1	<b>Touch Screen</b>	Displays the user interface and interacts with touch input.
2	<b>Camera</b>	For video-chatting and/or taking photos.
3	<b>Volume Keys</b>	Press left key to lower volume; right key to raise volume.
4	<b>Power Key</b>	<ul style="list-style-type: none"><li>Press and hold to turn the D2 Pad on or off.</li><li>Press to turn the backlight on/off and put the D2 Pad into sleep mode.</li></ul>
5	<b>Charging Status Indicator</b>	Lights red while battery is charging.
6	<b>Microphone</b>	For audio input.
7	<b>Earphone Jack</b>	Connects to an earphone using a 3.5mm audio jack.
8	<b>Reset Button</b>	Insert a pointed object, like a paper clip, to reset system settings to factory default.
9	<b>Mini USB</b>	Connects to a PC using the



	<b>Port</b>	supplied USB cable.
10	<b>Power DC Input</b>	Connects the device to the DC jack to charge the battery.
11	<b>Micro SD Slot</b>	Insert a micro SD card for additional storage space.
12	<b>Speaker</b>	Emits audio output.

## **2. First Use of D2 Pad**

### **2.1 Managing and Charging the Battery**

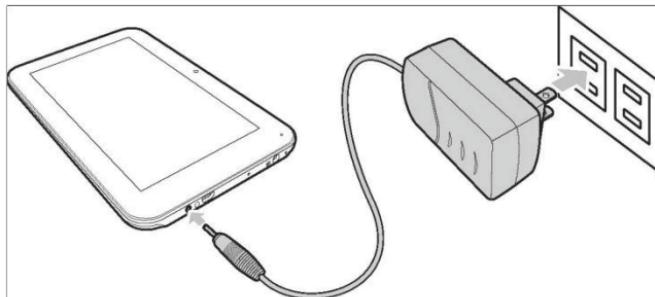

Prior to using the D2 Pad for the first time, fully charge the battery. D2 Pad has a built-in polymer battery that uses only the designated charger to charge.

In order to prolong the service life of the product, use the device until the battery is depleted for the first two times before charging the battery again.

To charge the battery, connect the charger/adapter to the device and the DC jack.

**NOTE:**

- For the first two times of charging the battery, the charge time may be up to 10 hours; succeeding times may take up to 5 hours.
- While charging, the battery icon on the screen will scroll.
- When charging is complete, the battery icon will turn green and stop scrolling.
- When charger is plugged in after the product shuts down due to low power, it may take a few moments before the product enters the home screen.
- The Li-ion battery cells in the battery pack are not user-serviceable.

When the device is not in use, be sure to turn it off.

If the device will not be used for a long period of time, be sure to discharge and then recharge the battery once a month.


The built-in polymer battery must be recharged regularly. Battery damage caused by depletion or the use of unauthorized charger is not covered by the warranty.

## 2.2 Turning On/Off

Press and hold the  button to turn the D2 Pad on/off.

## 2.3 Connecting to the PC


Using the supplied USB cable, connect the device to the PC to transfer data or power up the device. Enter the USB disk mode to copy and remove files to and from the PC.

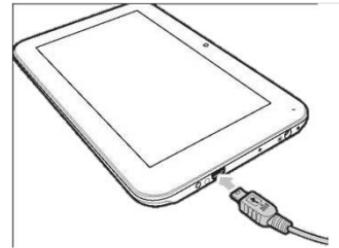

## 3. The Home Screen

### 3.1 Home Screen

After turning on the device, the locked home screen is displayed.

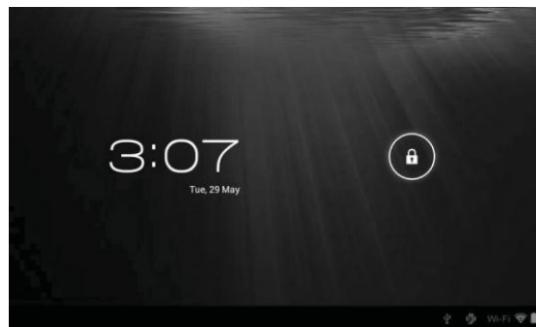

The screen is locked by default. To unlock the screen, drag  towards  towards 


You can manage application icons from the home screen:

- **Add application shortcuts:** Long press an application icon from the application menu and drag the icon to the home screen to add as shortcut.
- **Remove application shortcuts:** Long press an application icon in the home screen as the top of the screen displays an “X”. Drag the application icon towards the “X” until it turns red, and then release the hold to remove the application shortcut.



## 3.2 Wallpapers

Long press the touch screen and the Wallpaper option will appear.

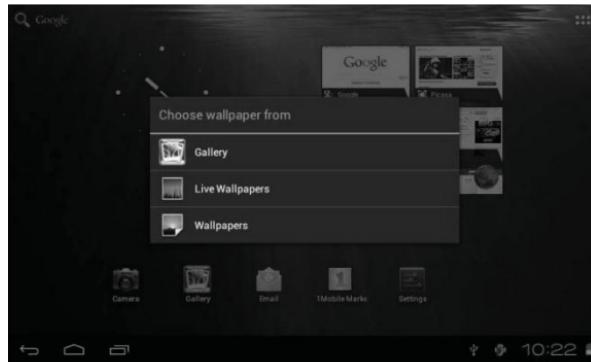

- **Gallery:** Choose a picture saved in your photo gallery or a picture taken by the device camera to use as the background of the home screen.
- **Live Wallpapers:** Choose a moving graphic from Live Wallpapers to use as the background of the home screen.
- **Wallpapers:** Choose a picture from the default system pictures to use as the background of the home screen.

### 3.3 Status Bar

The status bar is located at the bottom the screen.



The icons on the left side are:

- Return : Tap to return to previous screen.
- Home : Tap to return to home screen.
- History : Tap to view the most-recently accessed applications.

The icons on the right side display Wi-Fi signal, Wi-Fi connection status, battery power/battery charging status, current time, USB and SD card connection status. Tap the icons to view the date and time and other information.

### 3.4 Using the Touch Screen

The D2 Pad is equipped with a 7" touch screen. The following describes the main touch screen area, and tips on how to properly use it.

Whichever interface you are in, you can return to the home screen directly by touching the Home icon. You can also touch the History icon to view recently accessed applications.

In different applications, you can return to the upper layer or previous interface by touching the Return  icon.

In different applications, you can touch the Advanced  icon to show relevant options available in the application.

### 3.5 Application Menu

Tap the Application icon  to view the application menu screen.



In the application menu interface, simply touch an application icon to open the application.

In applications with browsing capabilities, such as Explorer, Music, etc., you can drag the scroll bar up and down or flick the screen to scroll the file list.

In Browser or PDF reader, touch and drag the page to scroll up/down.

## 4. Basic Settings

Personalize applications, set system date and time, configure network connection, and change other settings in the **Settings** page. To open the **Settings** page, do one of the following:

- Touch the Application  icon, and then tap  Settings.
- Tap the notification icons on the right side of the status bar, then tap .



Tap an item on the left panel menu to display more setting options on the right panel.

## 4.1 Wi-Fi and Network

The Wi-Fi menu lets you manage Wi-Fi settings and connect to a wireless network.



Tap the Wi-Fi switch button to turn Wi-Fi on or off.

- The Wi-Fi icon displaying indicates Wi-Fi is turned off.
- The Wi-Fi icon displaying indicates Wi-Fi is turned on.


### Connect to an Access Point

1. Turn on Wi-Fi. The device will search for available networks within range and display the searched Access Point (AP) names on the right panel.

2. Tap the access point name that you wish to connect to. If the selected access point is protected by a password, the device will prompt for the password. (Note: Password entry is only required when connecting to the AP for the first time.)
3. When prompted, enter the password to connect to the AP.
4. Tap **Connect**.

### Other Wi-Fi Options

Tap the Advanced  icon on the upper-right corner of the screen to display advanced options and other network information.

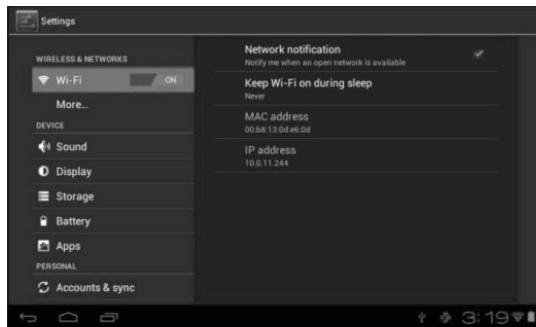

When the **Network notification** option is checked, the system automatically scans and displays available networks within range. If it is unchecked, you must tap **SCAN** to manually scan for nearby networks and tap **ADD NETWORK** to manually do so.

\*Note: The D2 Pad recognizes Wi-Fi networks that it has connected to before. Once Wi-Fi is turned on and a known connection is detected, the device automatically connects to that network.

## 4.2 Device

### 4.2.1 Sound

Set the tone and sound notifications.



- **Volumes:** Includes volume adjustments for Music, Video, Games and other medium, notifications and alarm clock. Drag the slider bar to adjust the volume.
- **Default notification:** Set the default notification ringtone.
- **Touch sounds:** Activate sound when you make selection on the screen.
- **Screen lock sound:** Activate sound when you unlock or lock the screen.

## 4.2.2 Display



- **Brightness:** Adjust the brightness of the screen by dragging the slider bar left or right, then click **OK**. You can also select automatic adjustment.
- **Wallpaper:** Change the background of the home screen by three (3) options. Refer back to section **3.2 Wallpapers** for details.
- **Auto-rotate screen:** When you rotate the tablet, the screen changes direction automatically.
- **Sleep:** Adjust idle time before the screen locks.
- **Font size:** Set the size of the system font with four options: Small, Normal, Large, and Huge.

## 4.3 Personal

#### 4.3.1 Accounts and Sync



When the device accesses applications, such as the calendar, it needs to log in with an ID to sync data on your account with data on your D2 Pad.

- **ON** **Account Synchronization:** Touch the Account Sync switch to enable or disable account synchronization.
- **ADD ACCOUNT:** Touch this option to add a new E-mail account, if necessary.

#### 4.3.2 Location Services

Set your location and allow interactive options with Google.




- **Google's location service:** When checked, applications use data from Wi-Fi or mobile networks to determine your approximate location.

### 4.3.3 Security

The Security menu allows you to set device security options.

- **Screen lock:** Select the method of unlocking the screen.
- **Owner info:** Display the owner information on a locked screen.
- **Encrypt tablet:** Encrypt the device with a PIN or password.
- **Make passwords visible:** Display password characters as you type them on screen.
- **Device administrators:** View or deactivate device administrators.
- **Unknown sources:** Run and install application programs not from Google market.

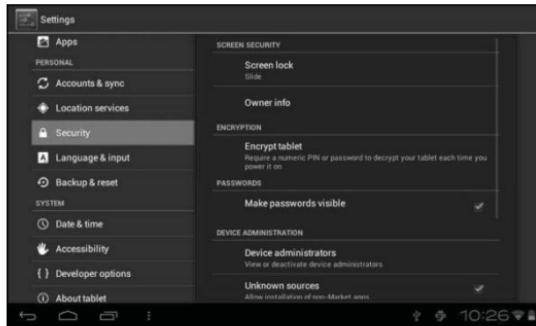

## CREDENTIAL STORAGE


Ascertain the legality and credibility of the program with some credentials CA.

- Trusted credentials: Store trusted credentials used by the system or the user.
- Install from SD card: Import trusted credentials from the SD card.
- Clear credentials: Clear all credentials recorded by the system, generally can't be selected by default.

### 4.3.4 Language and Input Method

This menu allows you to choose the system display language and input method.

- **Language:** Choose the system language, with 60 options.
- **Spelling correction:** Based on the selected language, the system assists to correct spelling errors.
- **Personal dictionary:** Customized words defined by the user, null by default.

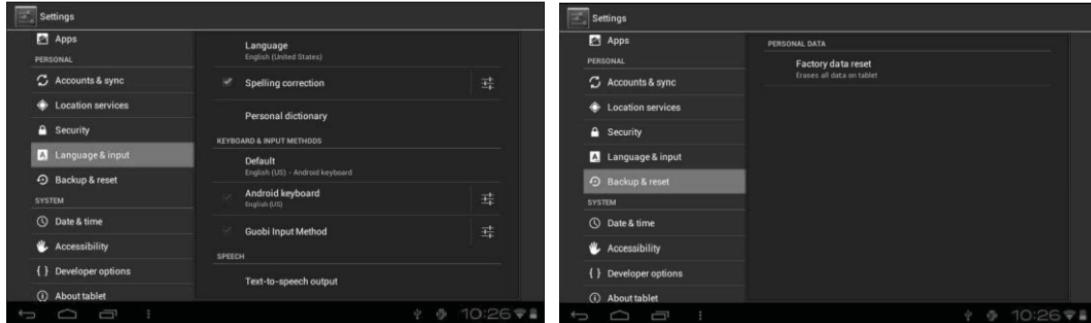

## KEYBOARD & INPUT METHODS

Choose to set the system input method.

- **Default:** Select the default input method.
- **Android keyboard:** Tap the Settings icon to configure the Android keyboard settings.
- **Google speech-to-text:** Automatic

## 4.3.5 Backup and Reset

### PERSONAL DATA

**Factory data reset:** Clear all data in the tablet PC and revert all settings to factory default.

## 4.4 System

### 4.4.1 Date and Time

Set the date, time, time zone and format.



- **Automatic date & time:** Use the time on the network; requires Internet access and system reboot to take effect.
- **Set date:** Access date setting interface and set the date.
- **Set time:** Access time setting interfaces and set the time.
- **Select time zone:** Access time zone setting interface and set time zone.
- **Use 24-hour format:** Set display format of the time.
- **Select date format:** Display the date by selecting different date format.

### 4.4.2 Accessibility



#### SYSTEM

- **Large text:** Select the size of the system display font.
- **Auto-rotate screen:** Adjust the screen direction according to the G-sensor.
- **Speak passwords:** Choose to say passwords verbally instead of typing them.
- **Touch & hold delay:** Set the response speed of the touch screen.

- **Install web scripts:** Choose whether or not to install the script from Google for viewing the web conveniently.

#### 4.4.3 About the Tablet

- **System updates:** Detect system version and upgrade.
- **Status:** Current status of tablet PC, including battery power, network, uptime, etc.
- **Legal information:** Code development license and Google legal information.
- **Model number:** Device model number.
- **Android version:** Android version number.
- **Kernel version:** Linux core version number.
- **Build number:** The customized version number, used to distinguish the system software.

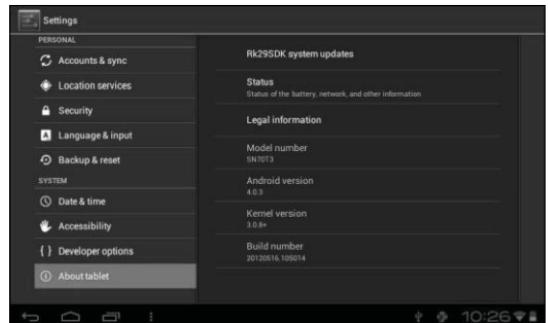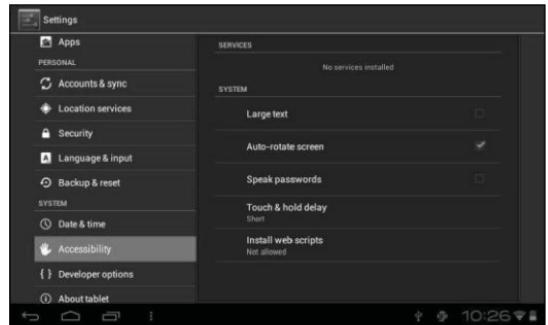

## **1 Year Limited Warranty**

D2 offers a **ONE YEAR** limited warranty for all D2 tablets, limited to those residing in the 48 continental United States and Canada.

D2 warrants the products to be free from defects in materials and workmanship as sold to the original purchaser. This warranty is for replacement for like-items only and does not cover items out of production if the company no longer stocks them. This warranty is not assignable. Third-party products, such as mobile/ handheld devices, media players, camcorders, cameras, tablets, etc. interacting with the D2 products are not covered by this warranty.

D2's sole obligation under this warranty is to replace or, at its option, to repair, free of charge, all the product's defective parts. This warranty applies only on the condition that the product has been installed, maintained, and operated under conditions of normal use and in accordance with the installation guide provided. The provisions of this warranty shall not apply if, in D2's sole judgment, the product has been subject to misuse or neglect, improper installation, accidental damage, or repaired or altered in ways that affect its performance or reliability.

For further information, please visit to our website: [www.d2pad.info](http://www.d2pad.info)  
e-mail: [support@d2pad.info](mailto:support@d2pad.info)  
U.S. Service Hotline: **1-888-707-2655**

<b>OPERATING SYSTEM</b>	Google Android 4.0 (Ice Cream Sandwich )
<b>PROCESSOR</b>	Allwinner A10 (1.2 GHz)
<b>MEMORY</b>	1 GB DDR III
<b>STORAGE</b>	4 GB NAND Flash
<b>DISPLAY</b>	Capacitive Multi-touch LCD Screen 7" (16:9), 800 X 480, WVGA
<b>NETWORK</b>	Yes, 802.11 b / g / n
<b>BATTERY</b>	Rechargeable Lithium Battery / 3000 mAh (Up to 6 Hours)
<b>G-SENSOR</b>	Yes
<b>SUPPORT FORMATS</b>	MP3 / WMA / MP2 / OGG / AAC / M4A / MA4 / FLAC / 3GP / WAV / AVI / H.264 / DIVX / XVID / RM / RMVB / MKV / WMV / MOV / MP4 / MPEG / MPG / FLV / HD 1080P / JPG / JPEG / GIF / BMP / PNG
<b>CAMERA</b>	0.3 MP Front camera
<b>SPEAKER</b>	Yes, Internal Stereo Speaker
<b>PORTS</b>	Mini USB Standard 3.5mm Headphone Jack Microphone DC In
<b>ACCESSORIES</b>	1 x Micro SD card slot (Support up to 32 GB) Mini USB Cable USB OTG Cable Adapter, 5V / 2A User Manual
<b>DIMENSION</b>	194 x 120 x 9.9 mm (7.6 x 4.7 x 0.38 inch )
<b>WEIGHT</b>	320 g (0.7 pound)

**MEMO**



Designed In USA | Made In China