


Operational Description

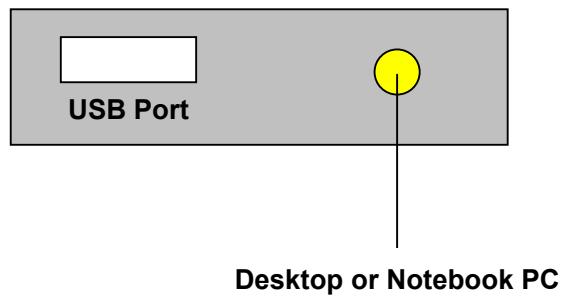

1. When you plug a receiver into a USB port,
You will see LED indicator is blinking..
2. Push a either Next or Previews button
on the transmitter to implant user ID.
When ID is set, LED goes to command waiting
state.
3. Begin your presentation.