



EXPLORER HEADSET WALKIE TALKIES

Instructions

AGES
3+

GETTING STARTED

How to Operate your Headset Walkie Talkies

1. The headset walkie talkies are just like a cordless telephone. It enables both parties to talk and listen at the same time.
2. Open the battery door and insert 2 "AA" batteries. (not included)
3. Select "Lo" or "Hi" volume by using the selector switch located on the side of your walkie talkies.
4. Adjust the headband and boom mic.
5. When transmitting, speak clearly using a normal tone.
6. Move to a different location in the event of interference caused by other radio signals in the vicinity.
7. Modifications not authorized by the manufacturer should not be made.

Caring For Your Product:

Your headset walkie talkies have been fully adjusted. Be sure not to touch any internal components other than the batteries.

1. If the sound or volume becomes weak, replace the batteries.
2. After use, always turn the selector switch to the "Off" position.
3. Keep your headset walkie talkies in a dry and clean place.
4. Please do not exert excessive force on the boom microphone or the headband of the unit.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

FCC ID : PN5-CHT-22303

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

BATTERY INFORMATION

How to Replace Batteries: Requires 2AA (LR6) alkaline batteries (not included)

IMPORTANT SAFETY INFORMATION - BATTERY WARNINGS AND PROPER USE

⚠ WARNING: Battery acid leakage can cause personal injury and cause damage to the product unit and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes into contact with leaked battery acid. Leaking batteries may make a "popping sound."

NEVER mix old and new batteries or different brands of batteries.

NEVER mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

NEVER use rechargeable batteries with this product.

NEVER dispose of batteries in fire as they may leak and explode.

NEVER disassemble, modify, or attempt to short circuit the battery compartment.

NEVER leave batteries in the product for long periods (a week or more) of non-use.

NEVER leave the product on when the batteries have lost their charge.

NEVER put batteries in backwards by placing the negative (-) battery pole into the positive (+) receptor slot.

ALWAYS have an adult install and change the batteries.


ALWAYS turn off the product when not in use.

ALWAYS replace all batteries at the same time.

ALWAYS insert batteries according to the instructions.

Warning:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

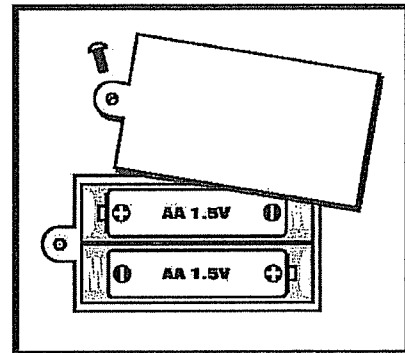

1. Use a Phillips screwdriver to remove the battery door.
2. Install battery as shown in figure above.
3. After installing the batteries make sure the lid is screwed on securely so it does not come off.



because kidz like toyz
KIDZ TOYZ, INC.
MT. KISCO, N.Y. 10549

© 2009 Discovery Communications, LLC. Discovery Kids and the Discovery Kids logo are trademarks of Discovery Communications, LLC, used under license. All rights reserved.
discoverykids.com

OFFICIAL LICENSED PRODUCT

Please visit us on the web at www.kidztoyz.com

MADE IN CHINA
ITEM NO. 30016



WARNING:

CHOKING HAZARD - Small Parts
Not For Children Under 3 Yrs.