

Interest Photographing

V801's photographer can record down every bit of the life, through the monitor shows on the TV so that can remain a nice memory.

Homely's Explorer




Baby's Monitor




Dad's Cutie Sleeping Position





Pretend To Be A Reporter or Speech

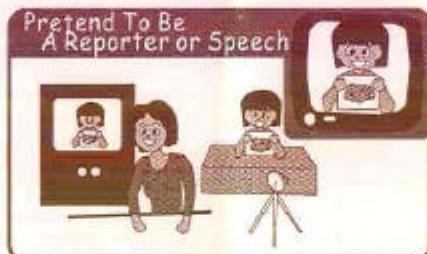

Name of the parts

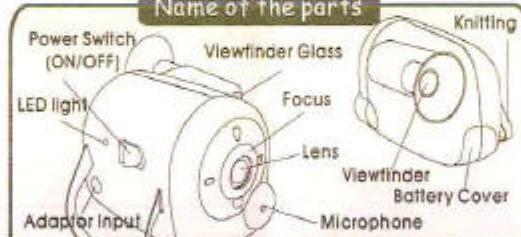

The Way of Changing The Battery

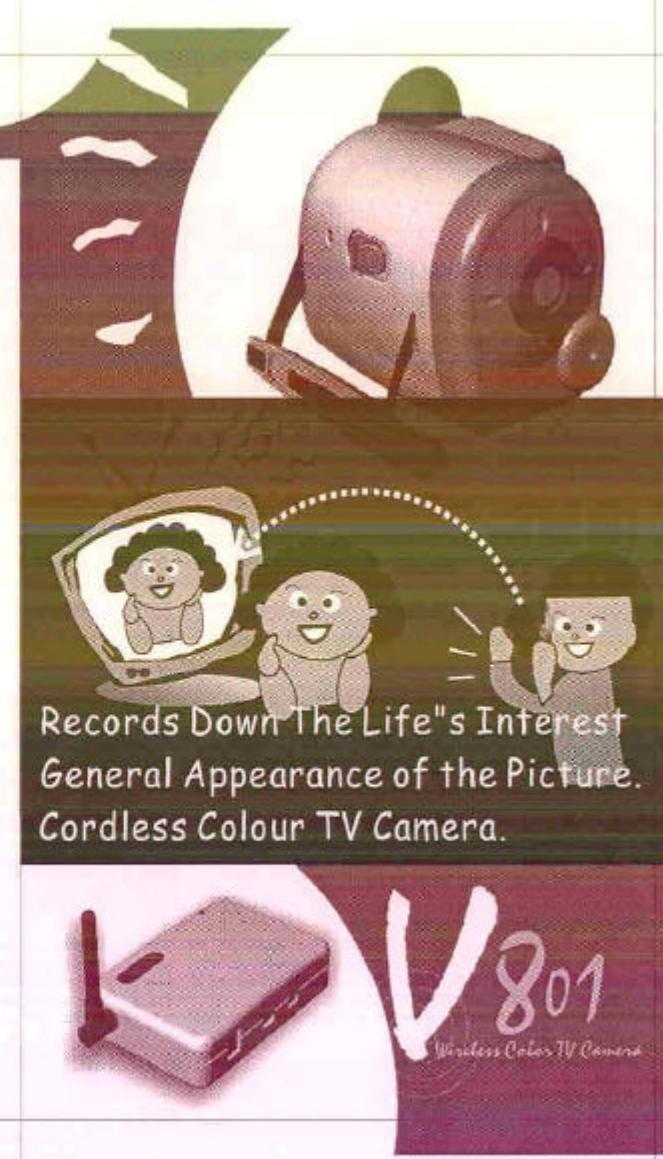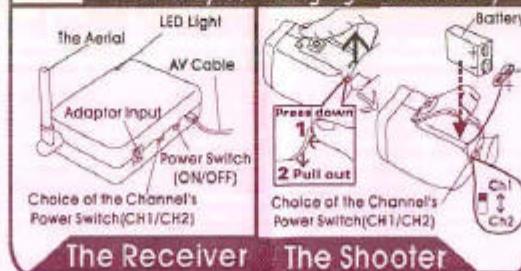

Records Down The Life's Interest General Appearance of the Picture. Cordless Colour TV Camera.

2.4GHZ Cordless Monitor

High quality's 2.4GHZ cordless CMOS video camera, got the most lifelike's image and clarify sounds (transmission rang 5meter, the distance depends on the size of the environment.) Because of the security, so we using two channels to receive. The receive can connect to the monitor by RCA jack.

The Easy Way For Using

V801 video camera is using technology video camera, using the cordless transmission transfer the photographing's image into the TV, then using the video tape records the general appearance of the picture down.


A.The Receiver

- ▶ To open up the receiver's cable, and fixed on the high place.
- ▶ Connect the adaptor with AC power, switch the power to on, and at the same time the Indicator LED light will be on.
- ▶ To change the channel's switch Ch1 or Ch2.(have to be the same channel as the shooter)
- ▶ To differentiate between the colours of the AV cable, then connect to the TV's AV joint.
- ▶ Turn on the TV, then choose Ch1 or Ch2.
- #### B.The Shooter
- ▶ Connect the adaptor with AC power, or using 9V dry cell connect with DC power to ON, and at the same time the indicator LED light will be ON.
- ▶ To change the channel's Ch1 or Ch2 (have to be the same channel as the receiver)

If the general appearance of the picture did shown up on the TV, then that will be fine.

Connecting To The Video Player

- ▶ To differentiate between the colours of the AV cable, then connect to the video player's AV joint, then use another AV cable, and connect to the TV's joint.
- ▶ Press the record button start to record.

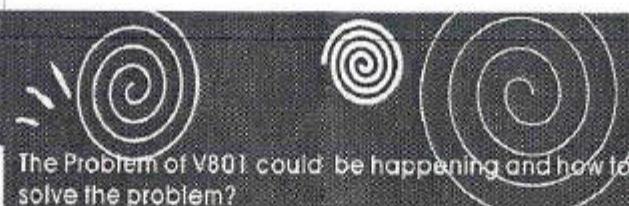

The Problem of V801 could be happening and how to solve the problem?

Situation A : The receiver's power is on and the LED light is on, but got nothing comes up on the TV?

- ▶ Has the power of the TV turned on? If not, please turned on.
- ▶ The receiver and shooter's are in the same channel?
- ▶ The connection of the AV cable is it connecting right? If not, please make sure the AV cable connect well.

Situation B : Can't receive the V801's radiation?

- ▶ The TV's channel is it on channel 1 or channel 2.

Situation C : The TV's image is not clear?

- ▶ Make sure the shooter is close to the receiver. (radio wave range is 5 meters)
- ▶ The 9V dry cell is running out? Change the new one.
- ▶ Try to turn the focus until the image become clarity.
- ▶ Pull up the receiver's cable.

Functions

- ▶ ISM wave 2.4-2.4835GHZ in two channels (CH1/CH2)'s operation frequency.
- ▶ The best quality and reliability.
- ▶ Easy to install, only takes 5 minutes.
- ▶ To see who is coming.




Accessories

- ▶ Shooter size: 98.5(L)*78.5(W)*66.8(H)mm
- ▶ Receiver size: 126.3(L)*78.8(W)*27.5(H)mm
- ▶ Adaptor(110V,60HZ,DC12V,350mA)
- ▶ 9V dry cell(6F22)
- ▶ Durable Time---

Suggest of using alkaline battery
Continuous for about 3 hours(when using the alkaline battery)

Interest Photographing

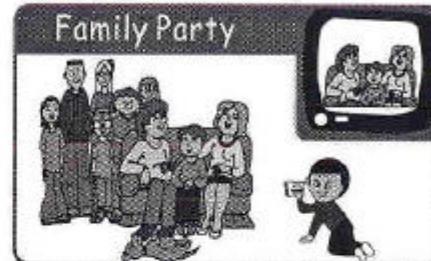

Family Party



karaoke



Mother's Cooking Class

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED. INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.