

VoiceCam II(DVC500) ASS'Y

NO	ITEMNAME	SPEC	MATERIAL	LOCATION	Q'TY
1	WASHER-WAVE		□:15.5□□,□:12.8□□,*1.2-81	X	1
2	RUBBER-MIC	RUBBER(BLACK)		X	1
3	TOP CASE	ABS+PC,SPRAY/SILK	SILVER SPRAY	X	1
4	BOTTOM CASE	ABS+PC,SPRAY/SILK	SILVER SPRAY	X	1
5	INDICATOR-LED	PC(MILKY)		X	1
6	FNCTION BUTTON	ABS,□□	SELECT/MODE/ERASE BUTTON	X	1
7	HOLDER KEY	ABS,□□	HOLDER KEY	X	1
8	SHUTTER BUTTON	ABS,□□	SHUTTER BUTTON	X	1
9	PLAY BUTTON	ABS,□□	PLAY BUTTON	X	1
10	WINDOW-SENSOR	PC(□□□)		X	1
11	REC BUTTON	ABS,□□	POWER BUTTON	X	1
12	WINDOW-DISPLAY	PC(□□)		X	1
13	DECORATION	ABS+PC,SPRAY/SILK	SILVER SPRAY	X	1
14	VIEW FINDER(□)			X	1
15	VIEW FINDER(□)			X	1
16	BATTERY COVER	ABS+PC,SPRAY/SILK	SILVER SPRAY	X	1
17	FINDER-HOLDER(L)	ABS	BLACK	X	1
18	FINDER-HOLDER(R)	ABS	BLACK	X	1
19	BARCODE	ART PAPER		X	1
20	COLOR STICKER	ROUND STICKER		X	1
21	MANUAL	?	?	X	1
22	MASTER CARTON BOX	DW1□		X	1
23	GIFT BOX	EW 1□	□□□ □□	X	1
24	PVC PAD	PVC		X	1
25	INNER PAD	EW		X	1
26	SPEAKER SHEET	□□		X	1
27	SPEAKER PAD	EVA		X	1
28	TAPPING SCREW	BH T1.6 X 3.5 / 5 X 0.5		SPEAKER	2
29	TAPPING SCREW	BH T1.6 X 5.0 / 2.5 X 1.0		PCB	2
30	TAPPING SCREW	BH T1.6 X 10.0 / 2.5 X 1.0		SET	3
31	BATTERY	1.5V AAA(LR03)	1.5V, AAA DURACELL x2	BT1	2
32	USB CABLE	CSVC-03043	MINI USB CABLE(black).EMI FILTER	X	1
33	EARPHONE	MS-1005	MONO, BLACK, EMI FILTER	X	1
34	INSTALL CD	5.25"		X	1
35	HAND STRAP	DVC-100F		X	1
36	GREASE	HIGH VACUUM GREASE	LENS HOLDER + LENS □□□ □□	X	1
37	BATTERY SPONGE				1
38	SPEAKER-REAR				1
39	WINDOW SHEET				1
40	COVER DUST				1
41	BUZZER SHEET				1
42	CD CASE	ART PAPER, 5.25"			1