



Modottel

WTE-500 User's Manual

(Draft 1.0)

Table of Contents

Getting Started

- Warnings and Precautions
- What Is Supplied in the Box
- Dictionary of Icons
- Identifying the Parts of the Phone
- How to Install, Remove and Charge the Battery

Basic Phone Operation

- Turning the Phone On and Off
- Standby Mode
- Receiving a Call
- Making a Call
- Ending a Call
- Phone Operation While a Call is in Process
- Missed Calls
- Pause Dialing
- Short-cut keys

Advanced Features

Call History

- Incoming Calls
- Outgoing Calls
- Missed Calls
- Call Timer
- Call Memo

Phone Book

- Find Entry
- New Entry
- Edit Group
- Memory Status

Messages

- Inbox
- Write Message
- Info Alerts
- Outbox
- Message Folder
- Delete Msg
- Msg Settings

Organizer

- Schedule
- Alarm Clock
- Calculator
- Stop Watch
- World Time
- Country Code

Settings**Display**

- Backlight
- Screen Settings
- Banner
- Text Color

Sounds

- Ring Tones
- Ring Settings
- Alerts/Tones
- Volume

Security

- Lock
- Change Code
- Restrict
- Emergency #s
- Clear Memory
- Reset Phone

System

- Roaming
- Preferred Mode
- Auto Nam
- Set Nam
- Location
- TTY

Language**Call Settings**

- Auto Redial
- Auto Answer
- Auto Hyphen
- Answer Call

Data Settings

- Data Rate
- Incoming Mode

Phone Info

- My Phone #
- S/W Version

Games

- Hamster
- X-Ship

Web Browser**Brew****Entering text, numbers and/or symbols****Appendix**

- Flow Chart of Phone Features
- Safety Information

Getting Started

Warnings and Precautions

- Use only Modottel-approved batteries and chargers to avoid the damage to the phone. Using other batteries or chargers voids your warranty and may cause an explosion.

- Do not use batteries and desktop chargers for other than the intended purposes.



Fully charge your battery before using the unit for the first time.



Do not disassemble or modify the unit.



Keep metallic objects such as necklaces, clip and coins away from battery terminals.



Do not expose the unit to excessive vibration or cause shock to the unit as serious damage may occur.



Do not hold the antenna when the phone is in use. Holding the antenna affects call quality.



Do not use solvents such as benzine or thinner to clean the unit.



Do not expose the unit to rain or liquids, irreparable damage may occur.

What Is Supplied in the Box

Thank you for purchasing this Modottel WTE-500 cell phone. To ensure ease of use please make sure the following items are packaged in the box with your device.

Dictionary of Display Icons

	Shows the current signal strength.
	Flashes when a call is initiated and turns to steady when connection is made.
	Indicates the phone is outside of the service area.
	Indicates the vibrate feature is activated.
	Indicates a new message or messages have been received.
	Location on mode.
	E911 only mode.
	Voice privacy.
	Indicates the alarm is set.
	Roaming. The phone is outside of its home service area.
	Digital indicator.
	Analog indicator.
	Indicates the remaining battery life.

Identifying the Parts of your WTE-500 Phone

1. Keypad lock key

To lock keypad and prevent numbers from being dialed accidentally, push and hold the lock button on the upper left hand side of the phone.


To release the keypad lock press the same button and hold.

2. Side keys

3. Headset jack

How to Install, Remove and Charge the Battery

Please make sure your battery has been fully charged before commencing to use your new phone.

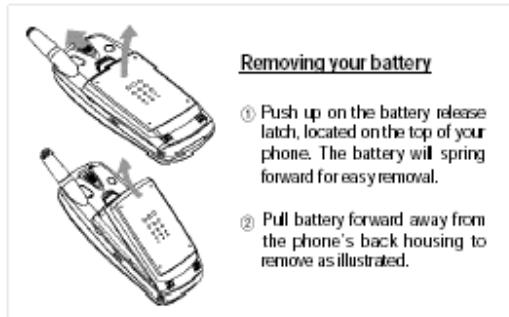

Charging your battery

1. Connect the charger to the accessory port of your phone.
(The arrow side of the charger should be pointing at your keypad).
2. Plug the charger into a 220V or 110V wall outlet.
3. If the Red LED is lit on the charger that means that your phone is in the process of charging.
4. If the Green LED is lit on the charger your phone is fully charged and ready for use.
5. When your phone is ready to be recharged, it will begin to beep and the battery status icon will flash empty.

Note :

When you charge the battery, the battery level indicator in the upper right corner of the display shows charging process.

When your phone indicates that the battery is fully charged (“Charged”), remove the travel charger.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen.



When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Basic Phone Operation

Turning the Phone On and Off

Standby Mode

Receiving a Call

Making a Call

Ending a Call

Phone Operation While a Call is in Process

Missed Calls / Automatic Redial

Pause Dialing

Short-cut keys

Turning the Phone on

1. To power your phone on, press and hold **END** key until the display backlighting comes on.
2. Your phone will emit wakeup chimes and the word searching will be displayed as the phone initiates with a cellular tower.
3. The phone will then revert to Standby Mode.

Note: If the display shows a keypad lock icon when you power the phone on, you will be required to enter a four digit unlock code before the phone can be used. The factory unlock code is set to 0000.)

Turning your Phone off

1. To power the phone off, press and hold **END** key.
2. Your phone will emit shut down chimes and the display will go blank.

Standby Mode

You are able to access your full feature menu, when your phone is in standby mode. Merely press **MENU** key.

1. Once inside your feature menu you can select from any of the displayed menu icons by navigating with the navigation key until the desired menu option is bracketed then pressing designated soft menu key.
2. While the phone is in standby mode the navigation key can be used for quick access to the following features:


Messages

Phone Book Search

Schedule

Brew (*It depends on your service provider's network. Please contact your service provider for this service.)


Push the navigation key left to enter Messages, right to enter the Phone Book, down to enter the Games and up to enter Brew.

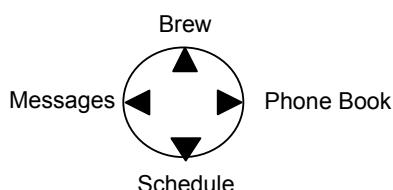

While the phone is in standby mode press the right soft menu key (2nd) to have quick access to the following features:

WAP (*It depends on your service provider's network. Please contact your service provider for this service.)
Games
Sound
Display

Push the navigation key left to enter Games, right to enter the Sound, down to enter the Display and up to enter WAP.

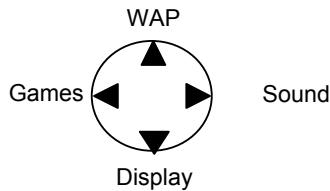

Receiving a phone call

When your phone receives an incoming call, it will either:

Ring
Blink (in lamp mode)
Vibrate
Ring and Vibrate
Or Vibrate then Ring

1. You can press any key (except **END** key) to answer an incoming call. Even when your phone is locked.
2. Pressing **END** key will silence the ringer or stop the vibration when a call comes in.

Making a call

In order to make a phone call your cell phone must be on, unlocked and have a network connection with adequate signal strength.

1. Dial the number that you wish to call
2. Press **SEND** key on the left side of your keypad.
3. Phone will display the word dialing until your call connects.

Calling from Recent Call List

1. Press **SEND** key. 30 recent call numbers will be displayed.
2. Select the number you want to dial and press **SEND** key again to make an outgoing call to the number.

Speed dialing

All Memory Locations on this phone can be speed dialed.

- To speed dial a number located in memory location 002-009, press and hold the third number of the memory location until the display shows that number and begins to dial.

- To speed dial a number located in memory location 010 – 099, press the second digit of the memory location briefly then hold down the third digit of the memory location until the display shows the full number and begins to dial.
- To speed dial a number located in memory location 100-200 press down the first two numbers of the three digit memory location briefly then hold the third number down until the display shows the full number and begins to dial.

Ending a call

1. Press **END** key to terminate a call.

Phone operation while a call is in progress

Sending my phone number

- When you are in the process of making a call you can send your phone number. This feature is a quick and easy way to leave your phone number on a pager or voice mail system.
- While you are on a call, you can send your phone number.

1. During the call, press **MENU** key (the key on the left hand side of the key pad).
2. Scroll to the option “Send Own Number”.
3. Select this option by pressing the navigation key straight down.
4. Your cellular phone number will be sent.

Using your Memo feature

The Memo feature functions as a scratch pad. You can use this feature to make a record of numbers that you receive during the course of a phone conversation. The numbers that you store while using your memo feature will be saved in your **Call History** under the heading **Call Memo**.

1. While you are in the process of using the phone, select **Menu** by pressing the **MENU** key located on the left hand side of your display.
2. **[Memo]** will appear as an option listed on the pull down menu that will appear on the left side of your display.
Select the **Memo** feature using your navigation key.
Then enter the number you want to record.
[Save] will appear above the right hand side of your display, select this option by pressing the soft menu key.

To view the numbers saved in your **Call Memo** list press **MENU** key, select **Call History** using your navigation key, scroll down to **Call Memo** and select with the soft menu key. A complete list of all of your saved memo numbers will appear. You can dial these numbers from the **Call Memo** feature or save them to your phone book.

Adjusting your Call Volume

You can adjust your speaker volume during a call.



1. To increase phone volume find the  on the left -hand side of your phone and press up. The display will show you a volume meter so you can keep track of how much you are raising the phone's volume.
2. To decrease phone volume locate the same key and press down. The display will show you a volume meter so you can keep track of how much you are lowering the phones volume.

Muting your Microphone for privacy

The Mute feature temporarily prevents the person you are speaking to from hearing your voice. This feature will automatically disengage when you end the call.

1. During the call press your **MENU** key located on the left side of your display.
2. Scroll to the word **Mute**.
3. Select the **Mute** feature using your soft menu key.
4. Your **Mute** feature is now active.
5. **[Unmute]** will appear above the right hand side of your display. When you are ready to resume your conversation, select this option by pressing the soft menu key. The party you are talking to will now be able to hear your voice.

Missed Calls

If a call comes while the phone is on and you do not answer it, the time, date and the amount of calls missed will appear on your display (the time shown will reflect the exact time of your last missed call).

1. To clear your display and resume using the phone, press **CLEAR** key or **END** key.
2. If the caller allows his/her number to be transmitted the missed call will automatically be stored in the **Call History** under the heading **Missed Calls**.
3. To dial a missed number, enter the **Call History**, select **Missed Calls** using the navigation key, scroll to the number that you wish to call and press **SEND** key located on the left hand side of your key pad.

Pause Dialing

The Pause Dialing feature allows you to dial into automated phone systems with the least amount of effort. Normally when you dial in to an automated system (for example, at a bank) a pre-recorded message prompts you for each subsequent set of numbers such as your account number then your PIN number. You can store these numbers at a single memory location separating the phone number, your account number and PIN number with pauses so the entire string of numbers can be recalled and sent at once.

1. To begin, enter the initial phone number to be dialed.
2. Press **MENU** key to insert a pause, and then continue entering the next string of numbers.
3. Repeat these steps until you have completed the series of numbers and are ready to store your pause dialing number.

- * There are three different pause types that you can use when storing numbers for pause dialing:

Manual Pause	Indicated with a P
Timed Pause	Indicated with a T
Hyphenates Pause	Indicated with an H

- * A manual pause means that the initial string of the number stored with pause dialing will be sent, then the user will have to listen to the voice instructions in the automated message and then manually press send to dial the next string of numbers.
- * A timed pause means that following the initial string of stored numbers, the phone will automatically pause for 2 seconds, and then send out the next stored numbers in the series.
- * A hyphenated pause simply means that a hyphen will be inserted after each series of numbers

4. Once you have entered your full pause dial number, proceed to store this number as described in the Add Entry part of this manual.

Shortcut Keys

There are two shortcut keys located on your phone's keypad which give you quick access to two commonly used features.

Vibrate mode

Vibrate mode will alert you to an incoming call without having the phone ring. This feature is useful in meetings where you would not want to disturb the people around you.

1. Press and hold  to set your phone to vibrate mode.
2. To deactivate the vibrate mode press and hold  again.
3.  is displayed when the phone is in vibrate mode.

Lock Mode

This feature gives you security at the push of a button and prevents anyone else from using your phone.

1. To quickly lock your phone, press and hold  until the phrase "This phone is locked, emergency calls only" appears on your display.
2. To deactivate your lock feature press and hold  again. You will have to enter the 4 digit password. The phone will display "Phone lock is off".

Advanced Features

Call History

- Incoming Calls
- Outgoing Calls
- Missed Calls
- Call Timer
- Call Memo

Phone Book

- Find Entry
- New Entry
- Edit Group
- Memory Status

Messages

- Inbox
- Write Message
- Info Alerts
- Outbox
- Message Folder
- Delete Msg
- Msg Settings

Organizer

- Schedule
- Alarm Clock
- Calculator
- Stop Watch
- World Time
- Country Code

Settings

Display

- Backlight
- Screen Settings
- Banner
- Text Color

Sounds

- Ring Tones
- Ring Settings
- Alerts/Tones
- Volume

Security

- Lock
- Change Code
- Restrict
- Emergency #s
- Clear Memory
- Reset Phone

System

- Roaming
- Preferred Mode
- Auto Nam
- Set Nam
- Location
- TTY

Language**Call Settings**

- Auto Redial
- Auto Answer
- Auto Hyphen
- Answer Call

Data Settings

- Data Rate
- Incoming Mode

Phone Info

- My Phone #
- S/W Version

Games

- Hamster
- X-Ship

Web Browser**Brew**

Call History

This feature allows one to view a list of:

- Incoming Calls that have connected to this phone
- Outgoing Calls that have been dialed with this phone
- Missed Calls : incoming numbers that did not manage to connect to this phone
- Call Timer : details the amount of time spent on each call
- Call Memo : where you have recorded numbers given to you during the course of a call.

Incoming Calls:

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Call History** Feature.
3. Select the **Call History** feature by pushing **OK** with the right soft key or pushing the number 1.
4. Select **Incoming Calls** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 1.
5. A list of the last 20 incoming calls will be displayed, if the phone has not received any incoming calls the message "Call history empty" will appear.
6. To view detailed information regarding any of the incoming call numbers (date/time) use your navigation key to scroll to the number in question and select **OK** with the right soft key.
7. To store any of the numbers from your **Incoming Call** list, press **MENU** and follow the steps explained later in this manual, under **Phone Book, New Entry**.

Outgoing Calls:

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Call History** Feature.
3. Select the **Call History** feature by pushing **OK** with the right soft key or pushing the number 1.
4. Select **Outgoing Calls** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 2.
5. A list of the last 20 outgoing calls will be displayed, if the phone has not made any outgoing calls the message "Call history empty" will appear.
6. To view detailed information regarding any of the outgoing call numbers (date/time) use your navigation key to scroll to the number in question and select **OK** with the right soft key.
7. To store any of the numbers from your **Outgoing Call** list, press **MENU** and follow the steps explained later in this manual, under **Phone Book, New Entry**.

Missed Calls:

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Call History** Feature.
3. Select the **Call History** feature by pushing **OK** with the right soft key or pushing the number 1.
4. Select **Missed Calls** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 3.
5. A list of the last 20 missed calls will be displayed, if the phone has not had any missed calls the message "Call history empty" will appear.
6. To view detailed information regarding any of the missed call numbers (date/time) use your navigation key to scroll to the number in question and select **OK** with the right soft key.
7. To store any of the numbers saved to your **Missed Call** list, press **MENU** and follow the steps explained later in this manual, under **Phone Book, New Entry**.

Call Timer:

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Call History** Feature.

3. Select the **Call History** feature by pushing **OK** with the right soft key or pushing the number 1.
4. Select **Call Timer** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 4.
5. The duration of your last call, total incoming calls, total outgoing calls, and total of all calls will be displayed. If you have not yet made or received any calls the call timers will all show 00:00:00.
6. To reset any of your **Call Timers** press **MENU**, the words **Reset Timer** will be displayed and you will have the choice of scrolling with the navigation key to select; **Incoming, Outgoing, Total** or **Reset All**.
7. To reset any of these timers highlight the desired option with your navigation key and push **OK** with the right soft key.
8. The phone will display the message “reset _____ call timer, yes or no”, choose **YES** to reset **NO** to exit.
9. If you choose to reset any one of the individual timers it will bring that specific timer back to 00:00:00, If you choose **Reset All** it will bring all of your call timers back to 00:00:00.

Call Memo:

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Call History** Feature.
3. Select the **Call History** feature by pushing **OK** with the right soft key or pushing the number 1.
4. Select **Call Memo** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 5.
5. A list of numbers that were recorded and saved while the phone was engaged in a call will appear, if no numbers have been recorded your phone will display the message “No numbers on the Call Memo”.
6. To store any of the numbers saved to your **Call Memo** feature, press **MENU** with the left soft key and follow the steps explained later in this manual, under **Phone Book, New Entry**.

Phone Book

This feature is designed so that you can store and retrieve phone numbers. Each name stored in your phone book can be categorized into a group (family, friend, office, or one category that you can define.) Your phone book can store up to 199 entries. You can arrange your entries using your group feature and assign a different ring tone to each group.

The icons used in your phone book are:

	: Mobile number
	: Home number
	: Office number
	: Others
	: Group



: Ring



: E-mail address



: Memo

Find Entry:

This feature allows you to find an entry in your Phone Book by name, location, phone number or group name.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Phone Book** Feature.
3. Select the **Phone Book** feature by pushing **OK** with the right soft key or pushing the number 2.
4. Select **Find Entry** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 1.
5. You will be able to choose from searching for your entry:

By Name

By Location

By Number

By Group

6. Scroll with the navigation key to your preferred search method and press **OK** with the right soft key, or press the number next to your desired search option.
7. If you choose to search **By Name**, you will have to enter the first few letters of the name you are looking for, then press **Search** with the right soft key. All entries containing those letters will be displayed and you will have to scroll to the specific entry you are looking for. If there are no entries that match the text you entered a message will appear saying "No matches found".
8. If you choose to search **By Location** you will have to enter the location number where you think the entry is located and then press **Search** with the right soft key. The information stored at that location will be displayed. If there is nothing stored at the location you query a message will appear saying "No matches found".
9. If you choose to search **By Number** you will have to enter the first few numbers of the phone number you are looking for, then press **Search** with the right soft key. All entries containing those numbers will be displayed and you will have to scroll to the specific entry you are searching for. If there are no entries that match the numbers you entered a message will appear saying "No matches found".
10. If you choose to search **By Group** name simply scroll to the name of the group where you think your entry is stored and then press **Search** with the right soft key. All entries that have been categorized into that group will appear, you will have to scroll to the specific entry you are searching for. If there are no entries categorized into the group you are querying a message will appear saying "No matches found".

New Entry:

This feature allows you to store a new contact in your phone book.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Phone Book** Feature.
3. Select the **Phone Book** feature by pushing **OK** with the right soft key or pushing the number 2.

4. Select **New Entry** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 2.
5. You will be prompted to enter the name of your new contact. (to view additional information about adding text with your phone's keypad see the appendix of this manual).
6. Once you have added the name of your new contact, press **Save** with the right soft key.
7. Advance with the navigation key to choose the location at which you want to store this contact. You can just enter the location number directly.
8. Once the location is stored you can use your navigation key to select the type of number.
9. Use the numerical keypad of your phone to enter the new number. Once you entered the new number, press **OK** with the right soft key.
10. Advance with the navigation key to select the group and press **Edit** with the left soft key. You will be prompted to categorize this contact into a **Group**.
11. Once you have selected the group, push **OK** with the right soft key.
12. Advance with the navigation key to select the ring and press **Edit** with the left soft key. Each of your contact can have a distinctive ring so that you can easily determine who is calling you. You have 31 ring tones to choose from and you can store the distinctive tone at the same time you enter each new contact.
13. Once you have selected the ring, push **OK** with the right soft key.
14. Advance with the navigation key to enter E mail or Memo and press **Edit** with the left soft key.
15. Enter the e-mail or memo and then press **Save** with the right soft key.
16. Once you are done, press **Save** with the right soft key to store the information of the contact.

Deleting A Single Contact from your Phone Book

1. Once you have located the entry to be deleted from your phone book press **Delete** with the left soft key.
2. Select Yes to delete No to exit.

Deleting all Contacts in the Phone Book

1. To delete all the contacts from your phone book at once, press **MENU** with the left soft key.
2. Scroll to the **Settings** feature and then press **OK** with the right soft key, or just press the number 5.
3. Use the navigation key to scroll to the **Security** and then press **OK** with the right soft key.
4. After entering password, select **Clear Memory** by scrolling that option is highlighted and pushing **OK** with the right soft key.
5. Select **Phone Book** from **Clear Memory** by pressing the navigation key down.
6. Select Yes to delete all contacts in the phone book or No to exit.

Edit Group:

This feature allows you to move a contact from one group to another, delete groups, define a new group.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Phone Book** Feature.
3. Select the **Phone Book** feature by pushing **OK** with the right soft key or pushing the number 2.
4. Select the **Edit Group** feature by scrolling with your navigation key until the feature name is highlighted and pressing **OK** with the right soft key or by pressing the number 3.
5. When you first enter the group feature you will see the group headings (family, friend, office, and other). If you want to view any of the contacts that were grouped into one of these categories scroll to the category with your navigation key and press **Search** with the right soft key.

A full list of contacts stored in to that group will appear.

6. You also change a group name from the preset names or user defined names by pressing **Edit** with the left soft key.

Memory Status:

This feature will remind you of the available number of contacts you can store.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Phone Book** Feature.
3. Select the **Phone Book** feature by pushing **OK** with the right soft key or pushing the number 2.
4. Select the **Memory Status** feature by scrolling with your navigation key until the feature name is highlighted and pressing **OK** with the right soft key or by pressing the number 4.

Messages

This feature allows a user to send text messages from their WTE 320 phone to another cellular phone. The length of the message is dependant on the capacity of your local cellular carrier, WTE 320 supports up to 150 characters per message. This feature also allows you easy access into your voicemail box with a one-touch dial option.

□ Inbox:

It displays the list of received text and voice messages.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Inbox** feature and press **OK** with the right soft key, or press the number 1 to enter the **Inbox**.
3. You will see two options; **Text** and **Voice**.
4. Choose **Text** to read your messages, choose **Voice** to see how many Voice Mail messages you have and to call your Voice Mail box.
5. Once you have selected either **Text** or **Voice** the handset will return a confirmation letting you know the number of messages in the chosen queue and will then allow you to view those messages.
6. To exit the **Text** or **Voice** message queue press **Clear** key.

*** When the list of received text message is displayed,**

1. Press **Option** with left soft key, select **Delete** to erase a highlighted message, **Delete All** to erase all received messages or **Lock** to prevent a highlighted message from deletion. Make your selection by highlighting your choice with your navigation key and pressing **OK** with the right soft key.

*** When a received text message is displayed,**

1. Press **Option** with left soft key, you will see 5 options:

Reply – replies to the person who sent you the message.

Forward – forwards a received message to others. When there is no text in the message, this option will not appear. After entering a recipient number, the message can be forwarded.

Save – You can store the message or call number. Messages will be saved into the Message Folder. Firstly you need to add new folder. Call number will be stored into your Phone Book.

Delete – Deletes the selected message from the Inbox.

Lock/Unlock – Locks or unlocks the selected message. Locked messages will not be deleted by **Delete** and **Delete All** functions of **Delete** menu. In order to save or delete the selected message, you have to unlock it.

2. Make your selection by highlighting your choice with your navigation key and pressing **OK** with the right soft key.

□ Write Message:

This feature allows you to send new message. You can send the same message to up to 10 recipients at a time.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.

2. Use the navigation key to scroll to the **Write Message** feature and press **OK** with the right soft key, or press the number 2 to enter the **Write Message**.

3. Enter the number you want to send a message.

You can also select recipient's number from your phone book. You can enter up to 10 numbers. To select numbers from your phone book, press **Search** with the left soft key and then press **OK**.

4. When you are done in entering numbers, press **OK** with the right soft key.

5. Enter the message you want to send.

(to view additional information about adding text with your phone's keypad see the appendix of this manual)

6. Press **Menu** to change a text entry mode or insert a message template.

7. When you are done in writing a message, press **Save** with the right soft key.

8. You can send a message by pressing **SEND** key or selecting **Send** from soft menu. Or you can select more options for a message by scrolling with the navigation key until that feature is highlighted and pressing **OK** with the right soft key.

Call Back # -allows you to insert a pre-programmed callback number with a message.

Priority – allows you to give priority to message. Normal or Urgent.

□ Info Alerts:

Your network's web server can send you browser alerts that you can read in your web browser. When you receive a browser alert message, your phone displays the new message indicator and gives an alert.

□ Outbox:

This feature displays the list of sent messages. Up to 20 sent messages can be stored in the Outbox.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.

2. Use the navigation key to scroll to the **Outbox** feature and press **OK** with the right soft key, or press the number 4 to enter the **Outbox**.

*** When the list of sent message is displayed,**

1. Press **Option** with left soft key, select **Delete** to erase a highlighted message, **Delete All** to erase all received messages or **Lock** to prevent a highlighted message from deletion.

2. Make your selection by highlighting your choice with your navigation key and pressing **OK** with the right soft key.

*** When a sent message is displayed,**

1. Press **Option** with left soft key, you will see 5 options:

Resend – resends the message to the person.

Forward – forwards a sent message to others. After entering a recipient number, the message can be forwarded.

To Folder – move the message to the different folder other than Draft.

Lock – Locks or unlocks the selected message. Locked messages will not be deleted by **Delete** and **Delete All** functions of **Delete** menu. In order to save or delete the selected message, you have to unlock it.

2. Make your selection by highlighting your choice with your navigation key and pressing **OK** with the right soft key.

□ Message Folder:

You can reuse message you have stored in the Message Folder.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Message Folder** feature and press **OK** with the right soft key or press the number 5 to enter the **Message Folder**.
3. You can see Draft option. The Saved text messages are displayed in the Draft.
4. You can also **Add**, **Edit** and **Delete** new folder by pressing **Option**.
5. Select the message you wish to reuse by scrolling with navigation key.

Press menu for options. You will see 4 options.

: **Forward**, **Resend**, **Move** and **Delete**.

Choose **Forward** option to forward to message to another.

Choose **Resend** option to resend the message.

Choose **Move** option to move the message to the different folder other than Draft.

If you want to move the message to the different folder, you should set up new folder in advance.

Choose **Delete** option to delete the message from **Message Folder**.

□ Delete Message

This allows you to delete all text messages stored in your Inbox, Info Alerts, Outbox, and Message Folder. You can also delete all messages stored in these folders at the same time.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Delete Message** feature and press **OK** with the right soft key or press the number 6 to enter the **Delete Message**.
3. Select the item you want to delete by scrolling with your navigation key until the feature name is highlighted and pressing **OK** with the right soft key.
4. Select Yes to delete, No to exit.

□ Messages Settings

You can have special features for messages.

New Message Alert

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.

2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **New Msg Alert** by scrolling with the navigation key and pressing **OK** with the right soft key or by pressing the number1.
4. Three options will appear on the display:
Alert Type, Alert Tone and Display Msg.
5. Select the **Alert Type** feature by pushing **OK** soft key, or by pressing the number 1.
6. You will be able to choose **Alert Type** for messages: **Vibrate, Vibrate then Ring, Custom Ring, Low Beep(Once) and Loud Beep(Once)**, scroll to your selection with your navigation key and press **OK** soft key.
7. Select the **Alert Tone** feature by pushing **OK** soft key, or by pressing the number 2.
8. You will be able to choose **Alert Tone** for messages. **Bell1, Bell2, Bell3, Bell4** and **Bell5**. Scroll to your selection with your navigation key and press **OK** soft key.
This function will not work when you set vibrate or beep for Alert Type.
9. Select the **Display Msg** feature by pushing **OK** soft key, or by pressing the number 3.
10. You will be able to choose how to display contents: **Notify Only** and **Display All**. Scroll to your selection with your navigation key and press straight down.

Auto Save

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **Auto Save** by scrolling with the navigation key and pressing **OK** soft key or by pressing the number 2.
4. The phone will ask, **Prompt, Auto Save or Do not Save?**

Auto Save: The created message will be automatically saved in the outbox after the message is transmitted.

Prompt: you will be prompted to save or not whenever the message is transmitted.

Do not Save: The created message will not be saved in the outbox when transmitted.

Auto Delete

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **Auto Delete** by scrolling with the navigation key and pressing **OK** soft key or by pressing the number 3.
4. The phone will ask, **Auto Delete On or Off?**

If you choose to turn this feature **On**, the created message will be automatically deleted when you exceed storage limit. If you choose to turn this feature **off**, you will be asked to delete or not when you exceed storage limit.

Delivery Acknowledgement

You should check with your service provider to ensure they offer this feature.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **Delivery Ack** by scrolling with the navigation key and pressing **OK** soft key or by pressing the number 4.

4. The phone will ask, **Delivery Ack On or Off**?

If you choose to turn this feature **On**, you will be able to know whether recipient receive the message or not. If you choose to turn this feature **Off**, you will not know whether recipient receive the message or not.

Templates

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **Templates** by scrolling with the navigation key and pressing **OK** soft key or by pressing the number 5.
4. You can add, edit and delete templates by scrolling features and press **OK** soft key.

Signature

This feature allows you to insert a pre-programmed signature with a message. (30 digits)
Also you can edit the signature you want to automatically send with your messages.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **Signature** by scrolling with the navigation key and pressing **OK** soft key or by pressing the number 6.
4. You will have two options:
Write Sign : Enter the signature you want to insert with a message.
Sign On/Off : If you choose to turn this feature **On**, the signature will be sent together with a message. If you choose to turn this feature **Off**, the signature will not be sent.

Text Entry

This feature allows you to select the default text input method including T9 Word, ABC, 123.

1. Enter your **Messages** feature by pressing **MENU** with the left soft key or enter your **Messages** menu by pushing the navigation key to the left.
2. Use the navigation key to scroll to the **Msg Settings** feature and press **OK** with the right soft key or press the number 7 to enter the **Msg Settings**.
3. Select the **Text Entry** by scrolling with the navigation key and pressing **OK** soft key or by pressing the number 7.
4. You will be prompted to select the default text input method from T9 Word, ABC, 123.

Organizer

The Organizer feature is used as a personal scheduler and calendar, you can use this feature to set alerts to remind you of important dates or to set once a day alerts to be used as an alarm clock. This feature also contains accessories including, a world time clock, and a calculator.

Schedule

 
This feature will display your calendar for a chosen month, will allow you to add and edit calendar events and to choose and set alarm bells for each entered calendar event.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Organizer** Feature.

3. Select the **Organizer** feature by pushing **OK** with the right soft key or pushing the number 4.
4. Select **Schedule** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 1.
5. A view of the current months calendar will be displayed, dates with events will be shaded.

How to select dates

To the previous week



To the previous day To the next day

To the next week



: To the previous month



: To the next month

6. To **Search All** of the calendar events press **Search** with the left soft key, a submenu will appear, highlight **Search All** and press **OK** soft key.

- To see a detailed view of a specific calendar event press **Search** with the left soft key, highlight the way you wish to search and press **OK** soft key.

Today: To view today's event.

Go to Date: To select a specific calendar event. Month will be highlighted. Enter the date manually then press **OK** soft key. Selected date will be highlighted.

7. The event you have selected will be shown along with all of its detail (time, date and information you have stored) from this view you can edit or delete this event.

8. To add an event to your schedule, highlight the date you want and then press **Add** with the right soft key. The display will then guide you through adding an event. (You will be able to add the time, date and some detail for each event you save).

9. If you want to keep date and time as it is, scroll the navigation key to the **Contents**.

To change the month, use the navigation key right or left. You can use dial keypad directly to input the date.

10. Time can be set manually. When the number is highlighted, press the time directly.

To select AM or PM, use the navigation key right or left.

11. When the **Contents** is highlighted, press **Edit** with the left soft key.

12. Enter the event you want to save.

(to view additional information about adding text with your phone's keypad see the appendix of this manual)

13. When you are done in entering events, press **Save** with the right soft key.

14. To select an alert time to warn you when a scheduled event is going to occur, highlight **Time** and press **Edit** with the left soft key. Select your desired time by scrolling the navigation key and then press **OK** soft key.

15. To select an alert, highlight **Ring** and press **Edit** with the left soft key. Scroll with the navigation key through your 5 bell choices and as each bell is highlighted its tone will play, select your desired alarm bell by pressing **OK** soft key.

16. Once you are done in setting events, then press **Save** with the right soft key. A message will show on your display saying "Schedule is saved" confirming that your new event was saved.

Alarm Clock

This feature allows you to set up to three daily alarms. These alarms can be set to go off once, daily, weekdays and weekends only.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Organizer** Feature.
3. Select the **Organizer** feature by pushing **OK** with the right soft key or pushing the number 4.
4. Select **Alarm Clock** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 2.
5. You will view three separate alarms, **Alarm 1**, **Alarm 2**, and **Alarm 3**. Highlight the alarm that you wish to set and press **OK** soft key.
6. You can set the time, frequency of alerts and what days your alarm goes off. The time can be entered manually. To select AM or PM, use the navigation key right or left.
7. If you want to turn your alarm on or off, use the navigation key right or left.
8. To select the frequency of alerts, highlight **Repeat Type** and then press **Edit** with the left soft key. You will have the choice of selecting from **Once**, **Daily**, **Weekdays** and **Weekends**. Select by pressing **OK** soft key.
9. If you want to change alarm sounds, highlight **Ring** and then press **Edit** with the left soft key. You will have the choice of selecting from **bell1** to **bell5**. Save the alarm sound by pressing **OK** soft key.
10. Once you set up the alarm, press **Save** with the right soft key. A message will show on your display saying "Alarm is saved and set up" confirming that your alarm was saved.



11. A clock icon will show on the main display of your phone indicating that the alarm clock is on and in use.

Calculator

The Calculator feature allows you to add, subtract, multiply or divide using the phones keypad and navigation key.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Organizer** Feature.
3. Select the **Organizer** feature by pushing **OK** with the right soft key or pushing the number 4.
4. Select **Calculator** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 3.
5. Begin by entering the first series of numbers that you wish to calculate, then use the navigation key highlight the multiply, add, subtract, or divide symbol. Enter the next series of numbers and repeat until your calculation is fully entered. To see your total select the equals sign and press **OK** soft key.

Press **Clear** key to erase any numbers that were entered in error.

Stop Watch

This feature allows you to time events accurately, down to the last second. The phone will display detailed times in hours, minutes and seconds. You can record the time of up to three separate events and store them in the phone.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Organizer** Feature.
3. Select the **Organizer** feature by pushing **OK** with the right soft key or pushing the number 4.

4. Select **Stop Watch** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 4.
5. To begin timing an event, press **Start** with the right soft key.
6. The time will automatically be recorded on the Stop Watch's display by pressing **Record** with the right soft key.
7. To stop the timer press **Stop** with the left soft key.

World Time


This feature allows you set your location and time zone and to view the time in 39 major world cities.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Organizer** Feature.
3. Select the **Organizer** feature by pushing **OK** with the right soft key or pushing the number 4.
4. Select **World Time** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 5.
5. To see world time based on your local time zone, Choose **Set Time Zone** and select the area you are at by scrolling with navigation key and pressing **Save** with the right soft key.
6. Once you set your current location, you will be able to see the local time in up to 39 of the worlds major cities from the **View Time**.

Country Code

This feature will tell you the country code for fifty of the world's major cities.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Organizer** Feature.
3. Select the **Organizer** feature by pushing **OK** with the right soft key or pushing the number 4.
4. Select **Country Code** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 6.
5. A map of the world will be displayed with a major city marked and named. The country code for that city will show at the bottom of the display.

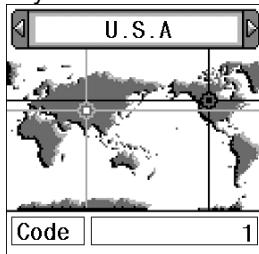

6. To see the country code for a different city scroll to the right using your navigation key, the cities will appear in alphabetical order.

Settings

Display

This Menu allows you to customize the display of your phone.

This feature allows you to select your wallpaper, how long you would like your backlight to stay, and select your personal banner you would prefer for your display.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.

3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **Display** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 1.
5. You will have the option of setting up your **Backlight**, **Screen Settings**, **Banner**, or **Text color** for your banner and time stamp.

Backlight:

1. To set up your **Backlight** choose option 1 or scroll to **Backlight** with your navigation key and press **OK** soft key.
2. Select from:
 - 10 seconds**: means that backlight goes off after 10 seconds
 - 20 seconds**: means that backlight goes off after 20 seconds
 - 30 seconds**: means that backlight goes off after 30 seconds
3. Scroll to your selection with your navigation key and press **OK** soft key (these selections affect both the display and the keypad).

Screen Settings:

1. To set up your **Screen Settings** choose option 2 or scroll to **Screen Settings** with your navigation key and press **OK** soft key.
2. You will have the option of setting up your **Wallpaper and Power On/Off display**.
3. Select the **Wallpaper** feature by scrolling with the navigation key until that feature is highlighted and pressing straight down or by pressing the number 1.
4. Scroll right or left with the navigation key to preview of what that wallpaper type looks like will be displayed.
5. Press **OK** soft key to save your preference.

Banner:

This feature allows you to set up a personal text banner that will show on the display of your phone in standby mode, once the phone is powered on.

1. To set up your **Banner** choose option 3 or scroll to **Banner** with your navigation key and press **OK** soft key.
2. You will see box titled text input where you can enter the banner message of your choice (text entry options are listed under Menu).
3. Once your message is complete press **Save** with the right soft key to store your banner.
4. A message will appear asking banner save **Yes** or **No**, if you choose **No** the phone will move you back to Edit mode so you can change the banner as you see fit, if you select **Yes** the phone will show a confirmation message stating that the banner has been saved.
5. To make your selection highlight **Yes** or **No** with the navigation key and press **OK** soft key.

Text Color:

This feature allows you to select text color for the banner and time stamp that will show on the display.

1. To set up your **Text Color** choose option 4 or scroll to **Text Color** with your navigation key and press **OK** soft key.
2. You will have the option of setting up your **Banner or Clock**.
3. Select from:
 - Black
 - White
 - Red
 - Blue
 - Cyan
 - Orange

Green

4. Scroll to your selection with your navigation key and press **OK** soft key.

Sounds

Your sounds feature is designed so that you can configure your volume (voice, keypad and ringer), choose your alerts, and designate your ringer types.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **Sounds** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 2.
5. You will have the option of setting up your **Ring Tones**, **Ring Settings**, **Alerts/Tones** and **Volume**.

Ring Tones:

The ring tones feature allows you to select from 31 rings to have as your phone's ringer to alert you to incoming calls.

1. To set up your **Ring Tones** choose option 1 or scroll to **Ring Tones** with your navigation key and press **OK** soft key.
2. Enter the feature menu by pressing **OK** soft key.
3. Scroll with the navigation key until you hear the tone that you wish to select and press **OK** soft key.
4. The selected tone will be saved.

Ring Settings:

This feature allows you to control how you would like to be alerted when your phone receives an incoming call.

1. To set up your **Ring Settings** choose option 2 or scroll to **Ring Settings** with your navigation key and press **OK** soft key.
2. You can select from one of the following options:

Ring
Vibrate
Vibrate then Ring (R)
Vibrate + Ring
Lamp Only (silent alert mode)

3. Scroll to the alert of your choice with your navigation key and press **OK** soft key to select.
4. The selected ring type will be saved.

Alerts/Tones:

This feature allows you to activate a tone for each of your specific alert types or to silence one or all of them. You have 5 different specific alerts. They are:

No Service
Minute Minder
Connect Tone
Disconnect Tone
Power On/Off

Below is an explanation of each of these alerts and instructions of how to activate or disable them using your phones feature menu.

- **No Service**

This tone alerts you that you are out of the service area for your carrier. While you are out of the carrier's service area you will not be able to make or receive calls. You will hear another tone when you have traveled back into your proper service area and again can make and receive calls.

1. To set up your **Alerts/Tones** choose option 3 or scroll to **Alerts/Tones** with your navigation key and press **OK** soft key.
2. Select **No Service** by pressing **OK** soft key or by pressing the number 1.
3. You will see an option saying **Service Alert**:
Off : Set the feature to off
On : Set the feature to on
4. Highlight the option you want to set and pres **OK** soft key.

- **Minute Minder**

This feature sounds an alert once every elapsed minute of a call, so that the user can easily keep track of how long they have been using their phone.

1. To set up your **Alerts/Tones** choose option 3 or scroll to **Alerts/Tones** with your navigation key and press **OK** soft key.
2. Select **Minute Minder** by pressing **OK** soft key or by pressing the number 2.
3. You will see an option saying **Minute Minder**:
Off : Set the feature off
1 Minute : Set the feature to on
4. Highlight the option you want to set and pres **OK** soft key.

- **Connect Tone**

This tone alerts you when your call has connected to the party you are dialing.

1. To set up your **Alerts/Tones** choose option 3 or scroll to **Alerts/Tones** with your navigation key and press **OK** soft key.
2. Select **Connect Tone** by pressing **OK** soft key or by pressing the number 3.
3. You will see an option saying **Connect Tone**:
Off: Deactivate this feature.
Tone 1, Tone 2, Tone 3, Tone 4
4. Highlight the option you want to set and pres **OK** soft key.

- **Disconnect Tone**

This tone alerts you when you are about to be disconnected from a call.

1. To set up your **Alerts/Tones** choose option 3 or scroll to **Alerts/Tones** with your navigation key and press **OK** soft key.
2. Select **Disconnect Tone** by pressing **OK** soft key or by pressing the number 4.
3. You will see an option saying **Disconnect Tone**:
Off: Deactivate this feature.
Tone 1, Tone 2, Tone 3, Tone 4
4. Highlight the option you want to set and pres **OK** soft key.

- **Power On/Off Tone**

You can activate or deactivate the sounds when you power the phone on or off.

1. To set up your **Alerts/Tones** choose option 3 or scroll to **Alerts/Tones** with your navigation key and press **OK** soft key.
2. Select **Power On/Off Tone** by pressing **OK** soft key or by pressing the number 5.
3. You will see an option saying **Power On/Off**:
Off: Set the sounds to off when power on/off
On: Set the sounds to on when power on/off

4. Highlight the option you want to set and press **OK** soft key.

Volume:

This feature allows you to set the volume of your Calls, your Ringer and your Keypad Volume:

- **Earpiece Volume**

1. To set up your **Volume** choose option 4 or scroll to **Volume** with your navigation key and press **OK** soft key.
2. Select **Earpiece Volume** by pressing **OK** soft key or by pressing the number 1.
3. Set the volume level based on the volume bars shown on the display and press **OK** soft key.
4. A message saying "Saving the volume setting" will scroll across the display.

- **Ring Volume**

1. To set up your **Volume** choose option 4 or scroll to **Volume** with your navigation key and press **OK** soft key.
2. Select **Ring Volume** by pressing **OK** soft key or by pressing the number 2.
3. Set the volume level based on the volume bars shown on the display and press **OK** soft key.
4. A message saying "Saving the volume setting" will scroll across the display.

- **Keypad Volume**

1. To set up your **Volume** choose option 4 or scroll to **Volume** with your navigation key and press **OK** soft key.
2. Select **Keypad Volume** by pressing **OK** soft key or by pressing the number 3.
3. Set the volume level based on the volume bars shown on the display and press **OK** soft key.
4. A message saying "Saving the volume setting" will scroll across the display.

Security

This feature menu allows you to restrict access to your phone by setting up and activating a special lock code, all of the features that can affect your phones basic functionality are also located in this menu. You must know and enter your 4-digit lock code before being able to use your security menu. The phone is shipped from the factory with a default lock code of 0000. **Keep this code safe and do not share it, to ensure proper functionality and to prevent misuse/theft of your phone.**

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **Security** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 3.
5. You will be asked to enter the phones 4-digit lock code before being allowed access to your **Security** feature menu, **the factory default for your 4-digit lock code is 0000**, once this code is entered your phone will automatically advance to the **Security** menu.
6. You will have the option of setting up your **Lock Phone, Change Code, Restrict, Emergency #s, Clear Memory and Reset Phone**.

Lock Phone:

This feature prevents the unauthorized use of your phone, once this feature is activated your phone will remain locked even if you power it off and back on. You will have to enter your phone's 4-digit lock code to be able to use your phone.

1. To set up your **Lock Phone** choose option 1 or scroll to **Lock Phone** with your navigation key and press **OK** soft key.
2. Your screen will show **Lock On** or **Lock Off**, if you select Lock On your phone will lock immediately.
3. Make your selection by scrolling to your choice with your navigation key and pressing **OK** soft key.
4. If you activate the Lock feature your phone will display a confirmation message warning, "the phone is locked, emergency calls only" if you turn your lock off the phone will confirm that "phone lock is off".

Change Code:

This feature allows you to change your lock code from the factory default of 0000. Remember to write down your lock code somewhere safe, if you forget your lock code you will have to contact a local repair center to unlock your phone.

1. To set up your **Change Code** choose option 2 or scroll to **Change Code** with your navigation key and press **OK** soft key.
2. You will be asked to enter your new password, select a 4-digit code that you will find easy to remember and enter it in the space provided.
3. Press **OK** soft key and a message will pop up asking you to confirm your new lock code.
4. Re-enter the new code and press **OK** soft key a second time.
5. The code will be saved.

Restrict:

This feature allows you to restrict access to certain features of your phone. Once you turn a restriction on in reference to a certain feature you will have to enter your 4-digit lock code to be able to access that feature. You can restrict your Incoming Calls, Outgoing Calls, or restrict access to your Messages and Phonebook features.

1. To set up your **Restrict** choose option 3 or scroll to **Restrict** with your navigation key and press **OK** soft key.
2. You will have the choice of turning your restrictions **on** or **off** for the following features: **Incoming Call, Outgoing Call, Messages and Phonebook**.
 - Incoming Call set to YES : All incoming calls will be restricted. You cannot receive calls if it is set to YES.
 - Outgoing Call set to YES : You can place calls only to emergency numbers. You can still receive calls.
 - Messages set to YES : You will have to enter 4-digit lock code to access Message menu.
 - Phone Book set to YES : You will have to enter 4-digit lock code to access Phone Book menu.
3. To set your restrictions on for any of the above features, scroll to the desired feature with your navigation key and press **OK** soft key.
4. Once you have activated the **Restrict** your phone will return a confirmation message letting you know that feature has been restricted.
5. Keep in mind, once you have made a feature restricted you will not be able to access it without knowing your lock code.

Emergency #s:

This feature allows you to store up to three emergency numbers. These numbers can always be dialed, even when your phone is locked or when your outgoing calls are restricted.

1. To set up your **Emergency #s** choose option 4 or scroll to **Emergency #s** with your navigation key and press **OK** soft key.

2. You will see spaces on your display for three emergency numbers, to store your first emergency number scroll to **Emergency 1**, and press **OK** soft key or press the number 1.
3. Enter the number that you wish to store, and press **Menu** with the left soft key, select **Save** to store, **Cancel** to move back one level on your display or **Delete** to erase a number that was previously stored.
4. To store your first emergency number highlight **Save** with soft key, a confirmation message will appear saying “Emergency number saved”

- Repeat steps 2-4 to store Emergency numbers 2 and 3.

Clear Memory:

This feature will delete all information stored in your Call History, Phone Book or your Schedule. **Be very careful using this feature. Once you have chose to delete all of a features memory you cannot resurrect it. Do not use this feature if you are only trying to erase one phone number.**

1. To set up your **Clear Memory** choose option 5 or scroll to **Clear Memory** with your navigation key and press **OK** soft key.
2. You will have the choice of clearing your **Call History's**, **Phonebook's**, or **Schedule's** memory, scroll to the feature you want to clear and press **OK** soft key, you will receive a warning message staying “this will delete all data in the ____”.
3. Select **Yes** to proceed and **No** to exit this menu option with out losing any information
4. Once you have selected **Yes** you will receive a confirmation message letting you know that the memory for your selected feature has been erased.

Reset Phone:

This feature changes all of the settings on your phone back to the original factory defaults.

Use extreme caution with this feature, once activated all of your chosen settings are gone and not restorable.

1. To set up your **Reset Phone** choose option 6 or scroll to **Reset Phone** with your navigation key and press **OK** soft key.
2. You will have the choice of **Reset Settings** which resets all of your personal selections (keypad volume, automatic answer etc.) back to the factory defaults or **Reset All** which resets all of your personal selections as well as clearing the memory in your **Phonebook**, **Organizer** and **Call History**.
3. Make your selection by highlighting your Reset option with the navigation key and pressing **OK** soft key, you will receive a warning message letting you know that your information is about to be erased and you will have the option of selecting **Yes** to proceed or **No** to exit the menu with out losing any information.
4. If you choose either of the reset options, a confirmation message will appear on the display of your phone, it will pause, then will power off and back on, once the phone powers on all information in the selected reset option will be set back to the factory default.

System

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **System** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 4.
5. You will have the option of setting up your **Roaming**, **Preferred Mode**, **Auto NAM**, **Set NAM**, **Location and TTY**.

Roaming:

This feature should be setup by your cellular carrier and you should not change any of the settings without their prior instruction and approval. These settings will affect your monthly billing amounts and your phones Network performance.

It allows you to select which system your phone is setup to access when you make outgoing calls. You will have to enter your 4-digit lock code before being able to change your Roaming Settings.

1. To set up your **Roaming** choose option 1 or scroll to **Roaming** with your navigation key and press **OK** soft key.
2. A warning message will appear on the display stating "this can affect your phone's activation".
3. You will be asked to enter the phones 4-digit lock code before being allowed access to your **Roaming** feature menu, **the factory default for your 4-digit lock code is 0000**, once this code is entered your phone will automatically advance to the **Roaming** menu.
4. You will be given the choice of setting your phone to: **Standard, Home Only**. These selections are best chosen by your cellular carrier and you should not change them with their knowledge and approval.
5. If you do consult with your carrier and they instruct you to change your Roaming Settings highlight the option you wish to choose, and press **OK** soft key.
6. Make your selection by highlighting your choice with your navigation key and pressing **OK** soft key.

Preferred Mode:

This feature allows your phone to automatically select from a digital or analog system preference depending on which system has a stronger signal or allows you to force the phone to search for either a digital or analog system.

1. To set up your **Preferred Mode** choose option 2 or scroll to **Preferred Mode** with your navigation key and press **OK** soft key.
2. You will be able to choose from System Select: **Automatic, Digital Only** or **Analog Only**, these selections are best chosen by your cellular carrier and you should not change them with their knowledge and approval.
3. Once you have contacted your carrier and they have instructed you which is the best choice to set your System Selection to scroll to your desired option and press **OK** soft key, your phone will return a confirmation message letting you know that your choice has been activated.

Auto NAM:

This feature allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area. Leave this setting as the default unless you want to alter the NAM selection (as instructed by your service provider).

1. To set up your **Auto NAM** choose option 3 or scroll to **Auto NAM** with your navigation key and press **OK** soft key.
2. You will have the choice of turning your Auto NAM **on** or **off**.
3. Scroll to the desired feature with your navigation key and press **OK** soft key.

Set NAM:

Select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. To set up your **Set NAM** choose option 4 or scroll to **Set NAM** with your navigation key and press **OK** soft key.
2. You will have the choice:
NAM 1
NAM 2
3. Scroll to the desired feature with your navigation key and press **OK** soft key.

Location:

This feature allows you to set your GPS setting to make network emergency calls only (911 with in the USA) or to always on.

1. To set up your **Location** choose option 5 or scroll to **Location** with your navigation key and press **OK** soft key.
2. You will see two choices, **Location On** or **911 only**.
3. Make your selection by scrolling with your navigation key until the desired option is highlighted then pressing press **OK** soft key.

TTY Settings:

This feature enables this phone to be used with certain hearing aide devices.

1. To set up your **TTY** choose option 5 or scroll to **TTY** with your navigation key and press **OK** soft key.
2. The display will offer several options; you can select to have TTY Settings set to:

TTY Full

TTY Talk

TTY Hear

TTY Off

3. To make your selection scroll to your preference with the navigation key and press **OK** soft key.
4. The phone will display a message confirming your choice or letting you know that TTY mode has been turned off.

Language

This feature allows you to choose the language displayed in your phones menus. You can select from English, Spanish. Once you designate a language as active everything on your display reverts to that language.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **Language** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 5.
5. You will see a list of languages on your display, scroll with your navigation key until the language of your choice is highlighted and press **OK** soft key.
6. The phone will display a confirmation message letting you know what language was selected.

Call Settings

The Setup feature allows you to customize the functionality of your phone to best suite your daily needs.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **Call Settings** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 6.

Auto Redial:

This feature will automatically redial the last number you attempted to call if the call attempt failed. You can choose to have this feature attempt to redial after 10, 20, or 30 seconds.

1. To set up your **Auto Redial** choose option 1 or scroll to **Auto Redial** with your navigation key and press **OK** soft key.
2. The display will offer the options of having Auto Redial feature set to :

Off

After 10 Sec

After 20 Sec

After 30 Sec

3. To make your selection highlight your preference with the navigation key and press **OK** soft key.
4. The phone will display a message confirming your choice or letting you know that Auto Redial has been turned off .

Auto Answer:

This feature will allow you to set your phone to automatically answer calls for a pre-set amount of time. The Auto Answer feature is especially helpful while you are in the car. You can choose to have 5, 10, or 20 seconds elapse before an incoming call is allowed to connect.

1. To set up your **Auto Answer** choose option 2 or scroll to **Auto Answer** with your navigation key and press **OK** soft key.
2. The display will offer the options of having the Auto Answer feature set to :

Off

After 5 Sec

After 10 Sec

After 20 Sec

3. To make your selection highlight your preference with the navigation key and press **OK** soft key.
4. The phone will display a message confirming your choice or letting you know that Auto Answer has been turned off .

Auto Hyphen:

This feature will automatically insert hyphens where appropriate, when you are storing or dialing a number.

1. To set up your **Auto Hyphen** choose option 3 or scroll to **Auto Hyphen** with your navigation key and press **OK** soft key.
2. The phone will ask, Auto Hyphen **On** or **Off**. If you choose to turn this feature **Off** your stored and dialed numbers will appear as one uninterrupted series. If this feature is set to **On** hyphens will be inserted where appropriate (for example: 123-123-1234 in the USA).
3. The phone will display a message confirming that you have set this feature on or off.

Answer Call:

This feature allows you to determine when to answer the phone.

1. To set up your **Answer Call** choose option 4 or scroll to **Answer Call** with your navigation key and press **OK** soft key.
2. The phone will ask, **Any Key** or **Send Only**. If you choose **Any Key** your phone will answer when any key is pressed. If you choose **Send Only**, you have to press Send key to receive the call.

Data Settings

In Data setting, you can use your phone to transmit data and faxes.

This feature sets up your preferences for all of the phones data services, including: Data Rate, you can set up the speed of your data transmission and Incoming Mode, you can decide if you want to be able to receive incoming Voice, Modem or Fax information.

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.

4. Select **Data Settings** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 7.

Data Rate:

This feature sets the speed of connection between your phone and a Personal Computer if they were connected and exchanging information. The speed talked about here depends on carrier's network and other variables.

1. To set up your **Data Rate** choose option 1 or scroll to **Data Rate** with your navigation key and press **OK** soft key.
2. You will be asked to choose between a rate of **19200**, **115200**, and **230400**. Make your selection by highlighting your choice with your navigation key and pressing **OK** soft key.
3. Once you selection has been made your phone will display a confirmation message stating "Data Rate is set to ____ --bps".

Incoming Mode:

This feature determines what incoming information will be addressed by the phone and what information will be ignored, for example if you activate Fax Only Mode, you will not be able to answer voice calls with your phone.

1. To set up your **Incoming Mode** choose option 2 or scroll to **Incoming Mode** with your navigation key and press **OK** soft key.
2. You will be asked to choose from **Voice Only**, **Modem Only** or **Fax Only** mode.
3. Make your selection by scrolling with your navigation key until the desired option is highlighted then pressing **OK** soft key.
4. If you choose **Modem Only** or **Fax Only** be aware that you will not be able to receive incoming voice calls.
5. The phone will display a confirmation message letting you know what option you have selected.

Phone Info

1. Enter your feature menu by pressing **MENU** with the left soft key.
2. Use the navigation key to scroll to the **Settings** Feature.
3. Select the **Settings** feature by pushing **OK** with the right soft key or pushing the number 5.
4. Select **Phone Info** by scrolling with your navigation key until that option is highlighted and pushing **OK** with the right soft key, or by pressing the number 8.

My Phone Number:

This feature will remind you of the phone number that has been programmed into your phone by your carrier.

1. To set up your **My Phone #**, choose option 1 or scroll to **My Phone #** with your navigation key and press **OK** soft key.
2. The phone's carrier assigned number will flash across the display.

S/W Version

This feature displays the current software file that has been loaded into your phone.

1. To set up your **S/W Version**, choose option 2 or scroll to **S/W Version** with your navigation key and press **OK** soft key.
2. The display will show all of the necessary information regarding your phones software.

Games

WTE-500 has three games for your fun.

Go! Hamster:

Your Hamster must leave out a dark world against evil monster by enlarging brighten areas for peace.

1. Enter your **Games** menu by pushing **2nd** soft key and pressing the navigation key to the left or enter **Menu** feature and then scroll the navigation key to the **Games** feature.
2. Use the navigation key to scroll to the **Go! Hamster** and press **OK** soft key, or press the number 1 to enter the **Go! Hamster**.
3. Press the number 1 for New Game.
4. Press the right soft key to start the game.
5. To move the hamster upward, press the navigation key to the up or press the number 2.
To move the hamster downward, press the navigation key to the down or press the number 8.
To move the hamster left, press the navigation key to the left or press the number 4.
To move the hamster right, press the navigation key to the right or press the number 6.
To stop the hamster, press the number 5.
6. To pause the game, press **Clear** key. To release a pause, press **Clear** key again.
7. If you receive a call during playing the game, you will be able to continue the game by selecting **Continue** feature after finishing phone conversation and back to game mode.
8. To exit the game, press **END** key.

X-Ship:

1. Enter your **Games** menu by pushing **2nd** soft key and pressing the navigation key to the left or enter **Menu** feature and then scroll the navigation key to the **Games** feature.
2. Use the navigation key to scroll to the **X-ship** and press **OK** soft key, or press the number 2 to enter the **X-ship**.
3. Press the number 1 for New Game.
4. Press the right soft key to start the game.
5. To move the spaceship upward press the navigation key to the up or press the number 5.
To move the spaceship downward, press the navigation key to the down or press the number 8.
To move the spaceship left, press the navigation key to the left or press the number 7.
To move the spaceship right, press the navigation key to the right or press the number 9.
For bombing, press the right hand side of soft key or press the number 3.
To shoot, press the left hand side of soft key or press the number 1.
6. To pause the game, press **Clear** key. To release a pause, press **Clear** key again.
7. If you receive a call during playing the game, you will be able to continue the game by selecting **Continue** feature after finishing phone conversation and back to game mode.
8. To exit the game, press **END** key.

Web Browser

The MiniBrowser feature allows you to view internet content, via your service provider, especially designed for your mobile phone. Access and selections within this feature are dependent upon your service provider. For specific information on MiniBrowser access through your phone, contact your service provider.

Start Browser

1. Enter your **Web Browser** menu by pushing the **2nd** soft key or enter **Menu** feature and then scroll the navigation key to the **Web Browser** feature.
2. A reminder of the charge will appear; press **OK** to launch MiniBrowser, if required.
3. After a few seconds, you see the Home Page.

Ending Minibrowser Session

You can end a Minibrowser session by pressing **END** key.

Brew

Brew allows you to download and use applications on your phone. This feature depends on your service provider's network. Please contact your service provider for this service.

1. Enter your **Brew** menu by pushing the navigation key to the up or enter **Menu** feature and then scroll the navigation key to the **Brew** feature.
2. Main display of Brew will appear.
3. Select icon and press **OK** with the right soft key.

Entering text, numbers and/or symbols

When using your phone, you will need to enter the text in the display screen.

(For example, adding e-mail address, storing a name in the phone book, entering events in the schedule, or inputting text message. If you want to enter text on the screen,

1. When you are entering events, numbers, or text in your phone select **MENU** key to view the options:

T9 Eng: This is the predictive word entry mode. You can quickly and easily enter frequently used words.

ABC: This is the text entry mode.

123: This is the number entry mode.

Symbol: This is used with numeric keys and associated symbols.

2. Scrolling down until you want to select by pressing **OK** soft key.

Press  to insert space.

Press **Clear** key to clear the last letter, number, or symbol.

Press and hold **Clear** key to completely clear the input field.

3. To change the input mode again, press **MENU** key again and scroll down to your choice and select by pressing **OK** soft key.

T9 text entry

The T9 predictive text input mode allows you to key in any character using single key strokes. The text input mode is based on a built-in dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press each key only once for one letter.

Example : To enter LOVE in the T9 mode, press  ->  ->  -> .

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the complete word before editing or deleting the keystrokes.

3. If the word is not correct, press  repeatedly to display alternate word choices for the keys that you have pressed.

To type words not found in the T9 mode, change the ext input mode to the ABC character input mode.

Alphabetical (ABC) text entry

Press the key labeled with the required letter.

Press the same key repeatedly to change between the characters represented by each key.

To change capitalization formats, while entering text, press .

Number entry

The number mode enables you to enter numbers in a text message.

Symbol entry

The symbol mode enables you to insert symbols in a text message.

Use the navigation key to scroll to the desired symbol and the press **OK** soft key to insert the highlighted symbol into your message.

Safety information

1. 10 Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice-almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.

2. When available, use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.

5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.

Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary.

If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

“The wireless industry reminds you to use your phone safely when driving. ”

**For more information, please call 1-888-901-SAFE, or
visit our website www.wowcom.comTM**

Provided by the Cellular Telecommunications & Internet Association

Read this information before using your phone

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Acknowledging Special Precautions and the FCC Industry Canada Notice

Cautions

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance Information

This device complies with part 15 of FCC Rules.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and*
- 2. This device must accept any interference received.*

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio Frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*

Consult the dealer or an experienced radio/TV technician for help.

Consumer Information on SAR

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6W/kg.*

Tests for SAR are conducted using

standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.45W/kg(AMPS), 1.31W/kg(CDMA) and 1.44W/kg, and when worn on the body, as described in this user guide, is 1.40W/kg(AMPS), 1.30W/kg and 1.44W/kg.(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

Body-worn Operation

This device has been tested for body-worn operation and meets FCC RF exposure guidelines, when used with an accessory that contains no metal components, and positions the handset at a minimum of 1.5Cm from the body. Use of any body-worn accessories may not compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID POQWTE-500

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://www.phonefacts.net>

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.