

Instruction manual

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: PPAANGEL3 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a


residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Device description

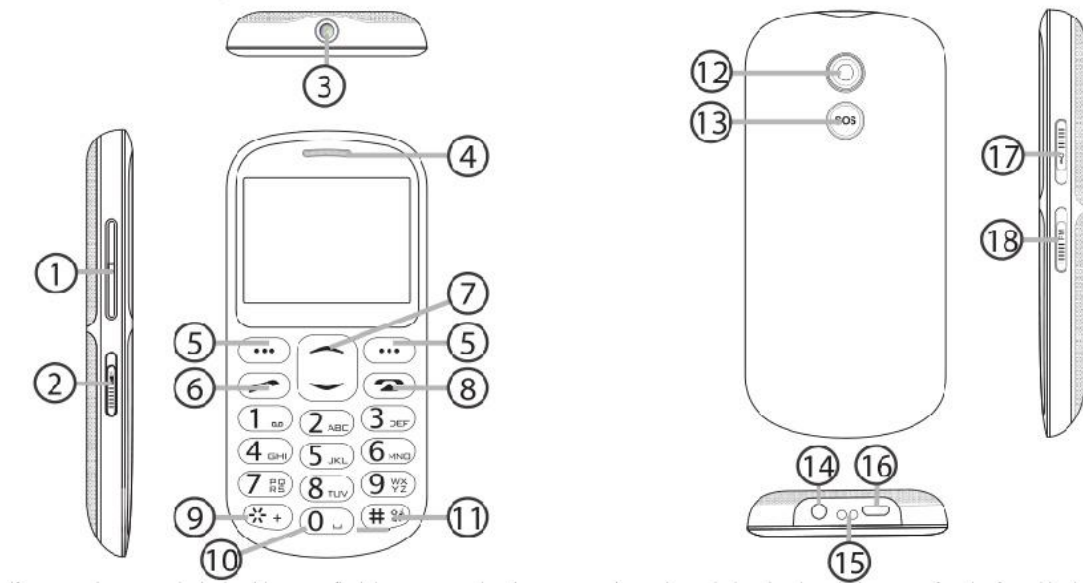

1. Volume keys
2. Torch switch: slide to turn on/off
3. Torch
4. Phone speaker
5. Left/Right soft key: press to perform the function currently displayed in the bottom left/right corner of the screen
6. Dial key: answer all calls, make calls from SIM1/SIM2 card, view call logs in standby mode.
7. Navigation key: within a menu, press Up, Down to scroll through menu options.
8. End/Power key: press and hold to turn on/off the device, end a call or reject an incoming call, return to the standby mode.
9. * Key: press to popup the symbols screen when entering text.
10. 0 Key: press to enter Space when editing text
11. # Key: in standby mode, Long press # key can switch between the silent mode and General mode. Press to switch the input methods when entering text.
12. Camera
13. SOS key: press to make an emergency call
14. Headset jack
15. Dock connector: to link the device to the dock station.
16. Micro-USB port: to charge your device or connect it to a PC.
17. Lock switch: slide to lock/unlock your device
18. Radio switch: slide to turn on/off the radio.

Assembling

After you have unpacked your mobile phone box:

1. Remove the device's back cover using the notch.
2. Insert your SIM card or Memory card in the corresponding slot.
3. Insert the battery.
4. Replace the back cover.


2G slot 1 When inserting your SIM card or micro-SD card, make sure to follow the illustration, otherwise you may damage the slot or the card.

2G slot 2

Micro-SD card slot 3

Please note that you must turn the phone off before removing or inserting a SIM.

Failure to do so may result in damage to the SIM.

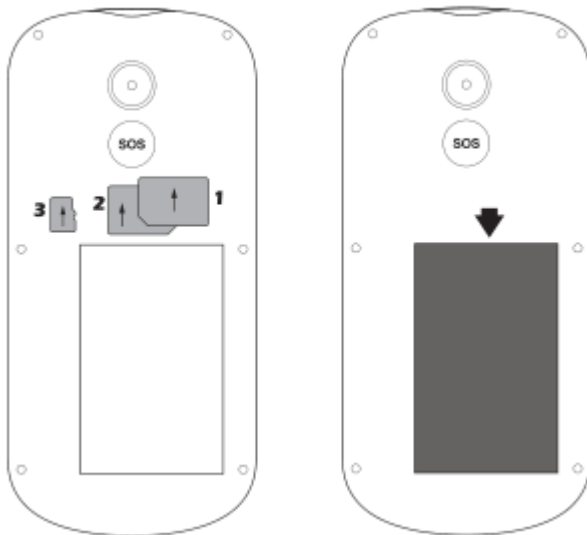

Icon description



Vertical bars indicate the signal strength of the GSM network signal. Five bars indicate that your current position has the best reception.



Indicates the battery charge level.



Indicates you have one or more unread messages.



Indicates there is a missed call.



Indicates that the alarm clock is on.



Indicates your phone is in "Silent" mode.



Indicates earphones are connected to the 3.5mm jack socket.



Indicates you are using Bluetooth.

Using your SIM Free

You'll be up and running in no time

Turning ON/OFF

To turn your phone on,

1. Press and hold the End/Power key.
2. Enter your PIN and press OK if necessary.

When the setup wizard opens, customise your phone as desired by following the screen.

If the battery remains fully discharged or removed from the phone, the time and date will be reset.

3. To turn your phone off, press and hold the End/Power key.

Making a call

1. In the device's homescreen, enter a phone number.

For an international call, do not forget to enter the country code.

2. Press the Dial key to dial the number.
3. To end the call, press the End/Power key .

Using your SIM Free

You'll be up and running in no time

Answering a call

1. When a call comes in, press the Dial key.
2. To end the call, press the End/Power key.

Adjusting the volume during a call

During a call, press the Volume keys to increase or decrease the volume.

Accessing all menus

1. From the homescreen, press the Left soft key.
2. Use the Navigation Key to choose the desired operation and press the Left soft key to enter the selected operation.

You can exit a menu and return to standby mode by pressing the Right Soft key or the End key.

Changing your ringtone

1. From the homescreen, press the Left soft key.
2. Select Profiles.
3. Select the desired profile and select Options with the Left soft key.
4. Scroll down to select Customize and press the Left soft key.
5. Customize your notifications and sounds.

Calling a recently dialled number

1. In the device's homescreen, press the Dial key.

Scroll up or down to a number or name.

2. Press the Left soft key to view details of the call or to dial the number.

Adding a new contact

1. From the homescreen, select the Right soft key to open the Phonebook.
2. Press the Left soft key to open Options, then New.
3. Enter the contact information and press the Left soft key to save.
4. In the Phonebook, press the Left soft key to open Option.
5. Scroll down to select Phonebook settings > Preferred storage.
6. Select the desired storage

Creating an SMS

1. From the homescreen, press the Left soft key and scroll to select Messages.
2. Select Write Message > Text message.
3. Enter your text. Press the Left soft key to select Options, then OK.

To switch between the input methods, press # and select an option.

1. Enter your text.
2. Press the Left soft key to select Options, then Send.

Writing modes

To switch between ABC, Abc, abc and 123 modes, press the # key in the writing message section. The selected mode is displayed in the upper left corner.

Writing language

When you start writing a message, select Options > Input method options >

Writing language Other features for text input

- To move the cursor, press the Navigation key.
- To delete characters one by one, press Clear.
- To delete words quickly, press and hold Clear.
- To insert a space between characters, press 0

Bluetooth

Turn on the Bluetooth, enter the Bluetooth interface to search for other Bluetooth devices, search for Bluetooth devices can be paired and connected. Press the menu key to select the appropriate options to set.

GPS

You can set up to allow access to your location information, using the GPS for make sure the location.

Radio

Radio interface, click on the channel list to view all existing channels, click on the recording can begin recording radio sound, click the search channel can automatically search the channel, click stop can stop playing radio.

Product support

Help is always at hand

Troubleshooting

Unable to turn on: press the power on key for over 2 seconds. Check if the battery is properly connected. Please remove and install it again, retry to turn on. Connect the device to its charger to charge the battery.

Unable to connect network: please try to move to a location with a strong signal and try connecting to the network again. Please ensure that you are not beyond the network coverage of your service provider. Please ensure that you have a valid SIM card. Please contact your network provider for further information.

Poor quality of calling: press the volume buttons to increase the volume sound. In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with a stronger signal and make a call again.

While using the mobile phone in peak periods of communication, like commute time, you may be unable to call because of line congestion.