

The users will see the label when removing the back cover to install the battery

Back Cover

EUT Back (Inside)

Label Location

