

Aspire R 13

Quick Guide

Enjoy the benefits of having an Acer ID

With an Acer ID, you can:

- Build Your Own Cloud with Acer BYOC.
- Get the latest offers and product information.
- Register your device for warranty service.

How to sign up for an Acer ID

1. Ensure you are connected to the Internet.
2. Open the *Acer Portal* app.
3. Install any required updates.
4. Sign up for an Acer ID or sign in if you already have an Acer ID.

Register your Acer product

You can register your product from Acer Portal directly by selecting

Also use this Acer ID to register this product.

After we receive your product registration, you will be sent a confirmation email with important data. Keep this email in a safe place.

Manage your registered products

Once you have completed the registration process, you can log onto **account.acer.com** using your Acer ID and password to see and manage all your registered products.

Note: *It may take a few days for your information to be updated to the database.*

Obtaining Acer accessories

We are happy to inform you that Acer's warranty extension program and notebook accessories are available online. Come and visit our online shop and find what you need at **store.acer.com**.

The Acer Store is being progressively rolled out, and may not yet be available in some regions. Please check regularly to see when it will be available in your country.

© 2015. All Rights Reserved.

Aspire R 13

Covers: Aspire R7-372T

This revision: August 2015

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

ENVIRONMENT

Temperature:

- Operating: 5 °C to 35 °C
- Non-operating: -20 °C to 65 °C

Humidity (non-condensing):

- Operating: 20% to 80%
- Non-operating: 20% to 80%

First things first

We would like to thank you for making an Acer notebook your choice for meeting your mobile computing needs.

Your guides

To help you use your Acer notebook, we have designed a set of guides:

First off, the **Setup Guide** helps you get started with setting up your computer.

The **Quick Guide** introduces you to the basic features and functions of your new computer.

For more on how your computer can help you to be more productive, please refer to the **Aspire R 13 User's Manual**. The **Aspire R 13 User's Manual** contains useful information applying to your new computer. It covers basic topics such as using the keyboard and audio, etc.

This guide contains detailed information on such subjects as system utilities, data recovery, expansion options and troubleshooting. In addition it contains warranty information and the general regulations and safety notices for your notebook.

The User's Manual can be downloaded from the Acer support website by going to:

<http://go.acer.com/?id=17883>

Software installation

The first time you turn on your computer, it will automatically install software and set up for use. This may take some time, please do not turn off your computer; wait until the installation has finished.

Recovery

You should create recovery backups as soon as you can. The *Acer Recovery Management* program allows you to create recovery backups and then to restore or reinstall applications and drivers provided by Acer.

Having trouble?

Acer provides several options to support your purchase.

Acer support

Make sure you write down your computer serial number, date and place of purchase and model name on the area provided in this guide; save your proof of purchase. Before you call us, please write down any error message that accompanies the

problem, and have the computer in front of you and switched on if possible. Having these items to hand when contacting us will ensure better and quicker service.

Acer website

Remember to visit **www.acer.com** and refer to the support section for up-to-date information, help, drivers and downloads.

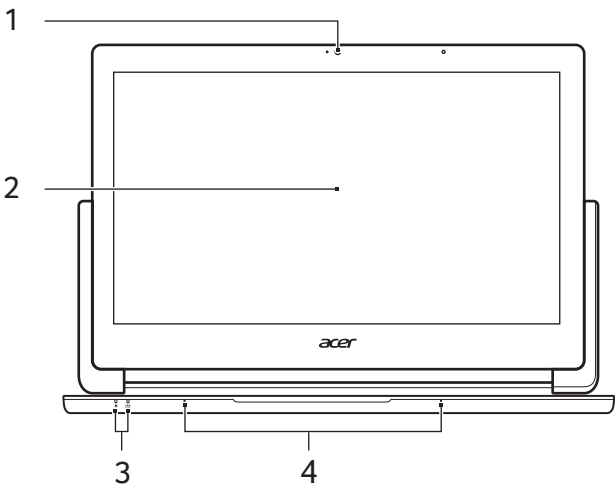 
Warranty and contact information



You can find information about the warranty for your computer and how to contact technical support in your computer's Warranty.

Your Acer notebook tour

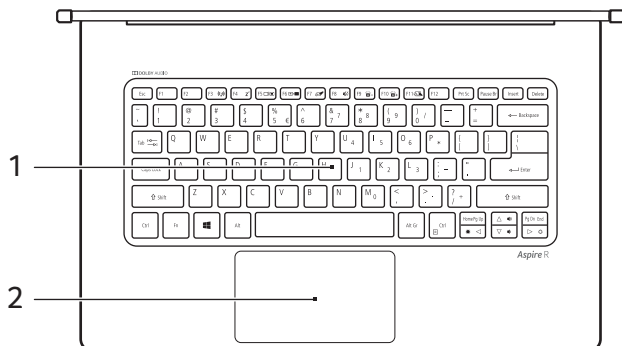 
After setting up your computer as illustrated in the Setup Guide, let us show you around your new Acer computer.

Screen view



 
| # | Icon | Item | Description |
|---|---|-------------------|---|
| 1 | | Webcam | Web camera for video communication. <i>A light next to the webcam indicates that the webcam is active.</i> |
| 2 | | Touchscreen | Displays computer output, supports multi-touch input. |
| 3 |  | Battery indicator | Indicates the computer's battery status. Charging: <i>The light shows amber when the battery is charging.</i> Fully charged: <i>The light shows blue when in AC mode.</i> |
| |  | Power indicator | Indicates the computer's power status. |
| 4 | | Microphones | Internal stereo microphones for sound recording. |

Keyboard view





| # | Icon | Item | Description |
|---|------|----------|---|
| 1 | | Keyboard | For entering data into your computer. <i>See "Using the keyboard" on page 8.</i> |
| 2 | | Touchpad | Touch-sensitive pointing device. <i>The touchpad and selection buttons form a single surface.</i> <i>Press down firmly on the touchpad surface to perform a left click.</i> <i>Press down firmly on the lower right corner to perform a right click.</i> |

Left view



 
| # | Icon | Item | Description |
|---|------|----------------------------------|--|
| 1 | HDMI | HDMI port | Supports high-definition digital video connections. |
| 2 | ⚡ | USB Type-C / Thunderbolt 3 port | Connects to USB devices that adopt the USB Type-C connector. Supports Thunderbolt 3, displays, and USB 3.1 Type-C, Gen 2 with transfer speeds up to 10 Gb/s. |
| 3 | USB | USB port with power-off charging | Connects to USB devices. |






| # | Icon | Item | Description |
|---|---|----------------------|--|
| 4 |  | USB port | Connects to USB devices. |
| 5 |  | Headset/speaker jack | Connects to audio devices (e.g., speakers, headphones) or a headset with microphone. |

Information on USB 3.0

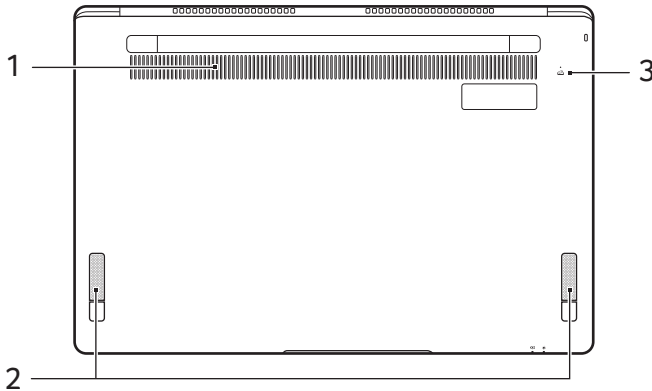 
- USB 3.0 compatible ports are blue.
- Compatible with USB 3.0 and earlier devices.
- For optimal performance, use USB 3.0-certified devices.
- Defined by the USB 3.0 specification (SuperSpeed USB).


Right view



| # | Icon | Item | Description |
|---|---|--------------------|--|
| 1 |  | SD card reader | Accepts one Secure Digital (SD or SDHC) card. <i>Only one card can operate at a time.</i> |
| 2 |  | Volume control key | Adjusts the system volume. |
| 3 |  | USB port | Connects to USB devices. |
| 4 |  | Power button | Turns the computer on and off. |
| 5 |  | DC-in jack | Connects to an AC adapter. |

Base view



| # | Icon | Item | Description |
|---|---|-----------------------------|---|
| 1 | | Ventilation and cooling fan | Allows the computer to stay cool. <i>Do not cover or obstruct the openings.</i> |
| 2 | | Speakers | Deliver stereo audio output. |
| 3 |  | Battery reset pinhole | Simulates removing and reinstalling the battery. <i>Insert a paperclip into the hole and press for four seconds.</i> |



Using the keyboard












The keyboard has full-sized keys and an embedded numeric keypad, separate cursor, lock, Windows, function and special keys.

Hotkeys

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightness and volume output.

To activate hotkeys, press and hold the <Fn> key before pressing the other key in the hotkey combination.

| Hotkey | Icon | Function | Description |
|-------------|---|---------------|--|
| <Fn> + <F3> |  | Airplane mode | Turns on / off the computer's network devices. |
| <Fn> + <F4> |  | Sleep | Puts the computer in Sleep mode. |

| Hotkey | Icon | Function | Description |
|--------------|---|------------------------------------|---|
| <Fn> + <F5> |  | Display toggle | Switches display output between the display screen, external monitor (if connected) and both. |
| <Fn> + <F6> |  | Display off | Turns the display screen backlight off to save power. Press any key to return. |
| <Fn> + <F7> |  | Touchpad toggle | Turns the built-in touchpad on and off. |
| <Fn> + <F8> |  | Speaker toggle | Turns the speakers on and off. |
| <Fn> + <F9> |  | Keyboard backlight brightness down | Decreases the keyboard backlight brightness. |
| <Fn> + <F10> |  | Keyboard backlight brightness up | Increases the keyboard backlight brightness. |
| <Fn> + <F11> |  | Touchscreen toggle | Turns the touchscreen function on or off. |
| <Fn> + <↑> |  | Brightness up | Increases the screen brightness. |
| <Fn> + <↓> |  | Brightness down | Decreases the screen brightness. |
| <Fn> + <↑> |  | Volume up | Increases the sound volume. |
| <Fn> + <↓> |  | Volume down | Decreases the sound volume. |