

List of Menu Functions

1. Menu Structure

- Organizer
- Messages
- Call Info
- Sound
- Settings
- Security
- Extras

Organizer

1. Find Number
 - ① By Name
 - ② By Number
 - ③ By Address
 - ④ By Group
2. Add Number
3. Check Memory
4. Clear Memory
5. Scheduler
6. Find Schedule
7. Del Schedule
8. Own Number
9. SW Version

Messages

1. Text MSG
2. Voice MSG
3. Send MSG
 - ① New Message
 - ② Preset Message
 - ③ Inbox Message
 - ④ Outbox Messages
4. Delete MSG
5. MSG Setting

- ① Alert Beep
- ② Validity

Call Info

- 1. Call List
- 2. Time Info
 - ① Last Call
 - ② All Calls
 - ③ Dialed Calls
 - ④ Answered Calls
- 3. Clear Calls

Sound

- 1. Company Call
 - ① Sound1 ~ 6
 - ② Melody1 ~14
- 2. Family Call
 - ① Sound1 ~ 6
 - ② Melody 1 ~ 14
- 3. Friend Call
 - ① Sound1 ~ 6
 - ② Melody 1 ~ 14
- 4. Other Call
 - ① Sound1 ~ 6
 - ② Melody 1 ~14
- 5. Ring Volume
 - ① Off
 - ② Low
 - ③ Medium
 - ④ Medium High
 - ⑤ High
 - ⑥ Increasing
- 6. Ring Type
 - ① Ring
 - ② Vib
 - ③ Vib + Ring

7. Key Beep
 - ① Short
 - ② Long
8. Call Volume
 - ① Low
 - ② Medium
 - ③ Medium High
 - ④ High
9. Connect Tone
 - ① Enable
 - ② Disable

Settings

1. LED Display
2. Time Remind
 - ① Off
 - ② 1 Minute
3. Display Time
 - ① Analog
 - ② Digital
 - ③ Picture1
 - ④ Picture2
 - ⑤ Picture3
4. Backlight
 - ① Auto
 - ② Always
 - ③ 10sec
 - ④ Off
5. Edit Banner
6. Contrast
7. Caller ID
 - ① On
 - ② Off
8. Language
 - ① English
 - ② Chinese
9. Initializing

Security

1. Lock
 - ① Unlock
 - ② Power Up
 - ③ 1 Time
2. Change Code
3. Call Barring
 - ① Disable
 - ② All Calls
 - ③ International Calls
4. E-call Edit


Extras

1. Alarm Clock
 - ① Off
 - ② 1 Time
 - ③ Repeat Everyday
2. Calculator
3. World Clock
4. Games
 - ① Tetris
 - ② Puzzle
5. Answering Mode
6. Voice Recording
7. Play Voice


GETTING STARTED

Overview

Front View of the Phone

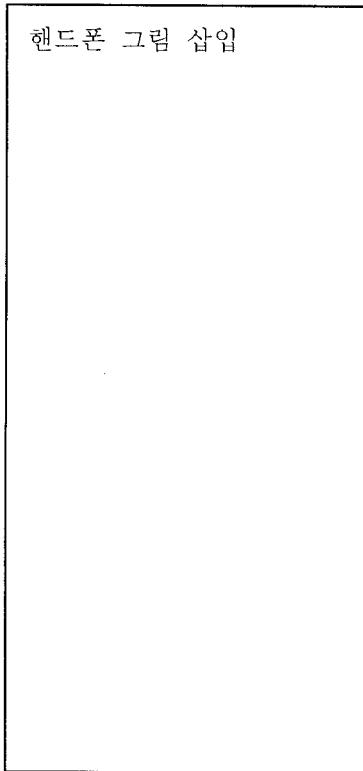

Rear View of the Phone

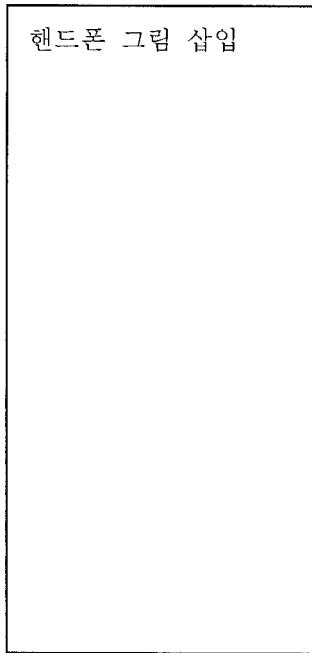

Assembly

You need to do the following to use your phone:

- ▶ insert the SIM card
- ▶ attach the battery to the phone
- ▶ charge the battery

The SIM Card

The SIM (Subscriber Identity Module) card contains a computer chip that keeps track of your phone number and your phone book information among other things.

Before installing the SIM card, always make sure that the phone is switched off and then remove the battery. The SIM card is inserted beneath the phone's battery.

Inserting the SIM Card

1. Remove the battery (if attached).
2. Press the top of the SIM card cover downwards and open the cover.
3. Slide the SIM card carefully into the SIM card slot (xx).

Make sure that the golden connectors on the card are facing downwards to align with the corresponding connectors on the phone.

The Battery

Your phone comes with two rechargeable batteries. A new battery must be charged for at least 4 hours before it is used for the first time. The battery provides approximately xx hours of continuous digital talk time (xx hours in analog) or approximately xx hours of continuous digital standby time (xx hours in analog).

When your battery has run down, an alarm signal sounds and the message 'Low Battery Warning!' appears in the display and the signal is repeated several times. If you continue to operate the phone without charging, the phone turns itself off when the battery can no longer power it satisfactorily. Be sure to charge your phone's battery and watch your battery meter to ensure your battery is adequately charged.

Attaching the Battery to Your Phone

Follow these steps to install the battery:

1. Hold the battery so that the charging points on the base of the battery line up with the charging points on the base of the phone.
2. Place the battery on the back of the phone and gently push the battery upwards until it clicks firmly into position.

Removing the battery

1. Turn off your phone.
2. Press the battery release latch on the rear of the phone and slide the battery downwards.
3. Lift the battery away from the phone.

Charging the Battery

You are supplied with a battery charger that must be plugged into an appropriate wall socket.

1. Plug the travel adapter into the bottom of the phone.
2. Plug the travel adapter into an appropriate wall socket. Charging begins and the icon  appears in the display.
3. When  is displayed (charging is finished), unplug the adapter from the phone by pressing the two buttons on the side of the adapter plug and pulling the plug.
4. Unplug the adapter from the wall socket.

To indicate charging:

- » A red light on the charger lets you know the battery is charging.
- » When the battery is fully charged, the LED on the front of the charger shows a green light.

Turning your Phone On and Off

Turning your Phone On

Press and hold the End key until you hear a long beep.

After you have turned on the phone, the **Haier** logo appears in the display and the phone searches for a signal. When your phone finds a signal, it automatically enters Standby mode—the phone's idle state. You can now make and receive calls.

Display Language

When you start using your phone for the first time, you must select the language. You can choose Chinese or English. The default language is Chinese.

Turning your Phone Off

In standby mode, press and hold END key until you hear a long beep and the power off graphics of Haier begin to display.

Making a call

Your CWH 100 Phone offers many different ways to place calls, including Speed Dialing and using Call List.

1. Enter the area code and phone number
2. If you make a mistake, press CLR to erase one digit at a time. To clear the whole number, press CLR more than one second.
3. Press the TALK key

While a call is in progress, a time counter automatically starts and you can see how long you have been on the phone.

Ending a call

Press END to end the call.

Re-dialing a Previously Called Number

Press the TALK key and scroll the Call List using an arrow key until the number you want to call appears.

Emergency calls

Enter 112 and press TALK.

* Note! Emergency calls can be also made when your phone is locked.

Answering a call

When a call is received, your phone rings (if this option is set). To answer a call, open the folder and press TALK or just press any key (a call is allowed to be answered by pressing any button).

Display Information and Key Functions

Icons in the Display

This list identifies the symbols you'll see along the top line of your display.

-  provides an approximate indication of signal strength. 4 bars indicate the strongest signal.
-  tells you a call is in progress.
-  means your phone cannot find a signal because you are outside of a service area.
-  indicates your phone is in vibrating mode.
-  indicates your phone has an alarm function activated.
-  means that you have received a text message.
-  means that you have received a voice message.
-  means there are any unread text messages and new voice messages.
-  shows your current battery charge strength. The fuller the icon, the more power there is.
-  shows your phone is in Auto Answer Mode.
-  shows your phone is in Wait Mode.
-  indicates that you muted the phone's microphone.

Key Functions

The basic functions of the phone keys are described below. More information is given throughout this user guide.

KEY	Use
Menu key:	To display the main menu of options on your phone.
Find key:	To search for numbers by Name, Number, Address and Group.
Left / Right:	To access and perform the function indicated by the text above it. Press the arrow keys arrow key to enter a space, while writing text.
Up / Down: arrow keys	To scroll through the menu system
Talk:	To make or answer a call.
End key:	To end a call. Also switched the phone on or off when pressed and held briefly.

CLR:	Erases digits or characters from the display. Press and hold the key to erase all digits or characters. While in menus, press to return the phone to standby mode and cancels your input.
Number keys:	To enter numbers, letters and characters.
Volume keys:	(On the side of your phone). Adjusts the key volume in standby mode. During a call, adjusts the voice volume. In a menu, scrolls up or down through the menu options.
Star :	Press and hold to set the vibrating mode.
Asterisk:	Press and hold to set the lock mode.

Hot Keys

Several keys on your phone can be used to optimize the phone's functionality and decrease the number of times you need to press a key.

1. Auto Answer

The Auto Answer function of your phone allows callers to leave a voice message when you cannot answer your calls.

When it is activated, the icon of a parrot appears in the display, together with the message of *Set Auto Answer Mode*. If you have an incoming call in Auto Answer mode, the LED light on the top of the phone flashes red.

To set the Auto Answer mode, press and hold the Left arrow key until you hear a beep.

You can choose your answering message between **General Greeting** and **Owner's Greeting** to answer automatically an incoming call.

► **General Greeting** - Automatic answering: <I'm not available to take your call. Please leave your message after the beep. Your voice message can be up to 60 seconds in length.

► **Owner's Greeting** - You can record your own personal greeting instead of the phone's built-in general greeting (see "8 Voice Recording" on page xx).

To turn the Auto Answer mode off, press and hold the Left arrow key until you hear a beep. Your phone is now in Wait Mode. Press and hold the Left arrow key again.

2. Wait Mode

Use Wait Mode function to make callers to hold on the line for a moment when you cannot answer an

incoming call at the moment.

When you set the Wait mode, the icon of a hand appears in the display, together with the message of *Set Wait Mode*.

To set the Wait mode, press twice and hold the Left arrow key until you hear a beep.

You can choose your answering message between General Greeting and Owner's Greeting.

- » **General Greeting** - <I cannot take your call at the moment. Please stay on the line. I will be with you shortly>.
- » **Owner's Greeting** - You can record your own Wait Mode greeting instead of the phone's built-in general greeting (see "8 Voice Recording of Extras").

To activate Wait Mode and play your Wait Mode message, press **Side key** when a call is incoming.

- Press **Side key** again if you're still not available to take the call, and your phone is now in Auto Answer Mode.
- Press **Talk** key to answer the call while the Wait Mode greeting is playing.

3. Scheduler

Using One-Touch access to Scheduler:

1. Press the Right arrow key in Standby mode.
2. Your phone shows **Today's Schedule** if there's any.
3. Press **Calendar** to add a schedule (see "10. Scheduler on page xx").

4. Voice Memo

To record a voice memo in Standby mode

1. Press and hold the Down arrow key.
2. The message "Recording" displays, along with the 2-minute timer.
3. Record the voice memo by speaking into the microphone.
4. To save the voice memo with the date and time stamp, press **Save**.
5. To cancel recording, press **Cancel**.

5. Recording during a call

To record a voice memo while on a call:

1. During a call, press the Down arrow key.
2. The icon  displays. Record the voice memo.
3. To stop recording, press the Down arrow key again.

During a call

Changing Call Volume

To change the earpiece volume during a call

Press the volume keys (UP or DOWN) on the side of the phone.

Mute / Unmute

To turn the microphone off temporarily during a call

- » Press **Menu** and select **Mute**. The  indicator is displayed.
- Press **Menu** and select **Unmute** when you wish to reactivate the microphone and resume the conversation with your correspondent.

Memo

If you need to make a note of a phone number during a call, you can use this function.

- » During a call, press **Memo**.
- » Enter a number and press **Save** to store the number in the Call List.

* To exit (return to the In-Call display), press **Cancel**.

Send DTMF

To use telephone banking services or to control an answering machine, you need to use codes. These codes are sent as tone signals.

- » During a call, press **Menu**.
- » Select **Send Own No.**

Recall

You use this menu “RECALL” for recalling all the phone numbers in your personal phone book during a call. You can also recall a number by using Search Function.

- » During a call, press **Menu**.
- » Select **Recall** and your phone shows the Find Number display screen.

* To exit (return to the In-Call display), press **C** key twice.

Menu Functions

ORGANIZER (Personal Information Management)

1. Find Number

You can locate and view your Internal Phone Book Entries. There are four different ways of using the phone book. You can also either make a call or edit an entry in the Phone Book.

* Note: To view all stored entries, press <Soft Right> key (FIND) twice.

1.1 By Name

You can search for Internal Phone Book entries by using the name tag stored with a number.

To find a phone number by name:

1. Press FIND
2. Using the alphanumeric keys, enter the first character of the name that you want to find in your internal phone book.
* Note: You can enter any numbers by using <Soft Left> (MODE) Key (the default text entry mode is Alpha).
3. Press OK. Then stored entries would be displayed. You can also scroll through Internal Phone Book entries using the UP/DOWN arrow keys.
* Note: Press FIND and OK, then stored names display in an alphabetical list.
4. When you find your desired entry, make sure it is highlighted, and then press TALK to place a call, or EDIT to edit the entry.

1.2 By Number

You can search for Internal Phone Book entries with phone numbers that contain a specific string of number.

To find a phone number by number string:

1. Press FIND
2. Change the By Name display to By Number using the Up / Down arrow keys.
3. Enter one or more digits. Press FIND
4. If more than one entry is found, highlight the entry that contains the phone number and press TALK to be connected.

* Note: Enter one or more digits. Press FIND. Then your phone will display the Number entries.

1.3 By Address

To find a phone number by location number:

1. Press FIND
2. Change the By Name display to By Address using the Up / Down arrow keys.
3. Press the corresponding digit keys to enter and display your desired location.
4. Press FIND. Scroll to the desired entry and press TALK to dial the number.

1.4 By Group

1. Press FIND
2. Change the By Name display to By Group using the Up / Down arrow keys.
3. Select a group between <Other> <Family> <Friend> and <Company> by using the Left / Right arrow keys.
4. Press FIND. Scroll to the desired entry and press TALK to dial the number.

2. Add Number

Your CWH 100 phone can store up to 200 phone numbers and each entry in the Phone Book hold up to 3 numbers (Home / Office / Cellular). The Phone Book makes it easier for you to keep track of your phone numbers and to make a call.

To save a number from the Menu **Add Number**:

1. Press **Menu**.
2. Scroll to **Add Number** and press **Select**.
3. Press **Edit** to enter the name that you want to associate with the number.
4. Press **OK** to store the name.
5. Press the Down arrow key to go to the next step.

The first free location number is suggested. To select another available location press:

- » the Left / Right arrow keys to scroll to the desired location and go to the next step or
- » digit keys to go to the desired location and go to the next step.

6. Select a group between **Other**, **Family**, **Friend** and **Company** by using Left / Right arrow keys.
7. You can also make the number secret by using Left / Right arrow keys.

* Note: Your CWH 100 Phone allows you to hide a confidential number so that only a person with your phone's lock code can view the number.

8. Select a label by scrolling Home, Office or Cellular and enter a phone number by pressing digit keys. Press **Save** to store the entry.
9. If the entry has more than two numbers, you have to **Set Key Number** by using **Next** key and press **Select**.

* Note: To save a number on the display

1. Enter a phone number to create a new Phone Book Entry and press **Save**.
2. Enter the name and the follow steps are same as above.

To save a number from **Call List**

1. Press **Talk**, and your phone displays the last 30 incoming and outgoing calls.