

Tamagotchi Uni
2L instruction sheet
size: 10.5" W x 4" H



本说明书请印
PANTONE2393

PRECAUTION: Recharging only under adult supervision and never recharge the product unattended. Please read the enclosed user manual or instruction sheet in detail before recharging the product. USB-type-C charging cable is included.

PRECAUTION : Recharger uniquement sous la surveillance d'un adulte et ne recharge jamais le produit sans surveillance. Veuillez lire en détail le manuel d'utilisation ou la fiche d'instructions ci-jointe avant de recharger le produit. Le câble de charge USB de type C est inclus.



EN - In order to protect the environment, please do not dispose of this product with your household waste. Please dispose of it at a designated collection facility in your area.

FR - Pour protéger l'environnement, ne pas jeter ce produit avec les ordures ménagères; procéder à la collecte sélective mise en place dans votre région.

ES - Para proteger el medio ambiente se ruega no desechar este producto con la basura normal.

Desecharlo en el punto de recogida de residuos especiales de su localidad.

DE - Um die Umwelt zu schützen, sollte dieses Produkt nicht achts in den Hausmüll geworfen werden. Besser ist es, wenn das Produkt an den bekannten offiziellen Recycling Sammelstellen fachgerecht entsorgen lassen - vielen Dank.

PO - Proteja o ambiente. Por favor não deita fora este produto juntamente com o seu lixo doméstico. Por favor coloque-o num local adequado na sua área de residência.

NL - Om het milieu te beschermen, geleeve dit product niet bij je gewoon huisafval te gooien maar breng dit naar het containerpark.

IT - INFORMAZIONI PER GLI UTENTI DI APPARECCHI ELETTRICI Il simbolo del cassetto barrato segnala che l'apparecchiatura alla fine della propria vita utile non è un rifiuto generico urbano e il consumatore dovrà conferirlo alle piazze rifiuti speciali del proprio comune di residenza oppure riconsegnarla al rivenditore al momento dell'acquisto di una nuova apparecchiatura di tipo equivalente, in ragione di uno a uno. Il corretto conferimento del rifiuto contribuisce a evitare possibili effetti negativi sull'ambiente e sulla salute, favorendo inoltre il riutilizzo e/o riciclo dei materiali di cui è composta l'apparecchiatura. Lo smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni di cui alla corrente normativa di legge. Per maggiori informazioni relativamente alla raccolta dei rifiuti speciali, contattare le autorità locali competenti.

IMPORTADO Y DISTRIBUIDO EN MÉXICO POR: BANDAI CORPORACIÓN MEXICO, S.A. DE C.V.,
Avenida de los Insurgentes Sur No. 863, 11, Col. Nápoles, Alcaldía Benito Juárez, C.P. 03810,
Ciudad de México, México. Tel. 8001BANDAI (800 1226324)



This product is powered with lithium-ion polymer batteries.
Please follow your local district and area rules when discarding the product.
3.7v 370mAh



ENERGY
PERFORMANCE
VERIFIED
RENDEMENT
ENERGETIQUE
VERIFIÉ

Tamagotchi®
® & © 2023 BANDAI



BANDAI S.A.S
15 Rue Félix Mangini
69009 Lyon, France

Bandai UK Ltd
37-39 Kew Foot Road,
Richmond, TW9 2SS, UK

CONTENTS

| | |
|--|-----|
| 1 CAUTION! | P00 |
| 2 PRECAUTIONS FOR USE | P00 |
| 3 DISCLAIMER | P00 |
| 4 OTHER NOTES | P00 |
| 5 INQUIRIES ABOUT TAMAGOTCHI UNI SERIES PRODUCTS | P00 |
| 6 DEVICE GUIDE | P00 |
| 7 DEVICE AND COVER | P00 |
| 8 CHARGING THE DEVICE | P00 |
| 9 CHECKING THE BATTERY | P00 |
| 10 TURNING ON THE DEVICE | P00 |
| 11 SETTINGS | P00 |
| 12 AGREEMENT TO PRIVACY POLICY / TERMS OF USE | P00 |
| 13 WI-FI CONNECTION SETTINGS | P00 |
| 14 VIEWING SCREENS | P00 |
| 15 RAISING TAMAGOTCHI | P00 |
| 16 STATUS/SETTINGS | P00 |
| 17 CARE ICONS | P00 |
| 18 SETTINGS | P00 |
| 19 FEED | P00 |
| 20 PHONE | P00 |
| 21 TAMaverse | P00 |
| 22 GO OUT | P00 |
| 23 CONNECT | P00 |
| 24 NETWORK | P00 |
| 25 DOWNLOAD | P00 |

キャラ絵ります。



For the latest and
more detailed
instructions, please
visit Tamagotchi.com

® & © 2023 BANDAI

6+
BANDAI
#43350

front cover English (page 1)

Tamagotchi Uni 2L instruction sheet size: 10.5" W x 4" H

1 CAUTION!

- For Ages 6 and up.
- Clock accuracy: 10 seconds per day.
- Please note that product may differ slightly from images in the instruction manual.
- Images are for illustrative purposes only.
- Choking Hazard: Contains small parts. Do not give to children under 3 years of age.
- Read instruction manual before use.

Please do not use this product if you have a pacemaker as it contains electronic components, speakers, magnets etc.

• Misuse of the internal battery may cause overheating, rupture, combustion, or leakage. Please note the following.

• Short-circuits can cause dangerously high electrical currents. Avoid this under any circumstances.

• Never charge your Tamagotchi Uni further if it is already fully charged. This will lead to dangerous overcharging.

• If the product gets wet, stop using it immediately. It may short-circuit.

• Do not place in water or fire, disassemble, or solder.

• Do not use, charge, or store this product close to fire or in locations with high temperature and humidity.

• When disposing of the product, follow the disposal regulations of your local government.

• Charge the product in full view, away from flammable objects.

• Before charging, check that there are no abnormalities with the charging cable. Do not charge if the cable is damaged. Failure to do so may result in injury or damage.

• If you detect abnormalities during charging or use of the product, such as overheating, foul odor, expanding, or smoke, disconnect this product from the charging cable and stop using it immediately.

• Check the charging status with the battery display on the clock screen. If the battery is not charging while this product is plugged in, or has not finished charging after 2 hours, disconnect the product from the charging cable and stop using it immediately.

• When charging is complete, do not leave the charging cable plugged in.

• Do not wrap the cable around fingers or other body parts. This could dangerously inhibit blood flow.

- Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.

Colours, contents and decoration of contents may vary. **WARNING!** Not suitable for children under 3 years. Small parts. Choking hazard. Use under adult supervision. Not all products may be available in your country. Retain packaging and instruction as it contains important information. This toy contains batteries that are non-replaceable. Recharging only with person with age of 3 years or older and under adult supervision, never recharge the device unattended. Check the product and power cable before charging. Do not charge if the product or power cable is broken or worn. Connect the USB charging cable to a 5V USB port, recommend to a PC or laptop. Inappropriate use may lead to smoke, fire, and other hazards. Some USB charging ports may not work for this device. **WARNING!** Not suitable for children under 3 years. misuse of transformer can cause electrical shock. Please reset when you can not play completely or something wrong. Charge the product in a visible location and away from combustibles. Remove the power cable and stop use of the product if the product is hot, an unusual odor can be smelled, the product warps, smoke can be seen, or any other anomalies are detected while charging or using the product. Do not leave the power cable connected to the product after the product is charged. Use the power cable specific to the product. Do not use any other charging cable that was not packaged with the product. Remove the power cable and stop use of the product if the product does not show that it is being charged, or the product does not charge after 2 hours of charging. Do not tug on the cord when removing the power cable as it can break or lead to complications. Do not use product under cold temperatures. The cold may affect the battery and prevent proper function of the product. Do not drop, wet, dirty or dismantle the device and prevent getting wet on the device during washing.

hand when wearing. Prevent damage or getting any alien part inside the USB port. The SAR limit is 4 W/kg averaged over one gram of tissue. This model : SWALLOWUNI has also been tested against this SAR Limited. The highest SAR value reported under this standard during product certification for use at 1mbs is 0.286 W/kg / Frequency Bands: 2.4GHz band / 2412MHz-2472MHz / Maximum Radio-Frequency Power(EU Market):<20dBm / Herby, Bandai Co., Ltd. declares that the radio equipment type SWALLOWUNI is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address: <https://www.bandai.fr/uploads/browser/gaqc/certificat-conforme/eu-red-doc-format.pdf>

2 PRECAUTIONS FOR USE

- Plastic packaging materials should be discarded immediately after opening.
- Do not place this product on plastic sofas, seats, tiles, etc. Prolonged contact may cause discoloration.
- Do not roughly pull or bend the moving or mounted parts in unintended directions.
- This product is composed of precise electronic parts. Do not drop, get wet, soil, or disassemble. Avoid use or storage in high or low temperatures.
- Press reset button in case of malfunction.
- Only use the charging cable intended for use with this product. Do not use a generic charging cable under any circumstances.
- When the charging cable is connected, do not put undue stress on the connector. This may cause damage.
- Do not use in temperatures of 5°C or below. The internal battery may not function properly, preventing normal operation. This may also prevent the device from charging properly.
- No guarantees are provided regarding lost data.

3 DISCLAIMER

⚠ Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV / technician for help. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3 (B)/NMB-3(B). This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, (2) This device must accept any interference, including interference that may cause undesired operation of the device.

4 OTHER NOTES

• When setting up this product for the first time, you must have internet access in order to agree to the privacy policy and terms of service.

RADIO INTERFERENCE

- This product uses a lithium ion polymer battery. Follow the disposal regulations of your local government when discarding your Tamagotchi Uni.
- Comply with airline company regulations when using the product in an aircraft.
- Comply with administrator instructions when using the product in hospitals or places with electronic equipment that use weak signals or high-precision controls.
- When equipped with medical electronic devices, or when using medical electronic equipment other than implantable devices during home recuperation, please confirm the effect of radio waves with the medical device manufacturer or distributor before using this product.

COMMUNICATION FUNCTION

Usage in close proximity to other electronic devices may result in radio wave inference. Use in another location to avoid this.

- Radio waves may prevent wireless transmissions, especially when using a microwave oven.
- If several Wi-Fi access points exist nearby and use the same channel, they may not appear in search.
- We do not take any responsibility for data or information leakage that occurs during Wi-Fi transmission. Compatibility with all Wi-Fi access points is not guaranteed. Services that use Wi-Fi may be suspended, put under maintenance, or may change in content without notice.

WI-FI CONNECTION

This product is compatible with 2.4 GHz IEEE 802.11 b/g/n (HT20) and WPA/WPA2/WPA3 security.

END OF SERVICE

Tamagotchi Uni services that use Wi-Fi may be suspended without notice. Please see the official website for details.

DATA UPDATES

- The product is connected wirelessly when these symbols are shown in the upper-left of the screen.



Symbol when communicating with another Tamagotchi Uni.



Symbol when connected to the internet.

5 INQUIRIES ABOUT TAMAGOTCHI UNI SERIES PRODUCTS

Bandai Customer Support Center Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618
Open Monday – Friday 10:00am to 5:00pm (excluding national holidays, and summer and winter holidays) Or send inquiry email to Customer Service on www.bandai.com * For US customer only.

MADE IN CHINA


Manufactured for Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618

Actual size, color, style and decoration may vary. Retain packaging and instruction as it contains important information. Bandai logo: © & © 2023 Bandai. All Rights Reserved. Package: © & © 2023 BANDAI

6 DEVICE GUIDE

INCLUDED COMPONENTS

- Tamagotchi Uni ...1
- Tamagotchi Uni Belt Cover (International Ver.) ...1
- Charging Cable ...1
- Instruction Manual ...1

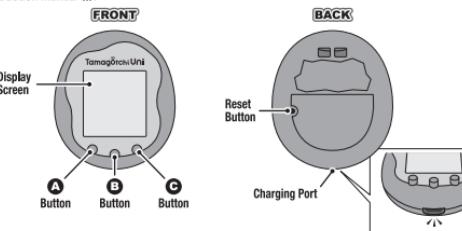

BASIC OPERATION

- A Select
- B Confirm
- C C Button Cancel/Back

7 DEVICE AND COVER

<DEVICE>




The Tamagotchi Uni device has 3 cavities (2 on top and 1 on the bottom).

<COVER>

INSIDE COVER

The cover of the Tamagotchi Uni device has 3 protrusions (2 on the top and 1 on the bottom).

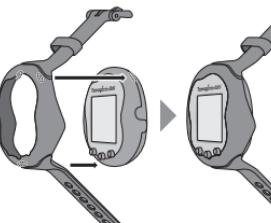


Assemble the Tamagotchi Uni device by placing the cover on and bringing the 2 top and 1 bottom parts together.

Tamagotchi Uni 2L instruction sheet size: 10.5" W x 4" H


8 CHARGING THE DEVICE

- When the low battery screen appears (see below), please charge your Tamagotchi.
- You must remove your Tamagotchi from your arm before charging.

- First, remove the cover from the device.
- Insert the USB type-C end of the charging cable into the charging port on the bottom of the device.

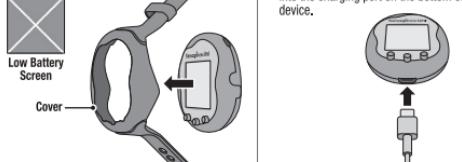

- Insert the other end of the cable into your computer's USB port.
- When charging is complete, unplug the charging cable.

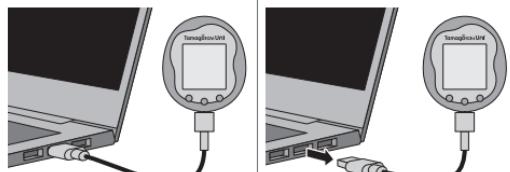

* Charging requires a computer or a valid USB AC adapter. For details, see "Charging without a computer USB port".

When charging without a computer USB port: see Confirmed Compatible USB Charging Adapters
For more information on USB charging adapters tested at Bandai for the Tamagotchi Uni, see the link below.

<https://>



- If "Charging" does not appear on-screen during charging, or "Charging complete!" doesn't appear after 2 hours of charging, unplug the charging cable and stop using the device immediately.
- Check the charging status with the battery display on the clock screen.
- Charging may not occur properly in temperatures at 5°C or lower.

9 CHECKING THE BATTERY

The battery status is shown on-screen when you insert the cable.



 
If this screen appears, please charge the device.

10 TURNING ON THE DEVICE

- Hold the B Button for 5 seconds.

Note: If the device does not turn on, press the Reset Button once, then hold the B Button again for 5 seconds. If the device still does not turn on, it may need charging. Charge the device for 2 hours before use.
* Only use the included charging cable for charging.
* The charging screen will not display during charging if initial setup has not been completed.

11 SETTINGS



* Refer to "Entering Numbers" for clock and birthday input, and "Entering Letters" for nickname input.

ENTERING NUMBERS

| | |
|--------------------------------------|------------------------------|
| A | Scroll to next number |
| C + A Hold Press | Scroll to previous number |
| B | Confirm/Proceed |
| C Twice | Return to previous selection |



* Press the A Button on screens with a page arrow to proceed to the next page.

ENTERING LETTERS

Cursor



- Move the cursor and select the box to enter a letter in. (The cursor will blink until a selection is made.)

- A** Move cursor forward
- B** Confirm box
- C** Move cursor backward



- Select the row with the letter you want.
* The menu is displayed in the following order: letters > numbers > symbols > smileys > end.

- A** Select row
- B** Confirm row



- Move the cursor and select the letter/icon.

- A** Scroll to next letter
- B** Confirm letter
- C** + **A**
Hold
Press
- Scroll to previous letter



- Select YES on the confirmation screen to finish typing.

- B** How to Reach the Confirmation Screen (3 ways)
 - Scroll to the end row and press the B Button.
 - Move cursor to the last letter box and press the A Button.
 - Enter a letter in the last letter box and press the B Button.



12 AGREEMENT TO PRIVACY POLICY / TERMS OF USE

- You must agree to the privacy policy and terms of use before playing with the Tamagotchi Uni. Please scan the codes below with your smartphone to access the privacy policy and terms of use. If you agree, select "Agree" to confirm.
* Internet fees may apply.

<PRIVACY POLICY>

[HTTPS://TMGC.TYB.JP/UNI/PRIVACYPOLICY/](https://TMGC.TYB.JP/UNI/PRIVACYPOLICY/)

<TERMS OF USE>

[HTTPS://TMGC.TYB.JP/UNI/AGREEMENTS/](https://TMGC.TYB.JP/UNI/AGREEMENTS/)



NOTES ON READING 2D CODES VIA SMARTPHONE:

- Update your device's OS to the latest version. iPhone users should use the normal Camera function.
- For browsers, iPhone users should use Safari, and Android users should use Google Chrome.

13 WI-FI CONNECTION SETTINGS

- You can change settings at a later time.

- You can play with the Tamagotchi Uni while connected to the internet via Wi-Fi.

- Requires an internet connection and a wireless router or access point.
- This product is compatible with 2.4 GHz IEEE 802.11 b/g/n (HT20) and WPA/WPA2/WPA3 security.
- Internet fees may apply.



Note: that the device cannot connect to the internet when using authentication settings like a captive portal (a service that requires login via a browser when connecting to wireless LAN).

- On your home's wireless router, check the SSID (the router name) and the password (an encryption key or security key).
- If you don't know the SSID/password, see the instruction manual or homepage for your wireless router (or access point), or contact the manufacturer.
- For your Tamagotchi's MAC address, go to Network Settings, select By Phone, and check the bottom of the Settings page displayed on your smartphone.
- If the device does not connect successfully, services may be suspended or under maintenance. Please see the official website for details.

SETTING BY PHONE

Notes on Reading 2D Codes (QR Codes) Via Smartphone:

- Update your device's OS to the latest version. iPhone users should use the normal Camera function.
- If images or videos do not display on your smartphone, try temporarily disabling cellular data.
- For browsers, iPhone users should use Safari, and Android users should use Google Chrome.

- When your smartphone camera is ready, press the B Button to proceed to the next step.
- Scan the 2D code that appears with your smartphone camera to connect the device to your smartphone. When scanning is complete, proceed to the next step.
- When the device is connected to your smartphone, "CONNECTED!" will appear. Press the B Button to proceed to the next step.

4: The next screen will be for setting up Wi-Fi connection on your smartphone. Prepare the information needed to connect to Wi-Fi, such as your wireless router/access point's SSID and password. When you're ready, press the B Button to proceed to the next step.

5: Scan the 2D code with your smartphone camera to access the settings screen. After scanning, input your wireless router/access point's SSID and password on your smartphone. The next screen will display once input is complete.

6: When settings have been configured, "Wi-Fi SET-UP DONE!" will be displayed. Press the B Button to proceed to the next step. A connection test will be performed. Upon a successful test, you will move to the Egg Selection screen.

SETTING BY DEVICE

First, select automatic or manual settings.
* AUTO setting will work in most cases.
** For details on manual settings, check "Network Settings" (page xx).

AUTO

Select the SSID (wireless router name) for the wireless router/access point in use.
* Non-alphanumeric characters will not be displayed. If the SSID contains non-alphanumeric characters, they will be displayed as "?".

Enter the password to your wireless router.
* Refer to "Entering Letters" (page 3) for password input.
* You cannot enter any non-alphanumeric characters in the password.
After input, a connection test will be performed. Upon a successful test, you will move to the Egg Selection screen.

14 VIEWING SCREENS

The Care Menu and the Clock screen are accessible from various screens.

PRESS THE A BUTTON ON THE STANDBY SCREEN

● Use different Care options to look after your Tamagotchi!

- Ⓐ Select Care Option.
- Ⓑ Confirm Care Option.
- Ⓒ Show Living Room screen.

| STATUS/SETTINGS | PHONE | GO OUT |
|-----------------|-----------|---------|
| FEED | TAMAVERSE | CONNECT |
| TOILET/BATH | ITEMS | NETWORK |

- Only Status/Settings are available while your Tamagotchi is sleeping.
- Only some Care options are accessible at the Baby stage.

HOLD A BUTTON ON THE STANDBY SCREEN

Wi-Fi 表示
Battery Display
Clock Screen

Clock Menu Screen

- Ⓐ Show Living Room screen.
- Ⓑ Show Clock Menu screen.
- Ⓒ Show Living Room screen.

DESIGN: Change the design of your clock.
DATE/TIME: Change the date and time.
DISPLAY: Change the date display order.

15 RAISING TAMAGOTCHI

● As it grows, your Tamagotchi's appearance and characteristics will change according to how you take care of it, so give it lots of love!

My Tamagotchi Talks?!

Your Tamagotchi might speak to you sometimes!
* Be sure to set SOUND to On. (page xx)

See your Tamagotchi's Personality!

You can meet talking Tamagotchi when you go out, too!?

5

16 STATUS/SETTINGS

● Check the status of your Tamagotchi, and change any device settings!

STATUS

Find out the current status of your Tamagotchi. Check often to see how to care for it!

- HUNGER: Shows hunger level
- HAPPINESS: Varies by mood and relationship with you.
- GOTCHI POINTS: Tamagotchi Planet Currency (Maximum: 99,999 points).

PROFILE

Shows your Tamagotchi's profile. Edit details, or send an image to your smartphone!

- Current Living Room and Tamagotchi.
- Tamagotchi Name
- Personality
- Days Spent Together
- 好きな道具

ICON LIST

- Next page
- Open Edit Profile menu

EDIT PROFILE MENU

First, choose where you want to do!
EDIT: Edit your Profile details. (Edit Category Menu)
SEND PHONE: Send an image of your Profile details to your smartphone.

EDIT CATEGORY MENU

Select the category you want to change.
NICKNAME: Change your nickname.
BIRTHDAY: Change your birthday.
CHANGE ICON: Change Care icons.

SENDING TO PHONE

Select "SEND PHONE" on your device and follow the on-screen instructions to scan the 2D code and display your Profile on your smartphone.

Your Profile will be displayed in your smartphone's web browser, allowing you to save it as an image.
* The method for saving data may differ according to the model and version of your smart device.

DISPLAYING IMAGES ON YOUR SMARTPHONE

If your browser does not display the screenshot after scanning the second 2D code, or displays a "504" error message, please try the following:

- Your smartphone may not connect to your Tamagotchi Uni if its data transmission method is giving priority to cellular data. Temporarily disabling cellular data in your smartphone's settings may resolve the issue.
- Your smartphone may not connect to your Tamagotchi Uni if its data transmission method is giving priority to Wi-Fi connections. Taking your device out of Wi-Fi range or temporarily disabling your smartphone's Wi-Fi settings may resolve the issue.
- If you have security software enabled, it may prevent connections from working properly.
- This product is not guaranteed to be compatible with all smartphone models.

17 CARE ICONS

● You can receive Care icons by fulfilling various conditions. Try to collect them all!

THE ICON'S COLOR CHANGES!

Some turn rainbow-colored in one try!

18 SETTINGS

● Change settings such as the screen brightness and volume!

BRIGHTNESS

- Change the brightness of the screen.
- Ⓐ Darken
- Ⓑ Brighten
- Ⓒ Save & Exit

SOUND

- Turn this setting off to disable the sound. You can turn it on to restore the sound.
- * Please note that calls and sound effects will also be turned off.
- Ⓐ Select
- Ⓑ Confirm
- Ⓒ Exit

6

Tamagotchi Uni 2L instruction sheet

size: 10.5" W x 4" H

19 FEED

● If your Tamagotchi gets hungry and its Happiness level starts to drop, it's time to feed it!

FEED

Amount Held



Choose what you want to feed it!

- Feed your Tamagotchi food to refill its Hunger meter, and snacks to increase its Happiness level!
- Each Tamagotchi has its own likes and dislikes, so try different kinds of food and snacks!
- Items that display a quantity will decrease by one each time you feed your Tamagotchi.
- Items that do not display a quantity can be given to your Tamagotchi as many times as you like!

DLC ICON

Items that you download will have a "DLC icon" displayed in the upper right corner! See page XX for more information on downloads!

DELIVERY

* This cannot be used during the baby stage.



Places that display this symbol require Gotchi Points (Tamagotchi Planet Currency) for purchase.

1: Get food delivered! First, choose between Food or Snacks.

Quantity



2: Choose what you want delivered.

- You can have up to 3 of the same item. You won't be able to buy any more than that!
- Items marked with "FREE" can be acquired free of charge (0 Gotchi Points)!
- Items marked with "SALE" can be purchased for a reduced price!
- Sales are held on the 5th, 15th, and 25th of every month! Prices are reduced by 50%!

Price



3: Choose how many you want to buy. Your purchases will be sent to your house!

20 PHONE

● View your Tamagotchi's daily log, leave it with a sitter, and more!

LOG

Your Tamagotchi will make a log entry once per day!

- This cannot be used during the baby stage.
- A new log entry will be added every day at 7 p.m.! Up to 7 log entries can be saved. 翻訳正しいでしょうか?

SEND TO PHONE

1: You can send your log to your smartphone! Select "SEND PHONE" to display a 2D code that can be scanned to connect the device to your smartphone.



2: After the connection is established, use your smartphone to scan another 2D code in order to display the log. Your log will show up on your smartphone!

PAST TAMAS

Check a record of previous Tamagotchis you've raised!

You can save data on up to five generations of past Tamagotchis.

SITTER

Have someone watch your Tamagotchi for you!

Ask a sitter to watch your Tamagotchi when you're too busy to do so!

- This cannot be used during the baby stage.
- Select "YES" to leave your Tamagotchi with the sitter. The sitter will take care of your Tamagotchi for you.
- You can leave your Tamagotchi with the sitter from 7:00 a.m. to 5:59 p.m.
- When you want to pick up your Tamagotchi from the sitter, press the B Button and select "YES" when "PICK UP?" is displayed.
- You cannot leave your Tamagotchi with the sitter if its Hunger meter is at 0, or if it is in need of medical treatment.
- You cannot leave your Tamagotchi with the sitter during its baby stage.

Be sure to bring your Tamagotchi home before it gets dark. If you do not pick up your Tamagotchi after it gets dark, it will get scared and its Happiness level will drop.

7

21 TAMAVERSE

● Have the Tamagotchis you've raised venture out into the world! Meet Tamagotchis from around the globe!

- This cannot be used during the baby stage.

ENTRANCE



The Tamaverse is divided into an entrance and various areas. Press the B Button to go through the gate!

ENTRANCE

After entering the Tamaverse, you'll arrive at the entrance! Once there, you'll be greeted by various Tamagotchis! Some of them might even speak other languages!

UNIVERSAL AREA

● This is separated into three different areas!

<TAMA PARTY>

Meet various other Tamagotchis! You can even propose to a special someone!

PAST TAMAS

First off, join a party! You'll be introduced to four Tamagotchi. Find one you like and go out on a date! If you're a match, you can propose to them and get married! After the wedding, an egg will appear and be taken to both of your homes. Then, the next generation of Tamagotchi is born!

This cannot be used during the baby, child, or teen stages.

SITTER

Getting married at a Tama Party may allow the next generation to receive a present from its parents!

<TRAVEL COUNTER>

Join a tour and travel the world!

PAST TAMAS

First, select the tour you wish to join! Gotchi Points are required to join a tour. Select "YES" to set out on the tour! You'll also get souvenirs from the countries you visit! You might even receive log updates as well!

<TAMA FASHION>

Check out the latest in Tamagotchi fashion!

MANNEQUIN

Browse Tamagotchi accessories from around the world on the mannequins! If you find an outfit combo that you like, stand in front of it and press the B button to purchase it! You can register your own outfit on the leftmost mannequin! Tamagotchi from around the world might come see your outfit!

Update your device for even more ways to play!
New event and collab areas are planned!
Stay tuned for more info!

ITEMS

Use items or place them in your room!

ITEMS

Select an item and then confirm it. Next, choose whether to use the item or place it in your living room.

- If it is an item that you already have in your living room, you can select "PUT AWAY" to remove the item from the room.
- Each Tamagotchi character has its own likes and dislikes!
- Tamagotchis are happy if you continue placing items they like in the room! (It will become their "Favorite".) If you keep placing the item there, they'll become a "Pro" with it!
- Items with a "Favorite" or "Pro" distinction will be displayed in their Profile (page xx)!

ACCESSORY

Select the Cleaning Robot to clean your room!

- The Rattle and Cleaning Robot cannot be placed in your living room.

ACCESSORY

Dress up your Tamagotchi with accessories!

- This cannot be used during the baby stage.

ACCESSORY

1: First, choose where you want to place the accessory. You can attach accessories to the head, face, body, and back! If you wish to remove an accessory, choose the location of the accessory and then confirm it.

- You cannot attach accessories during the baby stage.
- You can attach accessories to your Tamagotchi's head during the child stage, to its head and face during the teen stage, and to all locations during the adult stage.

ACCESSORY

2: Next, choose the accessory you want to attach.

ACCESSORY

A Move left
B Confirm
C + **A** Press Scroll previous
C Twice Back

8

Tamagotchi Uni 2L instruction sheet size: 10.5" W x 4" H

FURNITURE

Place furniture in your living room or garden!
* This cannot be used during the baby stage.

1: First, select where you want to place the furniture. The location will be displayed on the screen. Afterwards, choose the furniture you wish to place.

2: Press the A Button to switch between locations, and then press the B Button to place the furniture.

CRAFTS

Create your own accessories!
* This cannot be used during the baby stage.
* You can acquire recipes and materials by going on walks (page xx).

1: First, choose where the accessory will go! Next, select the kind of accessory you want to make.

2: The necessary materials will show up here! Press the A Button to change the color of the accessory. If you have all the right materials, press the B Button to proceed! The accessory is complete!

<RECIPES>
You can see a list of the materials you have!

<MATERIALS>


22 GO OUT

Go shopping, play games, and take walks with your Tamagotchi!
* You cannot go out during the baby stage.


TAMA MALL

Buy and sell items, and even remodel your room!

1: First, choose whether to buy or sell an item, and then select the type.
* If you wish to remodel your room, select "BUY" and then choose "MAIN ROOM".

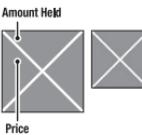

2: After you select the item you wish to buy or sell, choose the quantity. You can have up to 3 of the same item. You won't be able to buy any more than that!
• Items marked with "FREE" can be acquired free of charge (0 Gotchi Points)!
• Items marked with "SALE" can be purchased for a reduced price!
• Sales are held on the 10th, 20th, and 30th of every month! The prices are reduced by 50%!
• Also, on Gotchi Points Day, you can sell items for twice their usual price!

 

ARCADE

 
Play games to earn Gotchi Points!
First, choose the game you want to play!
• Some mini games change with the season!
• You can cancel a game by pressing the C Button.



<DANCING>


Can you keep up with these hot dance moves?! First, watch the movements and order of the dance. Don't forget to strike a pose! When "DANCE" is displayed on screen, dance using the moves the example showed you! If you manage to follow the choreography, you succeed! If you can't follow the choreography, you fail!

* Play with the device attached to your left wrist!



<FAST FOOD>

 Complete the White Tamas' orders and quickly deliver the hamburgers! Place hamburgers in front of customers with their hands raised and confirm! Your score is determined by how many correct orders you deliver within the time limit! You'll fail the task if you give a hamburger to a customer that does not have their hand raised.




<EGG HUNT> * Spring only

Collect as many Easter eggs as possible! Move Usatchi up and down to catch the Easter eggs. Your score is determined by how many eggs you successfully catch within the time limit! You'll fail the task if you don't pick up any eggs.




<BEST PHOTO> * Summer only

 Can you time your photo to catch the fireworks at just the right moment?! Press the button with the proper timing to stop the cursor! The closer the cursor is to the right edge of the gauge, the better the photo will turn out! Your score is determined by how many good photos you take out of five total!




A / B
Stop cursor

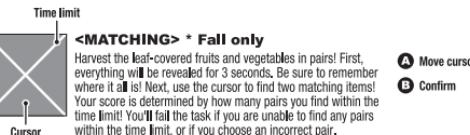

<MATCHING> * Fall only

Harvest the leaf-covered fruits and vegetables in pairs! First, everything will be revealed for 3 seconds. Be sure to remember where it all is! Next, use the cursor to find two matching items!

Your score is determined by how many pairs you find within the time limit! You'll fail the task if you are unable to find any pairs within the time limit, or if you choose an incorrect pair.

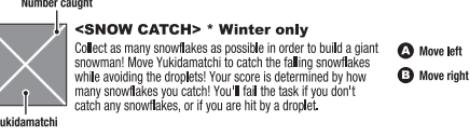

<SNOW CATCH> * Winter only

Collect as many snowflakes as possible in order to build a giant snowman! Move Yukidamatchi to catch the falling snowflakes while avoiding the droplets! Your score is determined by how many snowflakes you catch! You'll fail the task if you don't catch any snowflakes, or if you are hit by a droplet.



TAMA WALK

Go on a walk with your Tamagotchi!
Select a course for the walk with your Tamagotchi Uni.
• Some courses change with the season!
• You can also pick up color materials on the Farm!



Take a walk with your Tamagotchi!

The walk will end after 20 minutes. You can receive one-per-day recipes and pick up crafting materials!

* Press the C Button and select "END WALK" to end your walk at any time.



<SEASONAL DESTINATIONS>

Tama Street Tama Park Flower Hills (Spring) Mermaid Palace (Summer) Patchi Forest North North Point (Winter)




<Farm>

Collect fruits to obtain color materials!
Move the device to move your Tamagotchi and gather fruits! The task ends once the time limit is reached. Fruits! The kinds and quantity of colors you can obtain are determined by the types and number of fruits you harvest.



Fruit

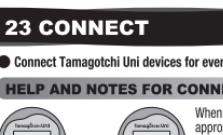


23 CONNECT

Connect Tamagotchi Uni devices for even more fun!

HELP AND NOTES FOR CONNECTING TAMAGOTCHI UNI DEVICES

When using the Connect feature, keep the devices within approximately 2 meters (6.5 feet) of each other, and stay clear of items such as microwaves that may interfere with radio frequencies when they are in use.
• The Connect feature cannot be used with Tamagotchi devices other than the Tamagotchi Uni.
• If connection fails or times out on either device, the devices will return to the initial connect screen.
Try restarting the connection process from either device.

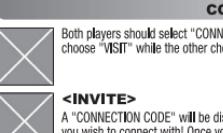

CONNECT

Both players should select "CONNECT" from the Connect menu, and then have one player choose "VISIT" while the other chooses "INVITE" in order to confirm the process.




<INVITE>

A "CONNECTION CODE" will be displayed on the screen. Share this code with the friend you wish to connect with! Once your friend inputs the connection code, your friend's nickname will be displayed on your screen. Select "YES" to invite them to your room. The connection is complete!

<VISIT>


Get the "CONNECTION CODE" from your friend and input it into your device. Your friend's nickname will be displayed on your screen. Select "YES" if you wish to visit their room! The connection is complete!

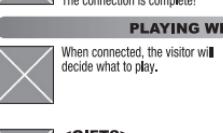

PLAYING WHILE CONNECTED


When connected, the visitor will decide what to play.

Let's play in the room!

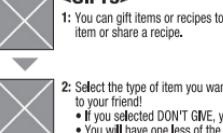

<GIFTS>

 1: You can gift items or recipes to your friends! First, choose whether you want to gift an item or share a recipe.



2: Select the type of item you want to gift. Next, select an item or recipe, and then send it to your friend!
• If you selected DON'T GIVE, you won't send your friend anything.
• You will have one less of the item you send. (Recipes will not disappear.)

Tamagotchi Uni 2L instruction sheet size: 10.5" W x 4" H

<PROPOSALS>

Marry your Tamagotchi with another!

1: Marry another Tamagotchi by having yours propose to them!
By selecting PROPOSE, you'll be taken to a proposal confirmation screen for the friend you're connected to. The proposed-to partner can select YES or NO!
* Baby, child, and teen-stage Tamagotchi cannot take part in proposals.

2: If your friend accepts the proposal, both of your Tamagotchi's will get married! After the wedding, an egg will appear and be taken to both of your homes. Then, the next generation of Tamagotchi is born!

<CRAFTS>

Trade materials and make items! First, both players choose a material. What will you make? You'll take the item you made home with you.
* You will have one less of each of the materials you used for the item.

The connection ends when each player stops playing, there are no inputs for 60 seconds, or a connection error occurs.

FRIEND LIST

Keep a record of all the friends you've connected with!

Choose which friend you want to see.
* If you want to remove a friend from the list, bring up their profile, press the B button, and select YES.

24 NETWORK

Set up a Wi-Fi connection or adjust network settings.
* If you're having trouble, ask an adult or a smart friend to help.

NETWORK SETTINGS

Choose how you want your network connection to behave.
* Auto Update and (Airplane) Mode lights show whether each mode is on or off.

WI-FI SETTINGS

Network List

Confirmation Screen

New Connection Screen

Turning on Airplane Mode turns off Wi-Fi connections, (stops the sending of radio waves)

A ON/OFF

B Confirm

CHANGE SETTINGS: Manually re-configure the Wi-Fi connection. (→ Manual)

TEST CONNECTION: Tests the currently connected Wi-Fi.

DELETE: Remove the current settings.

Begin setting up a Wi-Fi connection.

BY PHONE: Set up using your smartphone. (→ page xx)

BY DEVICE: Set up using the Tamagotchi Uni device. (→ page xx)

MANUAL

Enter the necessary information for a new connection.

SSID: Enter the SSID.

* Non-alphanumeric characters will not be displayed. If the SSID contains non-alphanumeric characters, they will be displayed as "?".

PASSWORD: Select from WPA, WPA 2, or WPA 3, and enter the password. This will not work with unsecured networks.

* You cannot enter any non-alphanumeric characters in the password.

DHCP: First, press A to select whether to connect to the DHCP server automatically or manually, and press B to confirm. If you choose manual, you will be prompted to enter the DHCP server information. Please enter the values for each setting.

SETTINGS COMPLETE: Save the current settings and perform a connection test.

AUTO UPDATE

When Auto Update is turned on, the system will automatically connect to the network once a day to update data. Automatic updates will occur when the following two conditions are met.

* The Tamagotchi is sleeping.

* The device is connected to the charging cable. If both conditions are not met, automatic updates will not occur. The following screen will appear during automatic updates. 以下ではなく左記の画面…とするのはいかがでしょうか?

A ON/OFF

B Confirm

The following occurs during automatic updates.

* New update check: (In the event of an available update, NEW! will appear on the update menu. Please start the update manually.)

* Notification update: (In the event of an available update, NEW! will appear on the update menu.)

* DLC list update: - Update of Tamagotchi and Tama Fashion items in the Tamaverse.

NEW! Mark UPDATE: Appears when there's a new update available.

INFO: Appears when there are unread notices.

AIRPLANE MODE

Turning on Airplane Mode turns off Wi-Fi connections, (stops the sending of radio waves)

A ON/OFF

B Confirm

* Please turn on Airplane Mode when you are on an airplane or in other places where the use of wireless communications is restricted.

PARENTAL CONTROLS

When parental controls are turned on, a password will be required for selected menus. Use this feature when you do not want your children to change the Wi-Fi settings or certain other features.

<SETTINGS>

1: Switch parental controls ON/OFF and set a password. Turn parental controls on to continue to the password input screen.

A ON/OFF

B Confirm

2: Enter the password you would like to use for parental controls. Enter the password again for confirmation, and if it is correct, the parental controls will turn on.

<RESTRICTION SETTINGS>

Set what will be restricted by parental controls. Select the item you want to restrict and a description of it will appear. Switch on/off to return to the item list.

* Take care not to forget the parental controls password. If you forget the password, you will have to erase the device's data and reset all settings.

RULES & POLICIES

TERMS: Shows the Terms of Service. Scan the 2D code with your smartphone.

PRIVACY POLICY: Shows the privacy policy. Scan the 2D code with your smartphone.

IP: Shows intellectual property information.

<TERMS of Use>

HTTPS://TMGC.TYB.JP/UNI/AGREEMENTS/

NEW! Mark UPDATE: Appears when there's a new update available.

INFO: Appears when there are unread notices.

HTTPS://TMGC.TYB.JP/UNI/PRIVACYPOLICY/

QR code

<Privacy Policy>

HTTPS://TMGC.TYB.JP/UNI/PRIVACYPOLICY/

QR code

<IP>

HTTPS://TMGC.TYB.JP/UNI/LEGALINFO/

QR code

25 DOWNLOAD

● Download Tamaverse areas and items!

INPUT CODE

Input the download code!
* If you successfully enter the code, it will be registered in the device and begin a download.
* The downloaded item will go to your items pocket.

COLLAB

Swap out collab areas you have purchased! First, choose the collab area you want to use.

Select YES to switch to that area.

* When you switch collabs, all items purchased at the previous collab outing (those with the DLC mark) will disappear.

* You cannot switch collabs if the Tamagotchi you're raising is a collab character.

ITEMS

Download and delete purchased items! First, choose an item to view its details.

You can download anything marked with DOWNLOAD. You can delete anything marked with DELETE.

* Up to 8 kinds of downloadable items can be stored on one device.

* You can re-download any item you've deleted from your device as many times as you want!

UPDATE LIST

Update the list of downloadable content. Select YES to connect to Wi-Fi and update the list.

QR code

UPDATE

Update the Tamagotchi Uni device!
CHECK UPDATE: Connect to the network and check for updates. If an update is available, it will be installed automatically.
UPDATE HISTORY: Shows update history.
 * Do not press the reset button during an update.
 * Up to 9.75MB of data will be downloaded at once.

INFO

Catch up on the latest Tamagotchi Uni news! There might be a present waiting for you!
INFO LIST: Shows Tamagotchi Uni-related notices. Select what you want to read. If there's a gift, follow the on-screen instructions to receive it!
UPDATE INFO: Connect to the network to see if there are any new announcements.

TROUBLESHOOTING

- I can't connect with another Tamagotchi device!
 ➔ See the section on connections. (☞ page xx)
- The LCD screen is so hard to see!
 ➔ Try adjusting the screen's brightness. (☞ page xx)
- I can't hear anything!
 ➔ Go to SOUND and check that it's set to ON. (☞ page xx)
- The screen is completely black (or white), there's no sound, the home button won't do anything, and the reset button doesn't work!
 ➔ The battery may have run out. (When the battery runs out, the Low Battery Screen (☞ page xx) may not appear.) Refer to Charging the Device (☞ page xx) to charge the battery.
- My Tamagotchi won't wake up! Or it won't go to sleep!
 ➔ Your Tamagotchi will wake up or go to sleep on its own at scheduled times. Check to make sure your device time is set correctly. (☞ page xx) If a.m./p.m. are incorrectly set, your Tamagotchi's day and night cycle will be flipped.

WHEN TO PRESS THE RESET BUTTON

- If you wish to continue raising your current Tamagotchi, select CONTINUE. After you return to the home screen, adjust the current date and time by going to DATE/TIME. (☞ page xx)
- If you want to raise a new Tamagotchi, select RESET ALL. You will then register your information and a new egg will appear. The egg will hatch after a little while.
 * If you select RESET ALL, all item data and settings will be erased and restored to default.
- If the time runs out and the screen light goes out while the CONTINUE or RESET ALL selection screen is still displayed, the device will automatically proceed with the CONTINUE option.

When charging without a computer USB port: see
Confirmed Compatible USB Charging Adapters
 (last updated xx/20xx)

For more information on USB charging adapters tested at Bandai for the Tamagotchi Uni, see the link below.

■その他、バンダイで Tamagotchi Uni の充電
作確認を行った USB 充電アダプターについて
<https://>

Confirmed
Compatible USB
Charging
Adapters

Web instruction manuals for
each region

North America

Europe

FCC compliance

ICES

● "Wi-Fi" is a registered trademark of the Wi-Fi Alliance.

13

14