

# IPRÓ

V7  
**USER'S MANUAL**

## Phone Display



1. Decoration	2. Receiver	3. Screen
4. Left soft key	5. Dial key	6. Right soft key
7. End/Power key	8. Headset	9. USB
10. Camera	11. Flashlight	12. Loudspeaker

# **IPRO V7 QMobile User's Manual**

Dear customer:

Thank you for choosing this mobile phone. This mobile phone incorporates the latest world advanced functions, enabling simple and convenient operation, satisfying your special requirements.

The mobile phone supports T-FLASH (memory) card and Dual SIM standby. It integrates the following available functions: SMS, MP3, MP4, Camera, FM radio, Video recorder and Calendar, enabling you arranging your work, study and life freely; with long standby duration, as well as Alarm and Calculator, your communication will be easier and smoother; powerful File manager allows you managing the files conveniently. In addition, the chord ringtone allows you selecting music to set as ringtone; the personalized appearance also can satisfy your selection.

# Contents

Keys functions.....	4
Call .....	6
File manager.....	6
Contacts.....	6
Call history .....	7
Multimedia .....	7
Messages .....	9
Apps and Games .....	9
Settings.....	8
Internet .....	10
Organizer.....	10
FCC Warning .....	11

## Keys functions

Keys	Functions

<b>Left soft key</b>	Press this key to enter the main menu under standby mode; Press this key to confirm the function you choose; Press this key to answer a call.
<b>Right soft key</b>	Press this key to enter phonebook list under standby mode; Press this key to go back to previous menu; Press this key to reject a call.
<b>Call key</b>	Press this key to call out; Press to pick up phone when there is an incoming call; Press to enter call logs under standby mode.
<b>End key</b>	Power Off: Long press to power off under standby mode; Power On: Long press to power on if the phone is power off; Press this key to go back to standby screen; Press this key to reject a call.
<b>Navigation keys</b>	Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. Under standby mode, press a direction key to enter the specified function page. You can also customize direction keys to match the desired functions.
<b>OK key</b>	Press OK key to confirm, Press this key to enter the main menu under standby mode.
<b>Number keys</b>	Dial numbers under standby mode and enter numbers and characters in editing mode. Under standby mode, long press ‘0’ this key to open/close the torch.
<b>* key</b>	Under standby mode, press * key twice to display “+” to call international numbers; “P” and “W” to call extension numbers. Help to lock the keypad with pressing left soft key first. Under players and FM mode, press * key to decrease volume.
<b># key</b>	Under standby mode, press and hold this key to switch between general mode ,Silent mode and meeting mode. Under players and FM mode, press # key to increase volume.
<b>FM key</b>	Under standby mode,press this key to enter the FM.
<b>Messages key</b>	Under standby mode,press this key to play the music..
<b>Camera key</b>	Under standby mode,press this key to enter cream, and press “ok” this key to taking pictures.

## **Call**

---

Under standby interface, input a phone number and press the Call key to make a call by SIM1/SIM2. To end or reject a receiving call, press the End key.

## **File manager**

---

File Manager explores the files in phone and external memory card. In this menu, you can manage the pictures, MP3 files and other folders etc in this menu.

## **Contacts**

---

Phone Can store up to 500 phone number of phone calls and create 25 group, and the SIM card contact ability depends on the network operator, please consult the local operators.

## **Call history**

---

In the main menu, you can view Missed calls/Dialed calls/Received calls/Reject calls/All calls/Delete call logs. You can also press call key to enter call logs.

## **Multimedia**

---

### **◆ Camera**

Camera supports photographing function .you can take pictures with the embedded camera and adjust the camera settings. The camera lens is in the rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format. After downloading to PC, please view with appropriate software. If the mobile phone memory is insufficient, please delete certain pictures or other files in “File manager”.

### **◆ Video recorder**

Press OK key to start video recording. The recording time depends on the time limit and the capacity of the memory card. Enter options to perform the following settings: Switch to camera, Camcorder setting, Video settings and Storage.

## ◆ **Audio player**

Press OK to play music, or so key to choose songs, Enter Audio player.

Press left soft key to enter options: Play, Details ,Add,Remove,Remove all and Settings.

## ◆ **Video player**

Enter Video player. Press left soft key to enter options: Play, Send, Rename ,Delete and Delete all files .

## ◆ **Gallery**

With this function, you can select any picture and press left soft key to perform the following operations: View, Send, Use as, Rename, Delete,Delete all files and Image information.

## ◆ **FM radio**

To use the FM Radio, You can perform the followings operations as your need: Channel list, Manual input, Auto search, Settings, Record and File list.

## ◆ **Recorder**

Enter Sound recorder. press left soft key and you can do: New record, List .

## **Messages**

---

Enter this menu, you can view: Write message, Inbox, Drafts, Outbox, Sent messages,SMS templates and SMS settings. The capacity of messages is due to maximum storage capacity built in mobile phone and external SIM cards. And you can check the memory status of the SIM cards or mobile phone.

## **Apps and Games**

---

To enter this menu, you can play some simple games and set up the game, can relax your mood in your spare time, enrich your life. The game are:DOODLE JUMP,CROSSY ROAD,STICK HERO and BUBBLE PARTY MIX,Game Settings can be adjusted in the size of the volume and vibration switch.

DOODLE JUMP:Guide the doodler up without falling.Press Left/4 to go left.Jump on green platforms will break.Take the Jetpack and fly for a limited time.

**CROSSY ROAD:**Avoid obstacle like cars,trucks or water that will kill you,Gold coins give bonus points,Press Lsft/4 to go left,Right/6 to go right,UP/2 to move forward,Down/8 to move backward.

**STICK HERO:**Stretch the stick in order to reach and walk on the platforms.if the stick is not long enough you will fall down!

**BUBBLE PARTY MIX:**Match 3 or more music bubbles.Unleash the power of magic stars.Complete levels before timer runs out!

## **Settings**

---

- ◆ **Profiles:**User profiles:This mobile phone is provided with several profiles. You can customize the ringtone according to events and environment.You can customize a profile and activate it,Available options are:General,Silent,Meeting,Outdoor mode.
- ◆ **Phone settings:** In this menu, you can perform: Time and date; Language; Pref.input method;Display ;Shortcuts; Dedicated keys;Flight mode;Misc.settings.
- ◆ **Security settings:** To protect personal privacy, you can set SIM security, Phone security and Auto keypad lock.

- ◆ Network settings: In this menu, you can choose the SIM card selection and GPRS transfer pref.
- ◆ Dual SIM settings: Due to dual SIM cards phone design, user can set SIM card by 'Dual SIM settings', Such as Dual SIM open, Only SIM1 open, Only SIM2 open.
- ◆ Connectivity: In this menu, you can perform: Bluetooth and Data accounts.
- ◆ Call settings: In the Advanced Settings, you can view: Blacklist, Auto call recorder, call time reminder and Answer mode.
- ◆ Warranty Policy: Mobile phone repair service function, can guarantee within the prescribed time, your mobile phone.
- ◆ SIGN LED SETTING: In this menu, you can open/close INCOMING CALLPLAYING LED.

1, when the telephone rang the bell, play music, lights flash, frequency custom;

2, open cover, cover, flash three times.

3, there are new messages, interval of 1 second flash two times, three loop;

4, did not call, unread SMS interval 3 minutes slow flash three times per second (once)

In the machine Settings menu "indicator light Settings" :

1, call light is - on and off

2, untreated incident light - on and off

3, opening and closing cap lamp - on and off

4, music playback indicator - on and off

Note: open for music playback indicator, whether background, perform music broadcast the lamp;If the music light lamp for closing, perform untreated incident light.

- ◆ Restore settings: To reset the factory setting, please input the passwordL LED,UNREDA SMS CALL LED,OPEN CLOSE CLAM LED and MP3 ‘1122’.

## **Internet**

---

In this menu, You can look up information on the Internet.

## **Organizer**

---

This function provides different kinds of services including Alarm, Calendar,Calculator,Bluetooth,SIM toolkit,World clock,Torch and Stopwatch. It is convenient and good for you to arrange your life orderly every day and make your life become lively and beautiful.

## **FCC Warning**

**Specific Absorption Rate (SAR) information** SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

**Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.**

**For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body.**

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

**--Reorient or relocate the receiving antenna.**

**--Increase the separation between the equipment and receiver.**

**--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**

**--Consult the dealer or an experienced radio/TV technician for help.**