


PHOTOGRAPHS OF THE TEST CONFIGURATION

Set EUT as Master mode (Radar injected into EUT)



Set EUT as Client mode (Radar injected into Master)

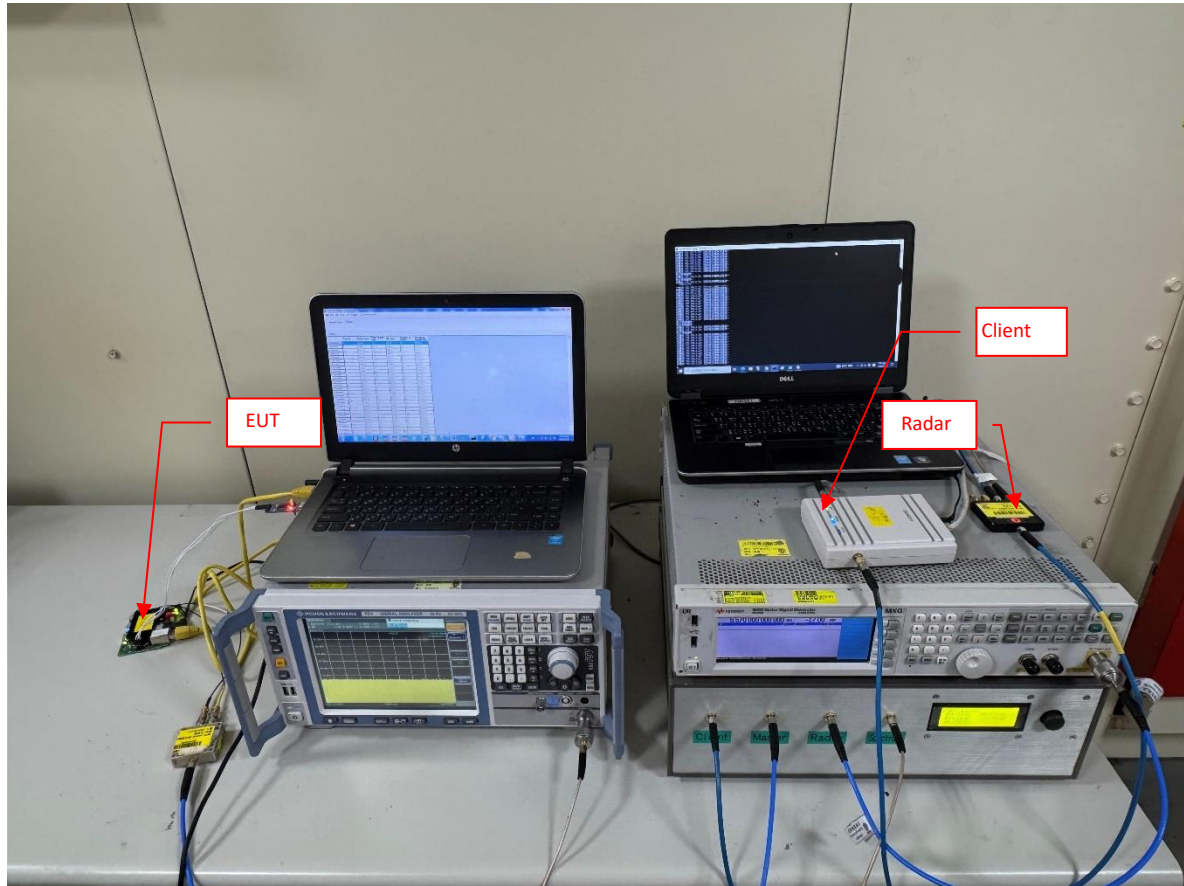