

ALL KEY FOBS MUST BE PRESENT AND REPROGRAMMED WHEN PROGRAMMING NEW FOBS

1. Close all doors
2. Insert key into ignition
3. Hold down the power UNLOCK button on the driver's door panel, continue to hold down until instructed to release in step 9.
4. Perform steps 5 through 8 in rapid succession.
5. Turn the ignition to the ON position (as far as you can go without starting the engine.)
6. Turn the ignition to the OFF position.
7. Turn the ignition to the ON position
8. Turn the ignition to the OFF position.
9. Release the power UNLOCK button on the door panel. Vehicle will cycle door locks if vehicle entered programming mode
10. Hold down the LOCK and UNLOCK buttons on the remote until the doors lock and unlock. This may take up to 30 seconds.
11. Repeat step 10 NOW for each additional remote. (Including any existing remotes).
12. Turn the ignition to the ON position to exit the programming mode.

FCC WARNING

Statement 15.19(a)(3): This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Dorman Products Inc. could void the user's authority to operate the equipment.

IC WARNING

The term IC before the Certification/Registration number only signifies that the Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference including interference that may cause undesired operation of the device.