
Mivo 250 User Manual



Important Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

Read and understand all instructions. Follow all warnings and instructions marked on the **Mivo™ 250**.

Use only the battery type recommended in the Owener's Manual. Do not use a lithium battery.

Unplug the **Mivo™ 250** from the wall outlet before cleaning. Do not use liquid or aerosol cleaners, just use a damp cloth for cleaning.

Do not place this **Mivo™ 250** near water. For example, do not use near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Do not place this **Mivo™ 250** on an unstable cart, stand or table. It could fall causing seriois damage or impeding operation.

Never place this **Mivo™ 250** near or over a radiator or heat register.

Only operate the **Mivo™ 250** using the type of power source recommended. If you are not sure of the power supply or your home, consult your dealer or local power company.

Do not overload wall outlets and extension cords as this can result in the risk of fire or electrical shock.

Never push objects of any kind into the **Mivo™ 250** as they can touch dangerous voltage points or short out parts

Important Safety Instructions

that could result in a risk of fire or electrical shock.

Take the **Mivo™ 250** to a qualified technician when it requires repair work or service. To reduce the risk of electrical shock, do not disassemble the **Mivo™ 250**.

Opening or removing covers can expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electrical shock during subsequent use.

Unplug the **Mivo™ 250** from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- If the power supply cord or plug is damaged or frayed.
- If liquid is spilled into the unit.
- If the **Mivo™ 250** is exposed to rain or water.
- If the **Mivo™ 250** does not operate normally by following the operating instructions.
- If the **Mivo™ 250** is dropped or the casing is damaged.
- If the **Mivo™ 250** exhibits a distinct change in performance.

Avoid using the **Mivo™ 250** during an electrical storm. There can be a slight risk of electrical shock from lightning.

Do not use the **Mivo™ 250** to report a gas leak, if in the vicinity of the leak.

CAUTION

To reduce the risk of fire or injury to persons, read and follow these instructions:

TELEPHONE WIRING AND JACK INSTALLATION

Use caution when installing or modifying telephone lines. Never install telephone wiring during an electrical storm. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

Never touch un-insulated telephone wires or terminals unless the telephone line is disconnected at the network interface.

BATTERIES

Use only the **AA** alkaline batteries. **Do not use lithium batteries or any rechargeable batteries.** Generally speaking, the terminal can work for about **120** minutes to get and receive E-mail, supported by 4 **AA** alkaline batteries.

Do not dispose of batteries or a battery pack in a fire, as they can explode. Check with local codes for proper battery disposal regulations.

Do not open or mutilate a battery or battery pack. Released electrolyte is corrosive and can cause damage to the eyes or skin. It can be toxic, if swallowed.

Avoid contact with rings, bracelets, keys or other metal objects, when handling batteries. These objects could

Important Safety Instructions

short out the batteries or cause the conductor to overheat resulting in burns.

Do not attempt to recharge a battery or battery pack by heating it. Sudden release of battery electrolyte can cause burns or irritation to the eyes or skin.

Replace all the batteries at one time. Mixing fresh and discharged batteries can cause them to rupture.

Observe the proper polarity, or direction, of any battery. Reverse insertion of a battery or battery pack can cause charging, and can result in leakage or explosion.

Remove the batteries or the battery pack, if you do not plan to use the **Mivo™ 250** for several months at a time. The batteries could leak over that time.

Discard any dead batteries or battery pack as soon as possible because they are likely to leak into the device.

Do not store this **Mivo™ 250**, or any batteries or battery pack, in a high temperature area. Batteries stored in a freezer or refrigerator should be protected from condensation during storage and defrosting. Batteries and battery packs should be stabilized at room temperature before using.

DATA SAFETY WARRANTY

CIDCO will not in any event be liable for:

- Loss of data stored in the returned **Mivo™ 250**. You must ensure that all data has been adequately backed-up before it is returned by printing or writing down if no printing available, because any data stored in this device will be lost during repairs and test procedures.
- Any other loss caused by any error, defect or failure of this **Mivo™ 250**'s hardware or software, or because of any other cause, including but not limited to loss of use, contracts, profits, money paid or payable to third parties and/or stored data.

RANGE LIMITATIONS AND INTERFERENCE

Mivo™ 250 uses advanced cordless technology and communicate with the Base Station under the frequency of 900 MHz. Generally speaking, it can cover 100 feet indoors and 150 feet outdoors **(for the most perfect situation.)**

Please be noted that it may be subject to **interference**.

1. Interference caused by the building structure and its surroundings. The performance for any cordless device will change according to indoor and outdoor environmental conditions, and may be affected by atmospheric conditions.

2. When the terminal is located away from the Base Station. The terminal has a range limitation from the base unit and if static occurs, move it closer to the Base Station.

3. Interference caused by another 900 MHz device. It is also possible for another 900 MHz cordless device that is located close to or in use at the same time, which will cause some interference. Once the device are moved apart or not in use at the same time, the symptoms should disappear.

RESETTING THE DIGITAL SECURITY CODE

When you buy this **Mivo™ 250**, a default security code is assigned between the Base Station and terminal. Only a terminal which has this security code can make cordless connection with the Base Station. This system prevents the possibility of other cordless device dial up through your Base Station. You normally do not need to reset the security code. However, in the unlikely event that you suspect that another cordless device uses the same security code, you can manually change the code.

There are over 1 million choices of security codes assigned randomly to users. The resetting steps are:

1. Make sure that your terminal and Base Station are connected to the A/C adaptors respectively and in idle status.
2. Press the **RESET** key on Mobile for more than 3 seconds. A random security code is automatically assigned.

Note: The product has eight communication channels, working under ISM band. Each channel occupies 250KHz. When user powers on the mobile unit, it will scan the eight channels to find the cleanest one and communicate with the base unit via it.

Table of Contents

RESERVED FOR TOC

Table of Contents

RESERVED FOR TOC

SETTING UP YOUR *Mivo™* 250

There is a difference between being wireless and being wired. Now **Mivo™** 250 has been coming to make a debut in your E-world. Apart from sending and receiving e-mail in the quickest, easiest, and most convenient way,

Mivo™ 250 can used anywhere, provided it works within the range of Base Station signal, because it is wireless.

Oh, my! It sounds so amazing. But no matter whether you are in or out, this guide can give your a thorough-understanding for this hit within 10 minutes.


Before you set off for mivo life, you must make sure of all the components in the box and the steps of setting up this device. The whole apparatus consists of a **Mivo™** 250, a Base Station, a pack of batteries, an A/C adapter, a telephone cord and guide plus some other documents.

Now, you can install the batteries, link the A/C adaptor and the telephone cord to the Base Station. One jack is reserved to link one telephone. Plug the other end of the telephone cord to the wall jack. Once you finish the installation, you should take another check to see if you are on the right track.

Well, here goes. Let's follow these steps to set up your **Mivo™** 250.

Setting Up Your **Mivo™ 250**

Step 1: Unpack your **Mivo™ 250** and verify you have all the items listed here.

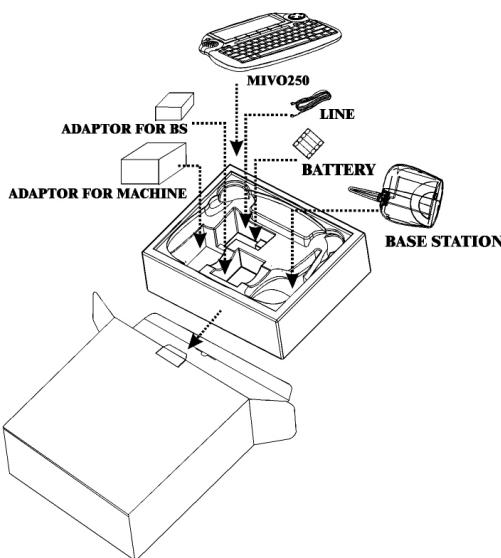

Step 2: Install four AA batteries (included)


When your **Mivo™ 250** does not link to the A/C adaptor, you can carry it wherever you go around the home, office, garden etc, as long as it can communicate with your Base Station wirelessly.

Open the battery compartment cover the back of the device. Pay attention to the positive and negative poles indicated inside the compartment. Make sure to place all batteries according to the directions shown on the indicators.

*Setting Up Your **Mivo™ 250***


Step 3: Plug in the Telephone Line Cord and A/C Adaptor

Use the included telephone line cord, plug the cord into the jack on the back of the Base Station marked with a wall jack. Plug the other end of the cord into a telephone wall jack. You may also connect a telephone, answering machine or Caller ID device via another jack on the back of the Base Station. The Base Station must work with an A/C adaptor to get stable power supply. Plug the adaptor into an available A/C wall outlet and the other end to the Base Station.

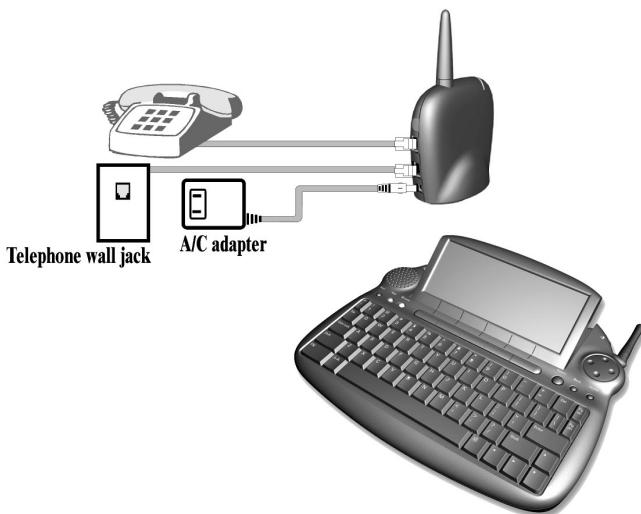

Setting Up Your **Mivo™ 250**

There is another way of setting up your **Mivo™ 250** without the Base Station. It is the wired connection. The corresponding jacks, which are similar to those on the Base Station, are reserved. Plug the one side of the telephone line cord to the jack marked with wall jack on the device and another side to the available wall jack. Fix the A/C adaptor and link another jack to a telephone, an answering machine or Caller ID device.

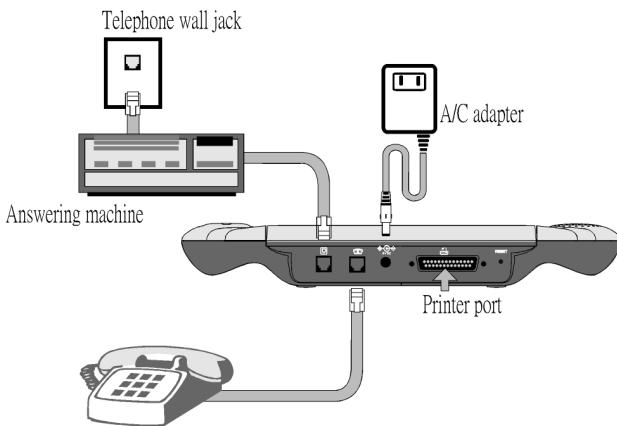


Step 4: Set the time and date


It is nearly ok. Press the **Power** key on the left side of the screen, you can get the main menu screen.

Setting Up Your **Mivo™ 250**

1. After the display of the CIDCO logo, this device will be searching for the Base Station with the **GET E-MAIL LIGHT** flashing quickly. The search result will pop up for your acknowledgement.

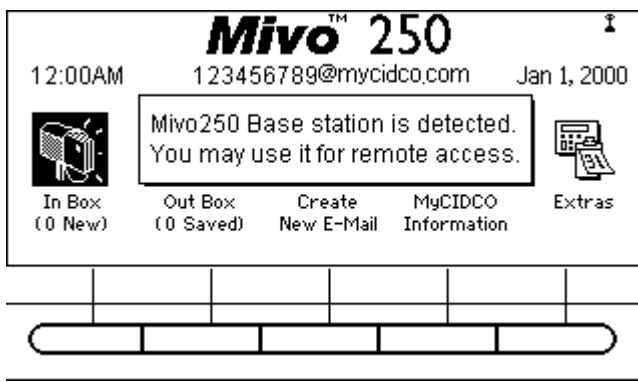


2. On the main menu screen, press the key below the display corresponding to **Extras**.

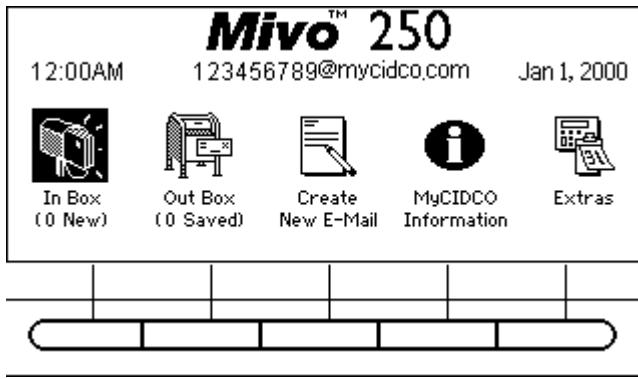


3. Then select **Calendar**.

Setting Up Your **Mivo™ 250**

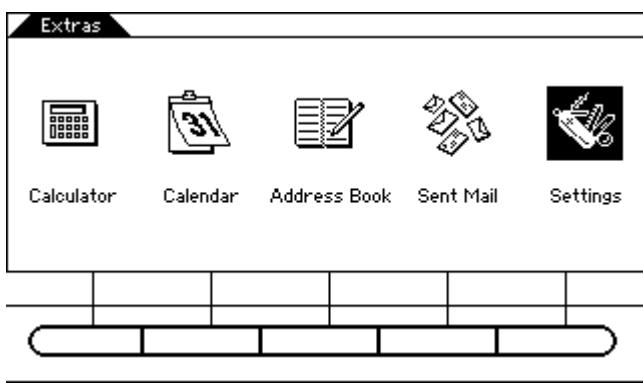


4. Select **Set Time/Date**. You will see the cursor flashing at the beginning of the Date field. Follow the MM/DD/YYYY format to put the current month, date and year.

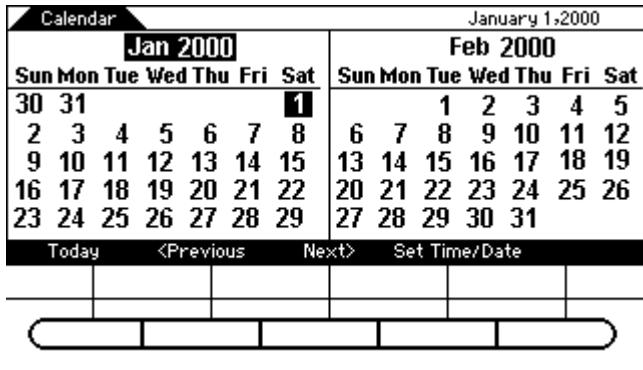

5. Move the cursor to the Time field with the **Down** arrow key or the **Tab** key.

Setting Up Your **Mivo™ 250**

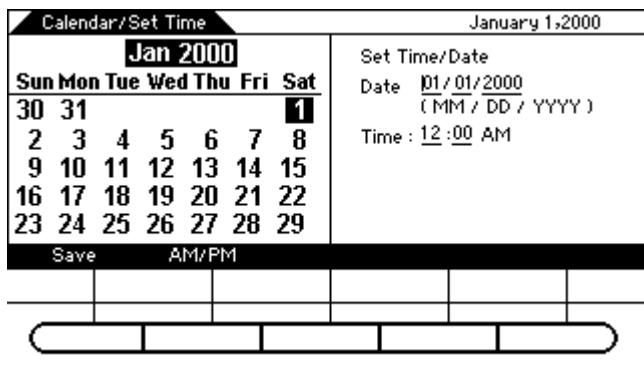

6. Put the current time in the Time field. Use the **AM/PM** key if necessary.
7. Press **Save**.
8. Press the **Main Memu** key.

Now that the **Mivo™ 250** is powered up and connected to a telephone line, you are ready to receive your first E-mail! But if it is your first time to use E-mail and this device, there is something that you should bear in mind.

How E-mail Works

E-mail is like postal mail, better more magic and better.

Electronic mail is created to work in the real world among the lots of virtual post offices on the Internet. It has mail boxes (both incoming and outgoing mail boxes like the ones you often find at your home and on the streets corners), post offices, and envelopes containing written messages. You even have an address book where you store the addresses of people you send mails to.

Electronic mail differs from the postal service in some important and powerful ways, however. For one thing, E-mail is nearly instantaneous when you send a message from your device, it arrives at its destination (the mail receiver/receivers) in minutes if not sooner. E-mail is delivered constantly, 24 hours a day, 7 days a week, it never takes a holiday, so the contact can be made any time, any place. Besides, you can send one mail to many people at the same time.

Once you start using E-mail, it will change the way you think about communicating forever.

How E-mail Addressing Works

Every E-mail user has a unique address where you can send mail. Think that an E-mail is like a mailing address where you receive postal mail.

Everybody in your town or city has a unique street address which allows your mailman to deliver mail to each person or household.

With E-mail, your street, city, state and zip code is combined into a single descriptor called a domain. Think of a domain like `123 Maple Street, Cincinnati, OH 12354` in the postal mail world. Each user within a Domain is assigned a name, just as each person in your household has a unique name.

An E-mail address is simply a combination of a name and a Domain, combined with the @ symbol to separate the two.

So, for example, an E-mail address might look like:

james@mycidco.com

 | | |
Name@Domain Name

Which is like saying:

‘The james who lives at 123 Maple street in Cincinnati Ohio, 12345.’

The difference between domains and actual real-world locations like 123 Maple Street is that people belonging to an E-mail domain may be physically located all over the world. Many of the post offices take care of delivering your mail no matter where you live by using domains.

Mivo™ 250 Keys and Buttons

- a) **POWER BUTTON** --- turn the power on to the device
- b) **MAIN MENU BUTTON** --- take you directly to the Main Menu of the device from most screen.
- c) **FUNCTION (Fn)** --- offers shortcuts to some frequently done tasks. For example, pressing the **FUNCTION** key at the same as the PGDN key allows you to move to the next E-mail while in the **IN BOX**.
- d) **@ KEY** --- located to the right of the **SPACE** bar, is a shortcut key for the @ symbol. This symbol is used in every E-mail address.
- e) **UP, DOWN, LEFT or RIGHT ARROWS** --- allows you to move the cursor in the corresponding direction.
- f) **CAPS LOCK** --- locks the keyboard so that all typed letters are capitalized (much like holding down the shift key on a typewriter). Press once to turn on the Caps Lock function, press again to turn it off.
- g) **SHIFT** --- hold down to capitalize a letter or type the symbol located at the top of a key.
- h) **TAB** --- moves between data input fields.

-
- i) **BACK BUTTON** --- moves backwards one screen at a time.
 - j) **PRINT BUTTON** --- prints the current E-mail, provided the **Mivo™ 250** is connected to a compatible printer.
 - k) **GET E-MAIL BUTTON** --- press at any time to check for new E-mail or send messages saved in the **OUT BOX**, provided your **Mivo™ 250** is connected to an available telephone line.
 - l) **A --- A SIZE** --- press this key to switch between two font sizes. This function does not work primary menu screens.
 - m) **SPELLING BUTTON** --- press this button to check the spelling of the currently displayed message.
 - n) **HOME** --- press the Function key with the **LEFT ARROW** key to go to the beginning of a line.
 - o) **END** --- press the Function key with the **RIGHT ARROW** key to go to the end of a line.
 - p) **DEL** --- press this key to delete the characters to the left of the cursor, one at a time.
 - q) **PGUP** --- press to move up through a displayed E-mail one screen at a time.
 - r) **PGDN** --- press to move down through a displayed E-mail one screen at a time.
 - s) **ENTER** --- Use as the Return on a typewriter or Enter key on a computer keyboard. Functions the same as the **SELECT BUTTON**.
 - t) **Get E-MAIL LIGHT** --- indicates you have new E-mail waiting to be read. This will only light when you have

pressed the **Get E-MAIL** button or the device has automatically connected and received new E-mail. It also usually gives off a few seconds of quick flash when searching for the Base Station.

u) **SCREEN CONTRAST ADJUSTMENT DIAL** --- located along the upper right hand side of the device. Rotating this dial adjusts the brightness and contrast of the screen.

v) **NAVIGATION KEYS** --- Your device has five **NAVIGATION** keys --- the long keys located directly below the screen. These keys have different functions depending upon which screen you are viewing. The description displayed above each **NAVIGATION** key determines its current function. These descriptions change as you `navigate` through the device system.



w) **SCREEN DISPLAY** --- allows you to view E-mail, menus, etc.

x) **SPACE BAR** --- allows you to enter a space between characters.

y) **SELECT BUTTON** --- allows you to select the E-mail hightlighted or the option displayed on the screen. Functions the same as the **ENTER BUTTON**.

z) **DIRECTIONAL BUTTON** --- used interchangeably with the **ARROW** keys, the **DIRECTIONAL** button allows you to easily scroll up, down, or sideways by pressing the corresponding arrow on the button.

Function Key (Fn)

The FUNCTION (FN) key offers shortcuts to some frequently done tasks. Some of these 'Functions' are printed below the primary number or letter on the key. For example, pressing the FUNCTION (FN) key at the same time as the FGDN key allows you to move to the Next E-mail while in the IN BOX (notice that 'Next' is written below PGDN). In addition to the functions available by using the labeled keys, there are other functions that you may find helpful as:

FUNCTION (FN) + RIGHT moves the cursor to the right margin

FUNCTION (FN) + LEFT moves the cursor to the left margin

FUNCTION (FN) + TAB makes a four space indentation

FUNCTION (FN) + A highlights text in an E-mail

FUNCTION (FN) + C copies text in an E-mail


FUNCTION (FN) + V pastes text in an E-mail

FUNCTION (FN) + X cuts texts from an E-mail

FUNCTION (FN) + S displays the user information. You can edit the user name and dial-up number from this screen.

Shortcut Key Strokes

Shortcut key strokes allow you to select an option from a pop-up message box using one stroke on the keypad. A shortcut key is indicated by an underlined character. For example, to select `SAVE IN OUT BOX` from the following screen, press the `S` key.

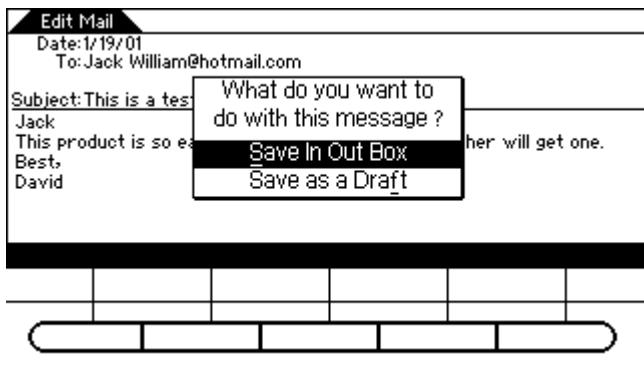


Send and Receive E-mail

After you press **GET E-MAIL** button, the **Mivo™ 250** will communicate with the Base Station, dial up to the E-mail server, receive the E-mails on the server and send out the E-mails saved in **OUT BOX**. (Make sure the telephone line cord is securely connected.)

 **Note:**

To make your *Mivo™ 250* work more stably during mail collection, we advise you to apply to A/C adaptor rather than batteris.

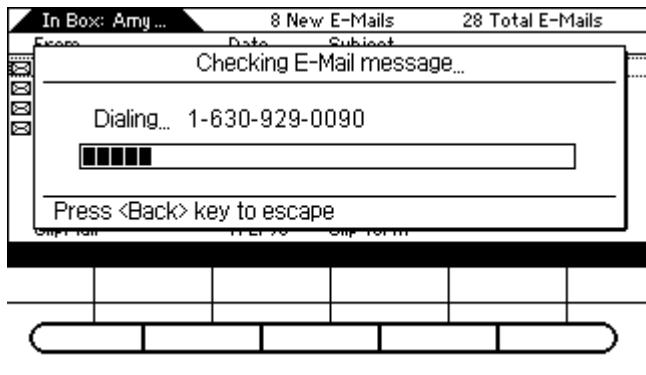

After logging on your E-mail account, it will display the percentage of E-mail collection. If there are some new mails arriving at your **IN BOX**, the **GET E-MAIL LIGHT** will flash. When you enter the **IN BOX**, you can see the small envelope indicator  in the left margin of the screen.


Use Your In Box

Use Your In Box

In **IN BOX**, you can see how many new or unopened mails are there as well as the total amount of mails. The list contains the author, Date and Subject of each mail. If the mail is new or unopened, there is an indicator  before the sender.

In Box: Amy ...			4 New E-Mails	7 Total E-Mails
From	Date	Subject		
Janny@yahoo.com	7/2/00	a new product		
 Peter yah	6/29/00	Hello!		
 Cideo@cideo.com	5/3/00	Amazing Chat Game		
Cox	3/31/00	This Line is too long to Complete		
 Myfavor@hotmail.com	3/3/00	Last line is too long to display		
 Baldwin	2/15/00	Bye-Bye		
Inventec@inventec.com	1/10/00	Thanks		

 
Read Delete New Check



Read E-mail

While viewing the incoming mail list, you can use **UP** and **Down ARROW** keys to locate the message you want to read. Press **ENTER** or the **NAVIGATION** key indicating **READ**. The cursor will flash at the beginning of the mail content.

Use Your In Box

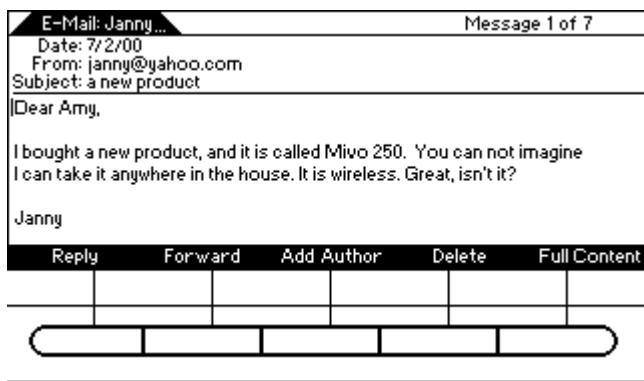

Reply to an E-mail Message

You can directly reply the message you are reading to its author. Press the **NAVIGATION** key indicating **REPLY**. A dash line will appear and separate the mail into two. The cursor will flash above it. If you want to let others get this replied mail meanwhile, just refer to the Address Book or type in the addresses in the 'To' field. Press **ENTER** after each address. Once you finish the mail, you have 4 options to handle it. (a). send it out immediately; (b). save it in the OUT BOX to be sent later; (c). save it as a draft for later edit; (d). discard it without saving.

Forward an E-mail Message

Press the **NAVIGATION** key indicating **FORWARD**. A dash line will appear and separate the mail into two. The cursor will flash in the 'To' field. Refer to the Address Book or type in your desired addresses that you want to forward the mail to. Once you finish the mail, you have 4

options to handle it. (a). send it out immediately; (b). save it in the OUT BOX to be sent later; (c). save it as a draft for later edit; (d). discard it without saving.



Need to Know

When forwarding a message, be aware that there is a limitation of approximately 50 lines of text including address(es), subject line and headers. If the message is close to 50 lines and you add addresses or text of your own, the bottom portion of the forwarded message may be cut-off.

Add the Author to Your Address Book

If you find the address of a mail you are reading is a new one, you can press the **NAVIGATION** key indicating **ADD AUTHOR** to save the E-mail address and the screen goes to the Address Book. In the screen below, you also can include additional information such as phone and fax numbers. If your Address Book has already got this entry, it will inform you when saving.


New Entry					
First Name:	Janny				
Last Name:					
E-Mail Address:	Janny@yahoo.com				
Home Phone:					
Office Phone:					
Mobile Phone:					
Fax Number:					
Pager:					
Others:					
Save					

Delete the Message You are Reading

To delete the message you are reading, you just press the **NAVIGATION** key indicating **DELETE**. A pop-up message will ask your confirmation. Use the **UP** or **DOWN ARROW** keys to select **YES** to delete or **No** to return to the message.

Full Content View

Press the **NAVIGATION** key indicating **FULL CONTENT** to hide the message header (the date, sender and subject). Press the **NAVIGATION** key again to show the message header.

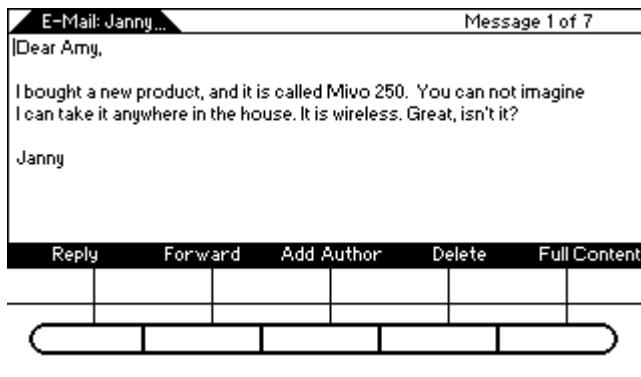

 **Need To Know**
When the message is more than one screen long, use the UP or DOWN ARROW keys or PGUP/PGDN keys to scroll through the message.

Truncated E-mail

If a message is more than 50 lines long, includes an attachment, or is in **HTML** or **MIME**, you may receive a 'Message Truncated' message, meaning that the message is incomplete or cut-off (there can be other reasons that a message may be truncated, such as special fonts, colors, or extensive routing information). In this case, you must use a personal computer with an Internet Browser to access the entire message.

- a. From a personal computer, go to:
- b: Use your account name and password to access your message

Attachments to E-mail

A paperclip symbol  next to the subject of an E-mail indicates that there is an attached file which can not be viewed with the **Mivo™ 250**. An attached file may be a picture or another file. You may also receive a 'Message Truncated' message if there is an attachment to the E-mail.

You can view messages and their attachments by using a personal computer with access to the Internet, as mentioned above.

Mailer Daemon Failure Notices

Mailer Daemon return/failure notices mean that there was a problem and your message could not be delivered. Most Mailer Daemon returns are caused by simple typographical errors in the E-mail address. If you read the

failure notice it will tell why you received the message back.

Delete an E-mail

Use the **UP/DOWN ARROW** keys or **DIRECTIONAL** buttons to locate the mail you want to delete, press the **NAVIGATION** key indicating **DELETE** to delete the inversed mail. You will get a pop-up message for your confirmation. Select **Yes** to delete the message or select **No** to exit without deleting.

Create an New E-mail

Press the **NAVIGATION** key indicating **NEW** to compose a new E-mail message. (See more in 'Create New E-mail' section.)

Check for E-mail

Press the **NAVIGATION** key indicating **CHECK** to dial up your user account and preceed mail collection. (or press the **GET E-MAIL** button to send and receive messages).

Use Your Out Box

Use Your Out Box


There are two kinds of messages in **OUT BOX**. They are mail and draft. The mails can be sent out when the device is dialed up, while the drafts with a small pen indicator  before the recipient, can not.

Out Box: Amy ...			12 Saved E-Mails
To	Date	Subject	
 Jack William@hotmail...	8/31/00	This is a test	
 Peter@yahoo.com	8/25/00	PC home Daily	
 David Johnson@net...	8/22/00	News-Morning Coffee Edition	
 Michelle Lee@hotmail...	8/15/00	Happy Birthday	
 Domino Mellon@net...	8/12/00	I'm in New York now	
 Melissa George@ya...	8/8/00	Thank you for your help!	
 Michael Johnson@n...	7/28/00	Weekly news	
 Murray Tailor@hotmail...	7/2/00	Congratulations!	
 Linda Tailor@hotmail...	7/2/00	Congratulations!	
Edit	Delete	New	Send All

Edit a message


You can edit the yet-to-be-sent E-mail and drafts in **OUT BOX**. While viewing the outgoing message list, you can use **UP** and **DOWN ARROW** keys to locate the message you want to edit. Press the **ENTER** or the **NAVIGATION** key indicating **EDIT**. The cursor will flash at the beginning of the message. You also can edit 'To:' and 'Subject:' fields by using **UP ARROW** key.

Use Your Out Box

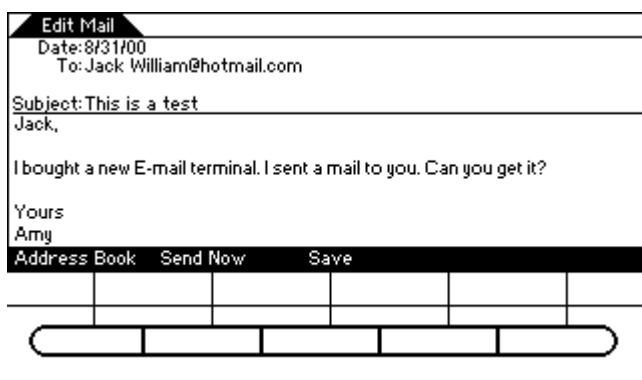

Delete a Message

Press the NAVIGATION key indicating DELETE, you can delete the selected message after your confirmation.

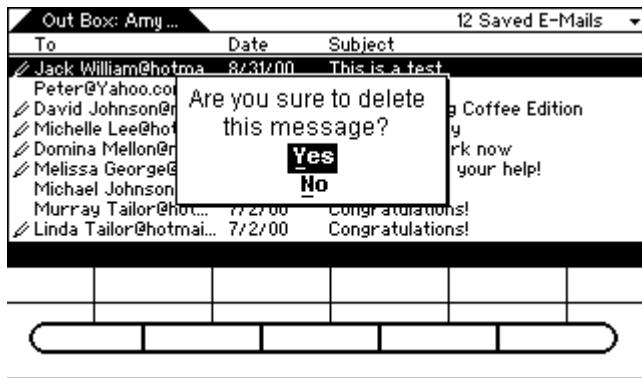


Create a New E-mail

Press the **NAVIGATION** key indicating **NEW** to compose a new E-mail message. (See more in 'Create New E-mail' section.)


Send All E-mails

Press the **NAVIGATION** key indicating **SEND ALL**, you can send out all the saved E-mails.

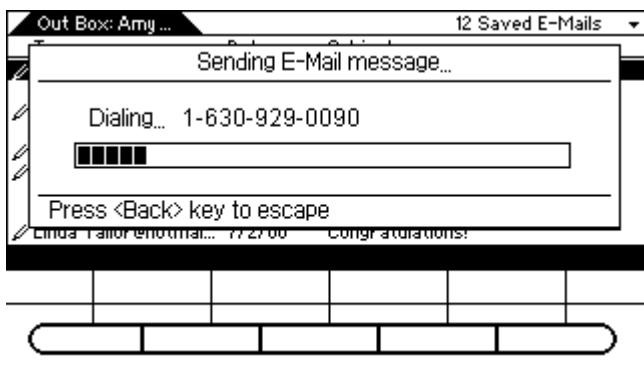

Create New E-mail

From the Main Menu, press the **NAVIGATION** key indicating **CREATE NEW E-MAIL**, an empty message jumps out with the current day and cursor flashing at the beginning of the 'To:' field.

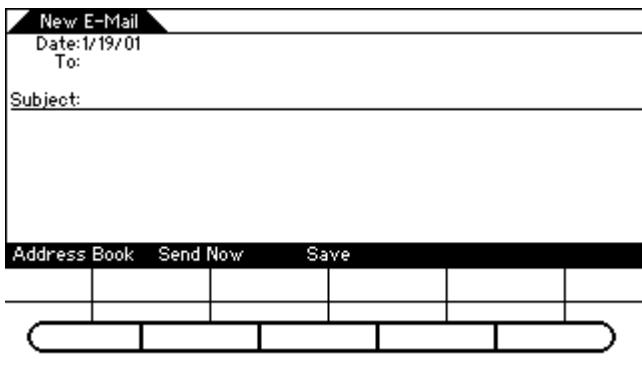


Address an E-mail

You may either input addresses directly or refer to your Address Book. If you directly input an address which has already been in your Address Book, when you begin to type a recipient's first name into the 'To:' field, this device will associate it with your Address Book and automatically fill that address. If you have first names that start with the same letters, you will need to keep typing until you reach the first different letter in that name.

Create New E-mail

The screen below shows how it works.

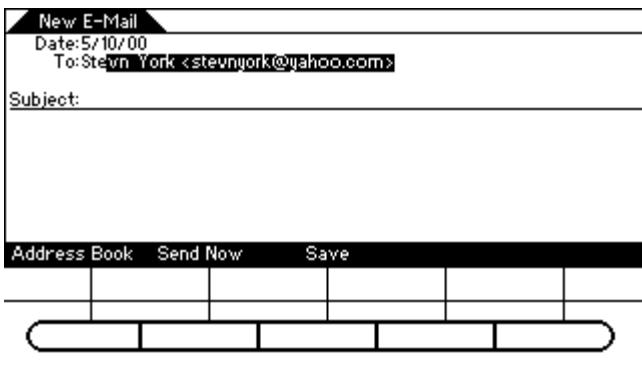

To send the same message to more than one person, type the first address and press **ENTER**. Then type in the next E-mail address. You can repeat this procedure to send your message to approximately 30 E-mail addresses. You will only be able to see the last two E-mail addresses that you have typed. To review the list of addresses, scroll up and down using **UP** and **DOWN ARROW** keys. You may get an error message if your address list and E-mail message exceed the 4K capacity. If you get an error message, delete addresses and / or edit your message accordingly.

Create New E-mail

To get an address from your Address Book, press the **NAVIGATION** key indicating **ADDRESS BOOK** in composing an E-mail. You will see a list of addresses with the name and E-mail address for each entry.

Address Book			9 Entries
Name	E-Mail Address	Fax	
David Johnson	David@netaddress.net	1408-107-3186	
Domina Mellon	Domina@netaddress.net	016-1706-3527	
Jack William	Jack William@hotmail.com	011-32-3781-0127	
Melissa George	Melissa@Yahoo.com	1066-106-8535	
Michael Johnson	Michael@netaddress.net	052-1508-3685	
Michelle Lee	Michelle@hotmail.com	1408-996-1001	
Murray Tailor	Murray@hotmail.com	018-3589-2785	
Peter Johnson	Peter@Yahoo.com	1415-399-0848	
Smile Shi	SLS@hotmail.com		

E-Mail To **Edit** **Show Detail** **Create New**

Select the address to whom you want to send the message by using **UP** or **DOWN ARROWS**. Press the **NAVIGATION** key indicating **E-MAIL TO**. The E-mail address will be placed in the 'To:' field. To send to more than one person, just press **ENTER** or **NAVIGATION** key indicating **ADDRESS BOOK** to choose additional addresses from your Address Book.

Press the **NAVIGATION** key indicating **EDIT**, you can edit the content of the inversed address.

Press the **NAVIGATION** key indicating **SHOW DETAIL**, you can view the detailed content of the inversed address.

Press the **NAVIGATION** key indicating **CREATE NEW**, you can create a new entry in your Address Book.

Compose an E-mail

Press the **DOWN ARROW** key or the **TAB** key, you can move the cursor to the `Subject:` field and enter a subject. It is ok if you do not type any word in this field. Go on pressing **DOWN ARROW** key or the **TAB** key, you can move the cursor to the content area. There you can compose your message.


Send E-mail Now

Press the **NAVIGATION** key indicating **SEND NOW**, you can dial up and send out this E-mail immediately. However, your device will not collect the incoming mails from the server.

Need To Know

If the `To:` field is empty, it will warn you and this mail can not be sent out. Please also be aware of the accuracy of the E-mail addresses that you have typed.

Save an E-mail

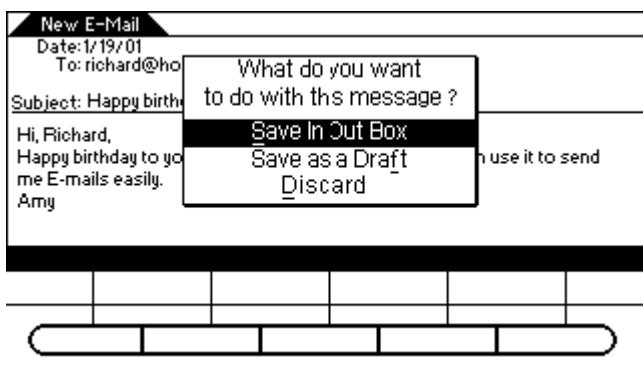

Create New E-mail

Press the **NAVIGATION** key indicating **SAVE**, you have two options: Save in Out Box and Save as Draft.

Press **ENTER** key or **S** key, you can save this E-mail into the **OUT BOX** and exit E-mail-composing.

Press **DOWN ARROW** once, then press **ENTER** key or **F** key, you can save it as a draft into the **OUT BOX** with a pen indicator  next to it.


Press **DOWN ARROW** key twice, then press **ENTER** key or **D** key, you can exit without saving.

Enjoy MyCIDCO Information

Enjoy MyCIDCO Information


To make **Mivo™ 250** show more powerful function, some special service is introduced. MyCidco Information service you with lots of information, ranging from News Headlines to Sports, Movie, etc, up to five channels.

Press the **NAVIGATION** key indicating **MYCIDCO INFORMATION**, you can read all kinds of information.

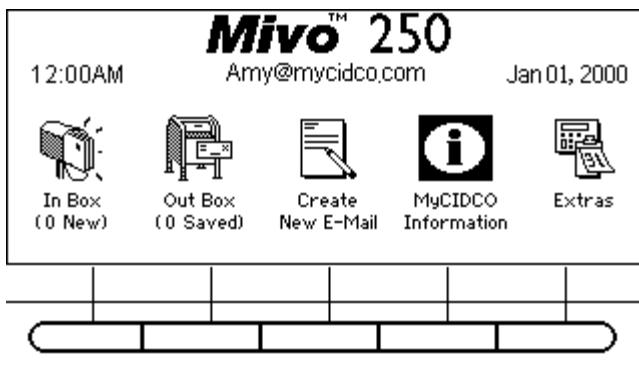

Use Your Extras


Besides sending and receiving E-mail messages and MyCIDCO Information, **Mivo™ 250** also provides you with additional useful features, such as Calculator, Calendar, Address Book, Sent Mail, etc.

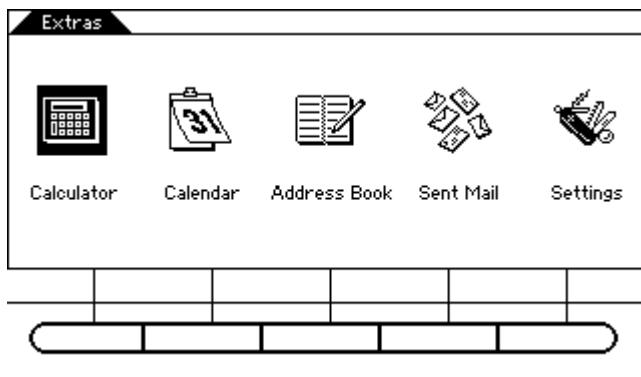

Calculator


Press the **NAVIGATION** key indicating **CALCULATOR**. Type the equation through the keyboard, press the **NAVIGATION** keys indicating **+-x÷**, press **ENTER** or **=** key for total.

Use Your Extras

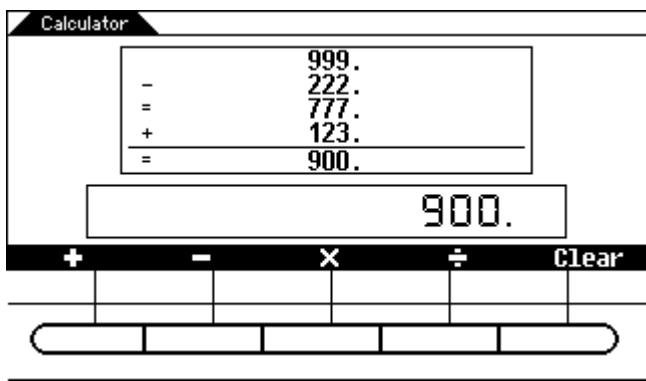

Calendar

Press the NAVIGATION key indicating CALENDAR in Extras menu, you can get the calendar screen.

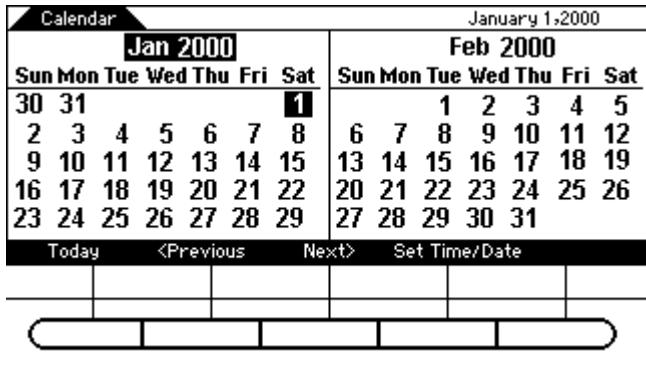

Use the **ARROW** keys to move to another day within the displayed month.

Press the **NAVIGATION** key indicating **TODAY** to move to the current date.

Press the **NAVIGATION** keys indicating **<PREVIOUS** or **NEXT>** to view the previous or next month.

Set the Time and Date

Press the **NAVIGATION** key indicating **SET TIME/DATE**, you can change it to your desired one.

The cursor flashes at the beginning of the `Date` field. You should follow the format of **MM/DD/YYYY**. Press **TAB** key to move to the `Time` field to enter the current time. Use the **NAVIGATION** key indicating **AM/PM** if necessary. Press the **NAVIGATION** key indicating **SAVE** to confirm the change.


Address Book

The Address Book here is designed for your E-mail addresses storage. By saving those addresses, you need not type them again and again in composing E-mails. Besides, you also can save fax numbers, mobile number and etc. for later reference.

Use Your Extras

Address Book				9 Entries
Name	Home	Office	Mobile	
David Johnson				
Domina Mellon				
Jack William				
Melissa George				
Michael Johnson				
Michelle Lee				
Murray Tailor				
Peter Johnson				
Smile Shi				800-366-6045

 New Edit Delete Print Send Mail




Create a New Address

Press the **Navigation** key indicating **NEW** in the list screen, you can get a box saying **INDIVIDUAL** and **GROUP** in the lower left hand corner. You can choose which type of address you would like to create, **INDIVIDUAL** or **GROUP**. Press **ENTER** key to select highlighted type. You also can press **D** key or **G** key to choose the type.

Address Book				9 Entries
Name	Home	Office	Mobile	
David Johnson...				
Domina Mellon				
Jack William				
Melissa George				
Michael Johnson				
Michelle Lee				


Individuals
Groups

 
800-366-6045



Create an Individual Address

 The cursor is flashing in the field of 'First Name'. Input the contact information into each field. Press **TAB** key to move the cursor down to the next field. Press the **NAVIGATION** key indicating **SAVE**, you can save this entry and exit to the address list screen.

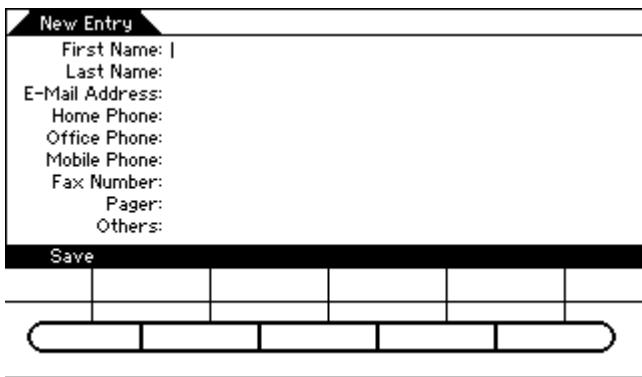

First Name:	Last Name:
E-Mail Address:	Home Phone:
Office Phone:	Mobile Phone:
Fax Number:	Pager:
Others:	
Save	
<hr/>	
	




Need To Know

You must enter E-mail address exactly as they are spelled, including the server and extension. The addresses should always be typed in lower letters and must be entered without using spaces or any extra characters. If even one character is missing or entered incorrectly, your E-mail will not get to its destination. The letters www are never part of an E-mail address.

Create a Group Address

A group address is a collection up to 100 individual E-mail addresses. By selecting a group address, the message will be sent to all the individuals in that group.


As you select to create a group address, you will be required to type the group name. Press the **NAVIGATION** key indicating **OK**, you will save it and start creating the group address list.

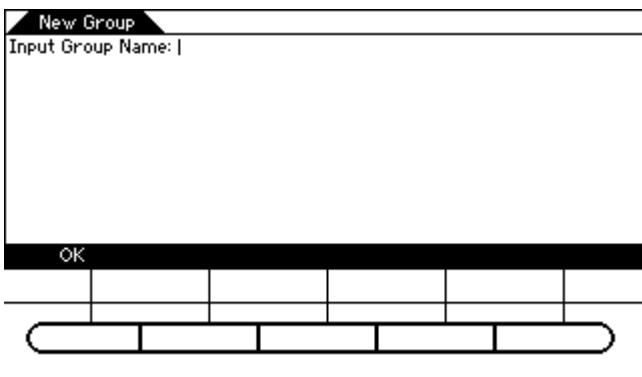


Press the **NAVIGATION** key indicating **NEW**, you can create an individual address and add it into the group address after you have saved it.

Press the **NAVIGATION** key indicating **ADD**, you can enter address list and select the address that you want to take to this group.

Use Your Extras

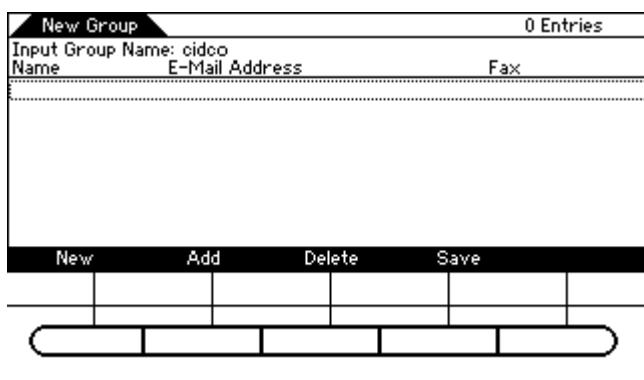

Press the **NAVIGATION** key indicating **ADD**, you can add the highlighted address to the new group.

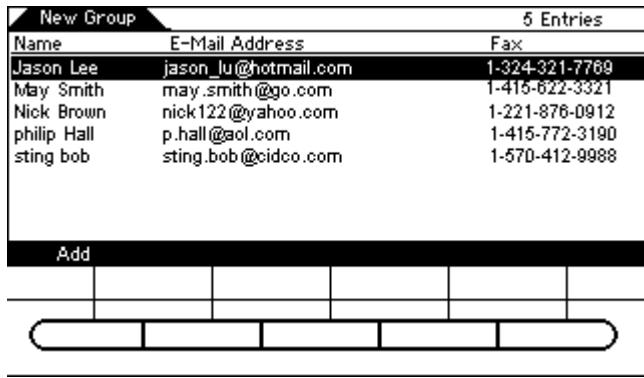


Press the **NAVIGATION** key indicating **DELETE**, you can remove the selected address from the group. However, the address still remains in your Address Book. It is not deleted literally.

Press the **NAVIGATION** key indicating **SAVE**, you can save the group address and exit to the address list screen.

Edit an Existing Address

In the address list screen, press the **NAVIGATION** key indicating **EDIT** after you have located an entry by move **UP** or **DOWN ARROW** keys.

Press **TAB** keys or move **UP** and **DOWN ARROW** keys to move the cursor between fields. Once you finish editing, press the **NAVIGATION** key indicating **SAVE** to save it.

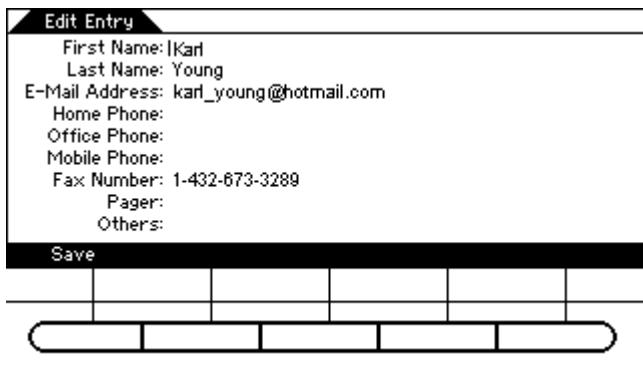

Press the **NAVIGATION** key indicating **DELETE** in the list screen, you can delete the inverted address after the pop-up confirmation.

Use Your Extras

Press the **NAVIGATION** key indicating **PRINT**, you can print the whole Address Book list out.

Send Mails from the Address Book


Select an address entry by using **UP** and **DOWN AR-ROW** keys, press the **NAVIGATION** key indicating **SEND MAIL**. The E-mail address will be added to a 'To:' field in a new mail. For more information of creating E-mails, please read the 'Create New E-mail' section.

Sent Mail

From the **EXTRAS** menu, press the **NAVIGATION** key indicating **SENT MAIL**, you can get a long up to 25 sent messages.

Sent Mail				12 Sent E-Mails ▾
To	Date	Time	Subject	
Jack William@hotmail...	8/31/00	12:00AM	This is a test	
Peter@yahoo.com	8/25/00	12:00AM	PC home Daily	
David Johnson@netad...	8/22/00	12:00AM	News-Morning Coffee Edi...	
Michelle Lee@hotmail...	8/15/00	12:00AM	Happy Birthday	
Domina Mellon@netad...	8/12/00	12:00AM	I'm in New York now	
Melissa George@yahoo...	8/8/00	12:00AM	Thank you for your help!	
Michael Johnson@net...	7/28/00	12:00AM	Weekly news	
Murray Tailor@hotmail...	7/2/00	12:00AM	Congratulations!	

 Delete **Delete All** **Read**



Settings



CAUTION

Selection of a dial-up number may result in incurring toll or long distance charges while sending and retrieving E-mail. The user is solely responsible for any and all charges resulting from choosing and/or changing their dial-up number.

From the **EXTRAS** menu, press the **NAVIGATION** key indicating **SETTINGS**, you can view and edit your dial-up information. Use the **DOWN ARROW** or **TAB** key to move the cursor between the fields. Locate the desired dial-up number using the Dial-Up information booklet provided with your **Mivo™ 250**. Press the **NAVIGATION** key indicating **SAVE** to save your changes.

Settings		XTND: Off V2.01Y
User Name: New Customer		
Dial-Up No: 1-415-442-4600		
Reply-To:		
E-Mail Address: @mycidco.com		
Automatically Check Mail <input type="button" value="No"/> <input type="button" value="Yes"/>		
Auto Check Time <input type="button" value="02:00"/> <input type="button" value="AM"/> <input type="button" value="PM"/>		
Do you have call waiting? <input type="button" value="No"/> <input type="button" value="Yes"/>		
Ignore dial tone when dialing? <input type="button" value="No"/> <input type="button" value="Yes"/> Speaker <input type="button" value="Yes"/> <input type="button" value="No"/>		
Battery Status: High		Current Time: 06:27 AM
<input type="button" value="Save"/> <input type="button" value="Set Time/Date"/>		<input type="button" value="Details"/>
<hr/> <hr/> <hr/>		



Need To Know

Make sure to enter all information correctly as any error will result in this device being unable to access your account. Include all the same digits that are necessary to dial the number from your regular telephone. For example: if it is necessary to dial a 1 or an area code before the number from your regular telephone, it is also necessary to include these numbers as part of the dial-up number in the Mivo™ 250.

Note

Press **FUNCTION + S** as a shortcut to the Settings screen.

Edit User Settings

Use the **UP** or **DOWN ARROW** key or **TAB** key to move the cursor into the desired field for editing. Use the **LEFT** or **RIGHT ARROWS** to toggle between the choices within a field. For example: use the **LEFT** or **RIGHT ARROWS** to choose between **AM** or **PM** in the time field.

AUTOMATICALLY CHECK MAIL

The Auto Check feature of the **Mivo™ 250** enables you to automatically connect to the server one time per day to check for new messages and send messages saved in your **OUT BOX** (except draft message), provided that it is properly connected to a telephone line and has enough power. Select **YES** to turn on this feature. Choose the time you would like to check for messages.

SET CALL WAITING OPTION

If you subscribe to call waiting, choose **YES** to block call waiting during connect to the server.

Note

Call waiting blocking is not available in all areas.

SPEAKER

Turning speaker **ON** (to hear dial tone during transmission) or **OFF** by selecting **YES** for **ON** or **NO** for **OFF**.

CHOOSE TO IGNORE DIAL TONE

Select **NO** to wait for a dial tone to be detected by the device before dialing. Select **YES** to dial without waiting for a dial tone.

VIEW BATTERY STATUS

View the battery status to determine whether it is time to replace the batteries or plug in the AC adaptor.


SET THE CURRENT TIME

Press the **NAVIGATION** key indicating **SET TIME/DATE**, your **Mivo™ 250** will prompt you to save your changes. Select **YES** at the pop-up message box. Once you save your changes you will see the **CALENDAR/SET TIME** screen displayed. Set the time from this screen. Press **SAVE**.

Value-added Features

Spelling Check

While you are not sure of some words in composing a mail, you can press **SPELLING** button. This device will check the spelling of the words you have input.

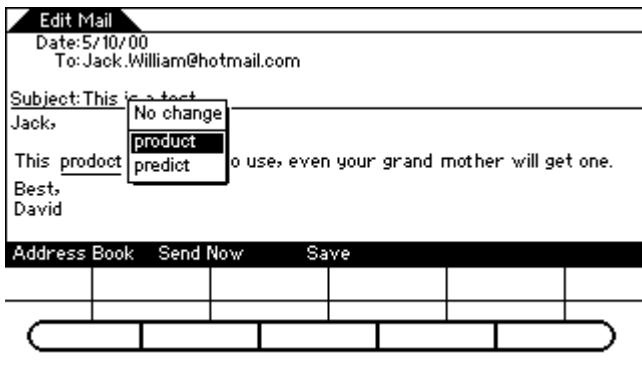

Print

Using a parallel printer port (IEEE-1284), connect your device to a printer that supports MS-DOS printing. (printer cable not included.)

⚡ WARNING


Make sure that the power to the *Mivo*™ 250 and power are off when connecting the two devices.

Press the **PRINT** button, you can get a printed copy of E-mail. You have two options: E-mail format and Letter format.

Value-added Features

If you choose **E-MAIL FORMAT**, the message will be printed with all the information, including the date, address, subject and content.

If you choose **LETTER FORMAT**, only the content of the message will be printed.

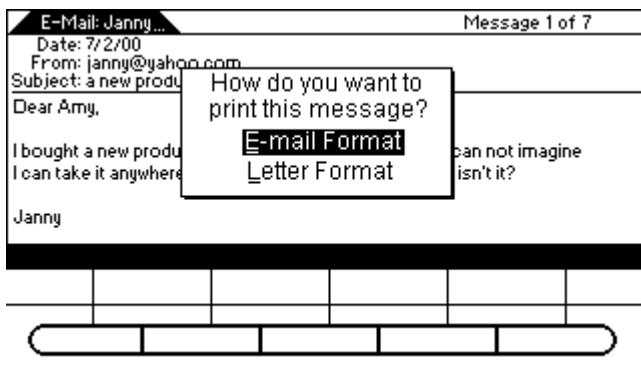

Font Size

Press **A--A Size** button, you can view the screen in larger font. Press it one more time, you can see the normal font again.

Value-added Features



Automatic Memory Optimization

The device will automatically do memory optimization when necessary.

FCC Requirements

FCC Part 15 Information

This device complies with part 15 of the FCC Rules. Operations is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modification to this device not expressly approved by CIDCO Incorporated could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can reduce radio frequency energy. If not installed and used in accordance with the instructions, the equipment might cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC Requirements

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 68 Information

This product complies with Part 68 of FCC Rules. The Federal Communications Commission (FCC) has established these rules that permit this device to be directly connected to the telephone network. Standardized jacks are used for these connections. This equipment should not be used on party lines or coin phones.

If this device is malfunctioning, it might also be harmful to the telephone network; disconnect the unit until the source of the problem is determined and the device is repaired.

The telephone company may make changes in its technical operations and procedures; if such changes affect the use or compatibility of the device, the telephone company is required to give adequate notice of the changes. You will be advised of your right to file a complaint with the FCC.

If the telephone company requests information on what equipment is connected to their lines, inform them of:

- The telephone number to which this device is connected.

FCC Requirements

- The FCC registration number and ringer equivalence number (REN) found on the bottom of the unit.

The FCC requires that you connect your device to the telephone network through a modular telephone outlet or jack. The appropriate outlet or jack is USOC RJ-11C, RJ-14C, RJ-11W or RJ-14W.

A label on the base of this equipment contains information about the FCC registration number and the Ringer Equivalence Number (REN). The REN determines the number of communication devices that can be connected to your telephone line. In most areas, the sum of RENs should not exceed 5. If too many devices are attached, they might not ring properly.

If you are using a cordless telephone product, some frequencies might cause interference to nearby TVs and VCRs. To minimize this type of interference, do not place the cordless base on top of or near a TV or VCR. If you continue to experience interference, move the base further away from the TV or VCR. This equipment can not be used on public coin telephone lines. Connection party line service is subject to state tariffs.

Warranty

If your **Mivo™ 250** is defective in material or workmanship and you return it within one year from the date of purchase, we will repair it; or at our option, we will replace it. If we repair it, we might use reconditioned replacement parts or materials. If we choose to replace it, we might substitute an identical reconditioned unit. The repaired/replacement unit is warranted for either (a) ninety days, or (b) the remainder of your device original one year warranty, whichever is longer.

WHAT YOU NEED TO DO

To receive warranty service, you must provide proof of purchase (your sales receipt) and date of purchase.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover defects resulting from accidents, alteration, failure to follow this manual's instructions, battery leakage, misuse, fire, flood, and Acts of God.

We do not warrant this product to be compatible with party lines, with all types of telephone equipment, or with your specific customer premises equipment. Shipping costs to and from authorized service centers are not covered.

Warranty

We are not responsible for implied warranties, including those of fitness for a particular purpose and merchantability after the initial one year period. We do not pay for loss of time, inconvenience, loss of use of the product, or property damage caused by this product or its failure to work, telephone company service calls, or any other incidental or consequential damages.

State Law Rights

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above exclusions might not apply to you. This warranty gives you specific rights; you might also have other rights, which can vary from state to state.