 


Polartec Heat® Blanket Instruction Manual

- 2 Warnings and Safeguards
- 5 Introduction
- 6 Getting Started
- 8 Using the Wireless Remote Control
- 9 Setting the Control Side/
Synchronizing the Remotes to the Base Unit
- 10.... Locating Your Remote for Easy Access
- 11.... Replacing the Battery
- 12.... Care and Cleaning
- 13.... Troubleshooting

IMPORTANT INSTRUCTIONS – DO NOT DESTROY



Warnings and Safeguards

As with all electrical products, misuse of product or failure to properly follow the instructions may cause overheating, fire, or personal injury. Please read the product label and all of the instructions before using your blanket.

1. Do not use the blanket with an infant, a child, an incapacitated person, a paraplegic, a quadriplegic, a diabetic, one insensitive to heat, or anyone who cannot clearly understand the instructions and/or operate the controls.

2. Do not use with damaged cords. Do not trap, fold, cross, or pinch cords between bed slats, mattress, or springs, or against walls, footboards, or bed frame.

3. Do not dry clean this blanket. Cleaning liquid may damage the insulation of the heating element. Improper laundering may cause problems with the heating element, which can lead to fire.

4. Do not pinch, flex, or expose the heating element to rubbing. A damaged heating element may result in possible over-heating or fire.

5. Excessive heating may result from folding bedding when in actual use.

6. Turn off the blanket control when not using the blanket.

7. Do not use pins; they may damage the electric heating element.

8. Be sure this blanket is only on an AC supply current of 110-120 volts. Do not use with an extension cord.

9. Keep all dogs, cats, and other pets away from this blanket. This is an electrical appliance that they can damage or be injured by.

10. Do not use on a waterbed, sofa, bunk bed, or mechanically adjustable bed.

11. Do not use more than one electric heating device on the bed at the same time, such as another electric blanket, mattress pad or heating pad.

12. Use the proper size blanket for your bed. For example, use "Queen Size" on a queen bed.

13. Keep the control away from an open window.

14. If you see the blanket operating improperly, unplug it immediately and call Lands' End Customer Service at 800-746-3467.

 
 
 
 
 
 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and with UL 964. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1 .This device may not cause harmful interference.
- 2 .This device must accept any interference received,including interference that may cause undesired operation.

Warning:Changes or modifications not expressly approved by the party responsible for compliance could void the user 's authority to operate the equipment.





Introduction

 
Thank you for purchasing a Polartec Heat® Blanket, the state of the art in bedding comfort.

 
The Polartec Heat® Blanket represents the introduction of smart fabric technology into heated blankets, and provides Warmth on Demand™ by safely and actively heating extraordinarily fine conductive fibers that are knit into the blanket. Low-voltage power warms the entire surface, providing an even distribution of heat. The discreet nature of the heating technology allows you to use the blanket throughout the year.

The innovative wireless remote controls are designed to provide easy temperature adjustment by the user. These feature a range of temperature settings with a back-lit display. When first turned on, a pre-heat cycle warms the blanket. If you forget to turn the blanket off, an automatic shut-off function will do this for you after 10 hours of continuous use. Queen and King blankets are shipped with two color-coded remotes to allow each user to easily distinguish between them and control separate sides. (Double blanket has one remote.) The elegant design of the remote allows it to be placed on a night stand or attached to a bed sheet, providing nighttime ease of use.

This is the blanket for the 21st century. We know you will enjoy it.

- Polartec® quality
- Warmth on Demand™
- Safe, low-voltage power (28 volts DC)
- Dual heating zones
- Ergonomic, wireless remote controls
- Four-season versatility
- Easy care, machine washable
- 10-hour automatic shut-off
- Industry-standard blanket sizing
- Plugs into any household outlet





Getting Started

Follow these instructions to get your new Polartec Heat® Blanket set up and running.

Make Your Bed (Be sure to follow these steps in order.)

1. Remove blanket, wireless remote controls, and base unit from packaging. (Double blanket has one remote.)
2. Unfold blanket and place on bed, label side at foot of bed facing UP.
3. Firmly insert the blanket cord into the blanket connector at the foot of the bed until the snaps lock into place. The connector can only be inserted one way.

Note: Always connect the blanket cord to the blanket BEFORE plugging the power cord into a 110–120 volt wall outlet.

4. Place the base unit on the floor out of the way. If placed under the bed, be sure that objects or bedding do not block the vents.
PROVIDE AT LEAST 2" CLEARANCE ON TOP AND AROUND ALL SIDES.

5. Plug the power cord into the electrical wall outlet.

CAUTION: Make sure power cords are not trapped or pinched between bed slats, mattress, springs, against wall, footboard, or bed frame.

CAUTION: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit one way into an outlet. If the plug does not fit fully in the outlet, reverse the plug and try again. If it still does not fit, call a professional electrician. Do not attempt to defeat the safety feature.

6. Cover the Polartec Heat® Blanket with a comforter, bedspread, or blanket. Covering the Polartec Heat® Blanket insures the blanket heats your bed, not your bedroom.

 
7. Turn the blanket ON by turning the dial on a wireless remote control clockwise. The base unit will beep indicating the blanket has begun operation. (Initial preheat cycle takes 20–30 minutes.)

Note: For King and Queen blankets, the yellow remote is pre-assigned to operate the right side of the blanket, and the green remote operates the left. Please see page 7 if you want one remote to control the entire blanket.


“L” (LEFT) AND “R” (RIGHT) ARE NOTED ON THE BLANKET LABEL ABOVE THE CONNECTOR.

The Polartec Heat® Blanket is designed to provide soft, blissful, all-night warmth. It is NOT intended to deliver the pain relieving heat of a heating pad. To maximize the warmth of your Polartec Heat® Blanket, be sure to cover your blanket with a bedspread, comforter, or blanket.

Enjoy a good night's sleep under your Polartec Heat® Blanket!




Polartec Heat® Blanket System

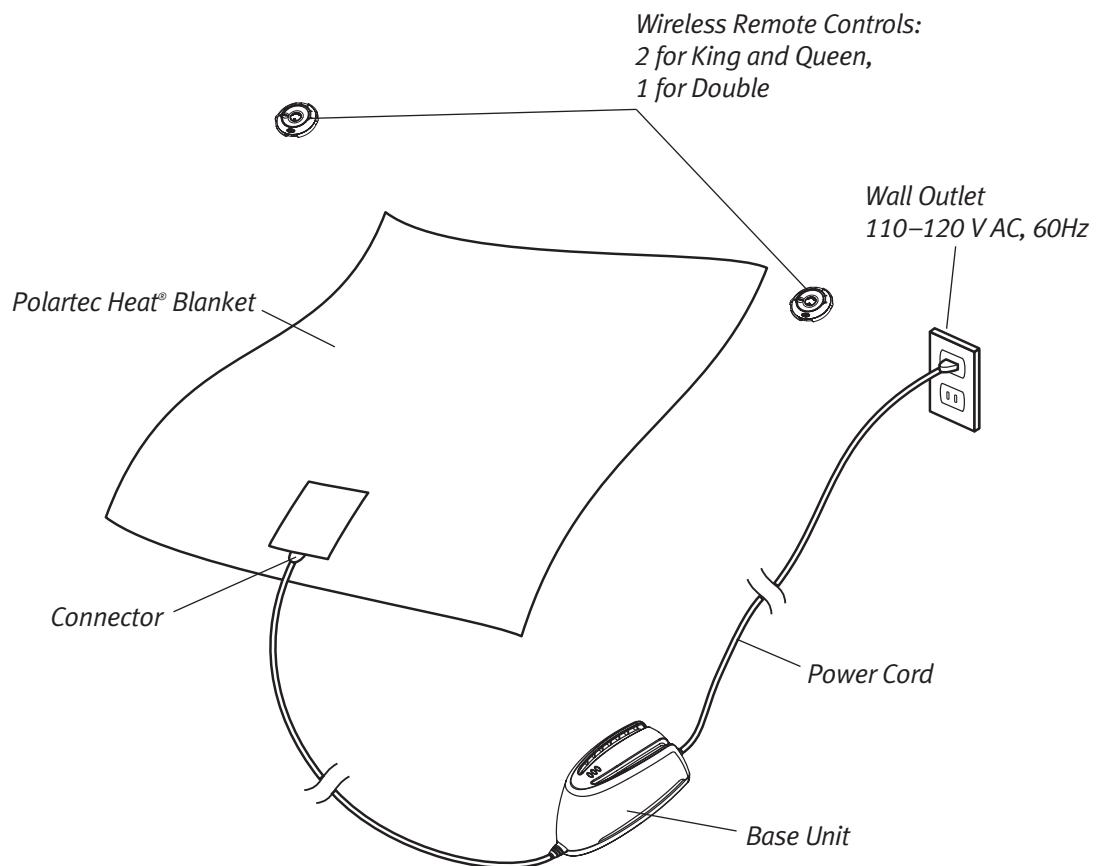


Using the Wireless Remote Control

1. Rotate the On/Off dial clockwise to turn the blanket ON. The base unit will beep. A red light will illuminate on the base unit and glow steadily. If the room is dark, the backlight on the remote will be visible and will glow for 3 seconds.
2. Adjust the dial to change the temperature to any of 6 levels.
 - Rotate all the way clockwise for highest heat level and all the way counter-clockwise to turn the power OFF.
 - Whenever an adjustment is made or the illumination button is pressed, the base unit will beep.
 - The backlight will glow for 3 seconds. The amount of light you see is proportional to the heat level selected. The backlight is tuned to be seen in a dark bedroom environment without causing uncomfortable glare.
 - Pressing the illumination button gently lights the remote for 3 seconds so you can check your heat level. If the 10-hour automatic shut-off time limit is reached, press the illumination button to restart the blanket while you are still in bed.
3. Turn the On/Off dial counter-clockwise to turn the blanket OFF.

 Note: The base unit has three lights on it. One amber and two red lights are located on the top surface. When the blanket is plugged in, the amber light will be on. When the blanket is on, the red lights will be lit and will blink when the temperature is changed.

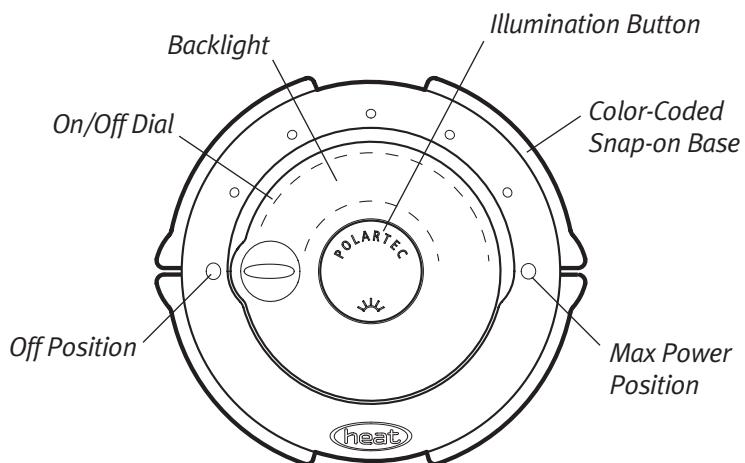




Setting the Control Side (Queen or King-size blankets only)

The wireless remote controls can operate the left side, right side, or both sides of King and Queen blankets. (If you have a Double-size blanket, one remote operates the entire blanket.) Each person has complete control over their temperature level for the ultimate in individualized comfort.

You can use one remote to operate both sides of the blanket (both sides of the blanket will have the same heat level). Or, you can use two remotes to set separate heat levels for each side of the blanket. "L" (LEFT) AND "R" (RIGHT) ARE NOTED ON THE BLANKET LABEL ABOVE THE CONNECTOR.

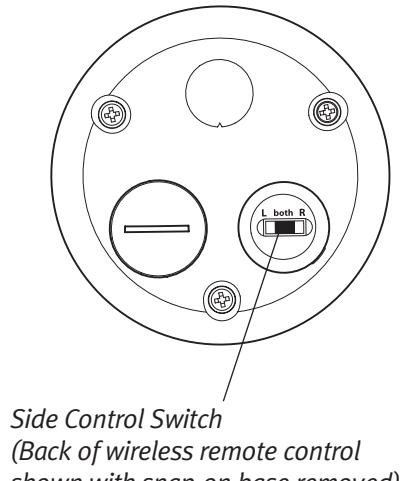


1. Prior to setting the control side, be sure that the amber light on the base unit is lit, the battery is installed in the remote, and the remote has been synchronized to the base unit.
2. Remove snap-on base (see page 8).
3. Slide the switch on the back of the remote to:
 - L** – if you want the remote to operate the left side of the blanket.
 - R** – if you want the remote to operate the right side of the blanket.
 - BOTH** – if you want one remote to operate both sides of the blanket.

Note: The blanket responds to the last command sent by a remote. If both remotes are set to BOTH, each can change the temperature of the blanket.

4. Snap the base back on the remote when done.
5. Repeat steps 1 through 3 to set the second remote to control the opposite side of the bed.

Synchronizing the Remotes to the Base Unit

If you replace a remote, both remotes will need to be synchronized to the base unit. This is done so that the remotes used with the blanket are the only ones that can control it.

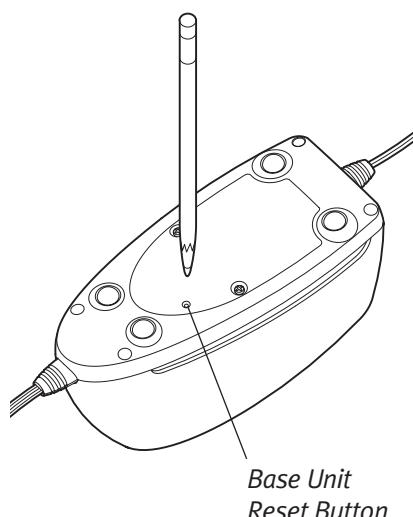


1. Make sure the blanket is plugged in, the base unit's amber light is on, both remotes are nearby, and there is a battery in each one.
2. Using a pencil or paper clip, press in the RESET button on the bottom of the base unit. Both remote addresses are immediately "forgotten."

Note: Both red lights on the base unit will flash.


3. Press the center illumination button on one remote, (the button with the Polartec® logo) and one of the red lights on the base unit will illuminate steadily indicating the code has been received.
4. Press the center illumination button of the second remote to store its code. The second light will illuminate steadily.

 Note: It is necessary to synchronize both remotes each time. This insures that both operate properly.




Locating Your Remote for Easy Access

The remote comes with a snap-on base that allows you to place it on locations other than the night stand. By attaching the snap-on base to the remote with a bed sheet in the middle, the remote is close at hand during the night. Another location is on the side of the mattress attached to the fitted sheet.

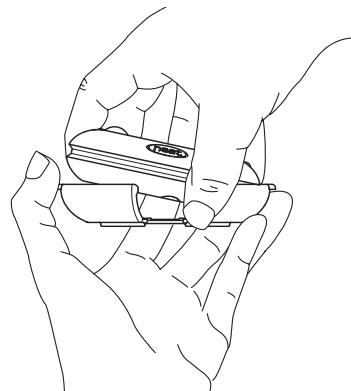

Removing snap-on base from remote

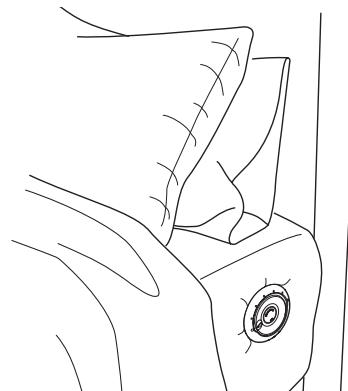


Possible location of remote on fitted sheet

Removing the Snap-on Base from a Remote

The remote comes with a base attached. To remove:

1. Grab the base so that one set of the ears on the base are under your thumb.
2. Reach through the areas that have been cut out of the base to grab the remote.
3. Snap the remote out of its base.

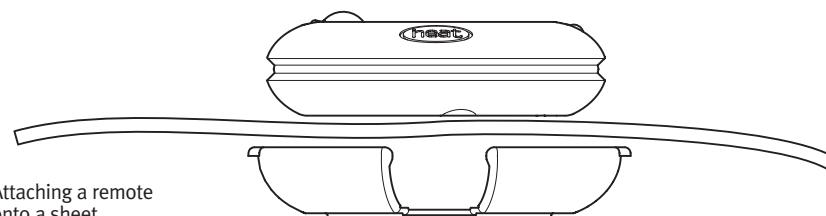

Attaching a remote onto a sheet

 
Attaching the Remote to Bedding

 
1. Choose the location of the remote that best fits your needs.
2. Remove the snap-on base by pushing the snap away from the remote using the access holes in the base for leverage.
3. Push the remote and base together with the fabric in-between. The remote's base should snap together lightly with the remote.

YOU MUST REMOVE THE WIRELESS REMOTE CONTROLS BEFORE WASHING THE BEDDING!

Removing the Remote from Bedding

Grasp the fabric on each side of the remote. Pull gently on the fabric making sure that the remote does not drop onto a hard surface. You may remove and re-attach the snap-on base at any time.








Replacing the Battery

If the base unit is not beeping when it receives signals from the wireless remote control, confirm that the base unit's amber light is on. If the amber light is on, the battery in the remote needs to be replaced.

Inserting and Removing the Battery

  1. Remove the snap-on base from the remote.
2. Using a small coin, insert it into the slot in the battery door and rotate counter-clockwise to open the door.
3. Remove the old battery and dispose of it properly. (Many hardware stores recycle batteries.)
4. Place the new battery in the holder, with the + sign facing up toward you.
Battery type is CR 2032-3V.
5. Re-insert the battery door by turning it clockwise with the coin again.
6. It may be necessary to reset the remote after replacing the battery. If the remote does not control the blanket after changing the battery, press the RESET button on the bottom of the remote with a paper clip.

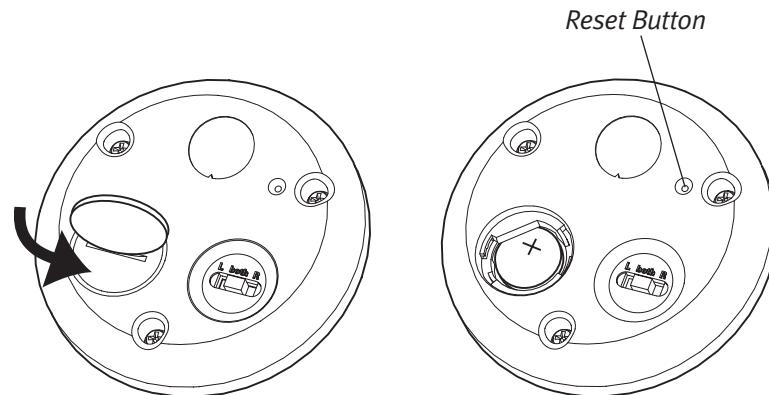



Care and Cleaning

CAUTION: Always disconnect the power cord and the blanket cord before washing your blanket. Do not wash the wireless remote control and snap-on base. Carefully follow all washing instructions.

- Do not dry-clean your blanket. Dry cleaning solvents may damage the blanket.
- Do not use bleach, fabric softeners, or cleaning fluids.
- Do not use a wringer.
- Do not iron the blanket.
- Do not use mothballs or sprays of any kind.
- Do not turn the blanket ON until it is completely dry.

Machine Washing

1. Machine wash warm, delicate cycle.
2. Do not use bleach or fabric softeners.

 
Machine Drying

 
CAUTION: Do not use commercial dryers or the dryers at your local coin-operated laundry. They get too hot and will damage the blanket.

1. Tumble dry air only, no heat, for 90 minutes.
2. Stretch to original size and lay flat over a bed.

Cleaning the Base Unit and Wireless Remote Controls

1. Unplug the base unit's power cord from the electrical outlet.
2. Wipe the base unit and remotes with a damp cloth. Plug the base unit power cord back in again.





Troubleshooting

When using my wireless remote control, the base unit does not beep.

1. Check that the base unit is plugged in and connected to the blanket.
2. Check that the battery is properly installed in the remote.
3. Re-synchronize the remotes to the base unit.

My wireless remote control is not transmitting commands properly.

Move the remote 6 inches and re-transmit.

My blanket isn't heating quickly.

The blanket takes 20–30 minutes to reach maximum temperature. This is because of its energy-efficient design.

My blanket does not seem to be heating up.

The Polartec Heat® Blanket provides soft, blissful heat for all-night warmth. It is NOT intended to deliver the pain relieving heat of a heating pad. To maximize the warmth of your Polartec Heat® Blanket, be sure to cover your blanket with a bedspread, comforter, or blanket. To check that the blanket is operating correctly, please follow these steps:

1. Fold blanket with at least 4 folds.
2. Connect the blanket cord to the blanket, and plug the power cord into a working wall outlet.
3. Turn the wireless remote control ON, and rotate the dial clockwise all the way to the right. The remote should illuminate, and the base unit should beep. Wait 10 minutes.
4. Place your hand inside the folds of the blanket. You should feel warmth.
5. Turn the remote OFF.

CAUTION: This folded position is a non-standard use of the blanket. Do not continue this test for more than 15 minutes.

My blanket shuts off after a while, why?

The blanket is provided with a 10-hour automatic shut-off feature for your safety. If the blanket has turned off, simply press the center illumination button on your remote, and the blanket will re-activate.

If this blanket is DC, can I use it in Europe?

The blanket is only rated to be used in the US and Canada at the present time using 110–120 V AC, 60 Hz power. Using other power sources can damage the blanket and may cause serious safety risk.

My blanket has a ribbed appearance. Is this normal?

Yes, the blanket works by heating extraordinarily fine conductive fibers that are knit into the blanket. These are close together and may give the blanket a subtle ribbed look.

*If you have additional question or concerns, please contact
Lands' End Customer Service at 800-746-3467.*

