



Installation

- (1) Connect the audio output signal from DVD Player or TV to the input of AV amplifier, then connect the SUB output signal from the AV amplifier to the input of the WS-12-T, or you can connect the audio output signal from DVD Player or TV to the input of WS-12-T directly.
- (2) Connect the output signal from WS-12-R to the input of subwoofer amplifier.
- (3) Please add the power source on the WS-12-T & WS-12-R and press the scan button for 3 seconds, if both units match properly then the blue LED will be lighted all the way, if not match properly, then please press the scan button on the WS-12-T & WS-12-R one more time
- (4) After matching successful, you can enjoy the music by this wireless system.

FCC Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
 - -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.