



PHILIPS



5VDC IN

IR OUTPUT
LEVEL

1 2 3 4

NORMAL
LOW

NETWORK

EXTENDER
ID

CONFIG
1 2 3

STAND
ALONE

NETWORK

IR 1

IR 2

IR 3

IR 4

Config	Stand-alone	Network (using router)
1	Pronto channel 1	Use
2	Pronto channel 2	Configure via cross cable
3	Pronto channel 3	Configure via router
IP - adress : 192.168.8.80		



