

Quick Start Guide of X1



Thank you so much to choose X1, the Mini PC!
Before using it, please read the quick start guide carefully.

Notice:

The supplied items are designed only for your device and may not be compatible with other devices.
Unapproved accessories may cause your device to malfunction.

1. Package Content


Mini PC*1pc

Charger*1pc

QSG*1pc

HDMI cable*1pc

2. Description of the Mini PC

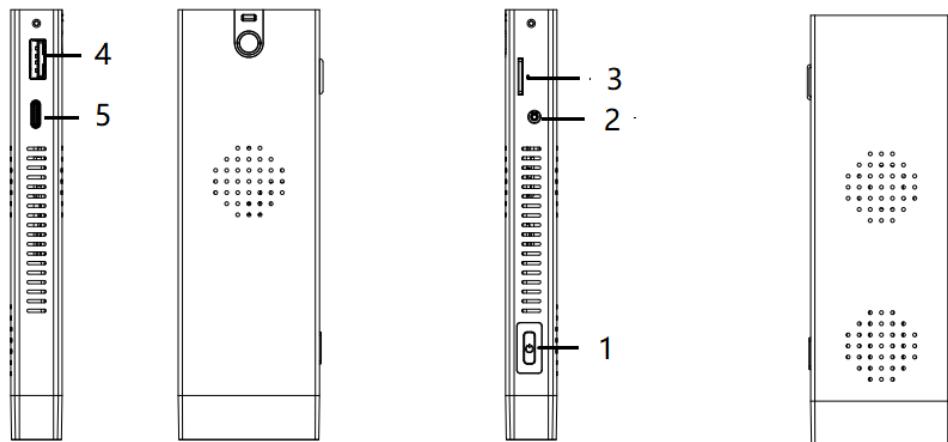

- | | | |
|---------------------|----------------|-----------------|
| 1. Power on/off key | 2. DC-IN | 3. TF card slot |
| 4. USB A port | 5. Type-C port | |

3. Getting Started

3.1 Charging

Connect the supplied charger to the power connector of the device and to a wall outlet. You can use the device whilst on charge.

3.2 Turning the device on

Press the ON/OFF button for 2-3 seconds

3.3 Initial setup

The first time you start up your device, the Windows Startup Screen will be the first screen displayed. Follow the on-screen instructions on each screen in order to properly install the operating system. We strongly recommend that you create a Microsoft account, so you can enjoy more features.

4. Microsoft Account

A Microsoft account is an email address and password that you use to sign in to Windows. It's free and easy to set up, and you can do so with any email address you choose, or get a new email address (for example, you can use an Outlook.com, G-mail, or Yahoo! address for your Microsoft account.). With a Microsoft account, you can:

- get apps from the Windows Store
- back up all your important data and files using free cloud storage
- link your social networking accounts to the People app, and you'll see your friends' contact info and status updates in one place.

Signing in with a Microsoft account

Click Settings > Accounts > Your account > Connect to a Microsoft account. You might be asked to verify your current password.

TIP: setting up other accounts

If more than one person uses your notebook, each person should have their own account. They can sign in and personalize the tablet with their own background colors, favorite apps, a separate email inbox, and more. If you have kids, you can also set up a child's account with extra security monitoring measures—with or without email—so that your kids see only what you want them to see on the PC.

5. Troubleshooting

If your device doesn't turn on:

Charge your device then switch on normally.

If you want to extend the life of your battery:

Decrease the screen brightness and turn off the wireless connections if not in use.

If your device is functioning too slowly:

Close all apps which are not currently being used.

If your WiFi reception is poor:

Make sure you are not far from the WiFi hotspot.

Reset and redefine your connection parameters.
Contact your WiFi connection provider.
Check and install Windows updates in Settings > System and Security > Windows Update.

If you want to restore your product (erase all your settings? Forgotten password?)

From the notification centre, select Settings > Update and recovery > Recovery

From there you can Refresh your PC without affecting your files, or Remove everything and re-install Windows.

Main Specification

CPU: Intel N4120, Q-core, up to 2.6GHz

GPU: Intel UHD Graphics

OS: Windows 10 or 11 pro

DDR: 4GB

Memory: 128GB

WiFi: 802.11 a/b/g/n/ac

Bluetooth: BT5.0

Charger: 12V~3A

FCC Caution:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device must operate with a minimum distance of 20 cm between the radiator and user body.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.