

# **hiebook<sup>TM</sup> Reference Guide**

**Model : Hi210**

**Korea ebook Inc.**

Copyright ? 2001 Korea ebook Inc. All rights reserved.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

FCC ID : PTAH21001 MADE IN SEOUL, KOREA

## **FCC RF INTERFERENCE STATEMENT**

NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technical for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment,

# ***License Agreement***

READ THIS LICENSE AGREEMENT BEFORE USING hiebook™. YOUR USE OF hiebook™ DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED hiebook™ AND YOUR PURCHASE PRICE WILL BE REFUNDED. hiebook™ means the hiebook™ electronic book content reader, the device itself, and the software product and documentation found in this package.

## **Limited Use License**

All rights in hiebook™ remain the property of Korea ebook Inc.. Through your purchase, Korea ebook Inc. grants you a personal and nonexclusive license to use this ELECTRONIC PRODUCT. You may not make any copies of hiebook™'s software or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, de-compile, translate, create derivative works of, or in any way reverse engineer hiebook™.

You may not export or re-export, directly or indirectly, hiebook™ without compliance with appropriate governmental regulations. hiebook™ contains Korea ebook Inc.'s confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from Korea ebook Inc. if you fail to comply with any revision of this license.

# ***Table of Contents***

## **1. Introducing hiebook™**

- 1.1 Definition of hiebook™ and features
- 1.2 Product components and H/W specification
- 1.3 Introducing of standard usage
- 1.4 How to charge and battery
- 1.5 System requirements

## **2. Standard usage**

- 2.1 Introducing Applications
- 2.2 How to input data
  - How to use screen keyboard
  - How to use handwriting recognition

## **3. How to use applications**

- 3.1 hiebook Reader
- 3.2 Music
- 3.3 Recorder
- 3.4 Schedule
- 3.5 Address
- 3.6 Text Memo
- 3.7 Drawing Memo
- 3.8 Image Viewer
- 3.9 The others (Calculator, Othello, Puzzle, Omok, Sokoban)

## **4. hiSync/Desktop Manager)**

- 4.1 Synchronizing Data
- 4.2 File Management
- 4.3 Download File

## **5. Product Care**

- 5.1 Caution
- 5.2 Resetting hiebook™

## 1. Introducing hiebook™

### 1.1 Definition of hiebook™ and features

#### ■ Definition

hiebook™ is the exclusive device for reading electronic books downloaded from the internet and you can enjoy not only MP3 music, game but also PDA function.

#### ■ Features

- Suitable for reading eBooks using wider and clearer LCD than previous PDAs'.\* Reading direction is changeable by the user.
- Excellent readability like a paperback layout.
- Supports a variety of contents such as eBooks, comics, audio books, text files, html files, etc.
- Improved convenience in turning pages in various ways, such as buttons and touch-screen
- Easy to carry and you can read more than 12 hours with one-time charging.
- Repeat selected songs.
- Save and display pictures of your family, friends and others image files using the Image Viewer.
- Download about 3 music files in a minute using USB connection port.
- Designed to be easily handled and the touch-screen buttons make it even easier.
- Memory can be easily extended using SMC(Smart Media Card-up to 128MB)

### 1.2 Product components and H/W Specification

#### ■ Product components

- hiebook™ device
- AC adapter
- USB cable
- Protective case
- Earphone
- Stylus pen
- Warranty Card


#### ■ H/W Specification

◆ Front View



- Microphone
  - Speaks into this when recording voice memos.
- Backward button
  - Go back to the previous page or selected previous files and applications.
- Forward button
  - Go to forward a next file or next applications.
- Charging lamp (LED)
  - Displays charging status. The lamp keep a light in charging and be put out after completed charging.


◆ Top View

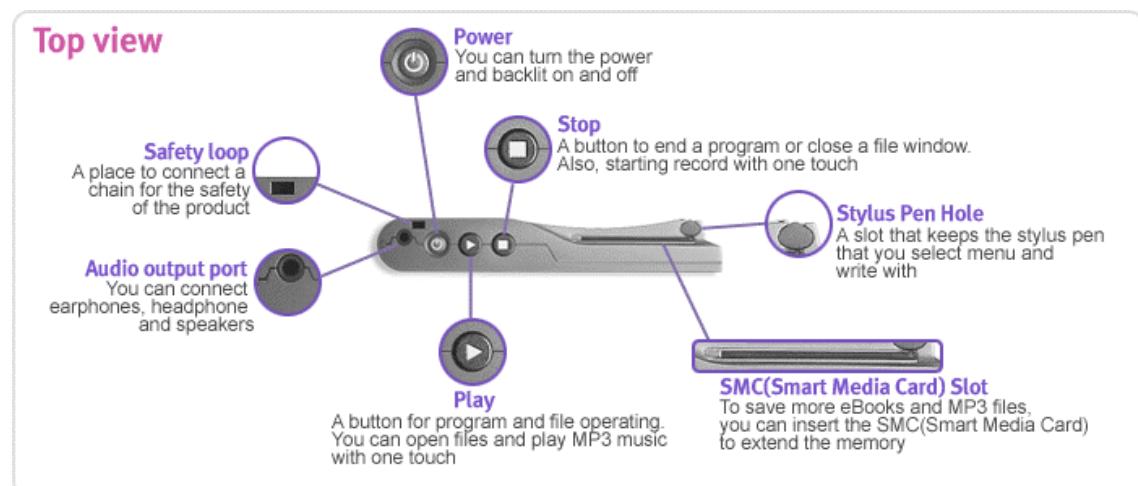

- Safety loop
  - A place to connect a strap for the safety of the product


- Audio output port
  - Plug your headphones in here when listening to audio books, voice data or music.
- Power and Backlit button
  - 1) Power On/Off : Press once to turn the hiebook™ on. / Press again to turn the hiebook™ off.
  - 2) Backlit control : You can also control the backlit with this button. When the hiebook™ is on, press and hold for about more than one second to turn the backlight on. Press and hold again to turn the backlight off.
- Play button
  - 1) Plays applications or open file.
  - 2) [hot key - music] : Opens file list window or plays MP3 player through pressing and holding for about more than two seconds.
- Stop button
  - 1) Closes application or file list window.
  - 2) [hot key & voice recorder] : Records voice memo through pressing and holding for about more than two seconds.
- SMC(Smart Media Card) slot
  - You can increase the memory in your hiebook™ at any time with a Smart Media Card(SMC). You can store more books and MP3 files on the SMC.
  - These cards are available in different memory sizes up to 128 MB.(16MB, 32MB, 64MB, 128MB)
- Stylus pen hole
  - This is the touching and writing tool. Slide it out of the compartment and use it to touch the screen or Control Pad when necessary, and write with it in the handwriting area.

◆ Bottom View

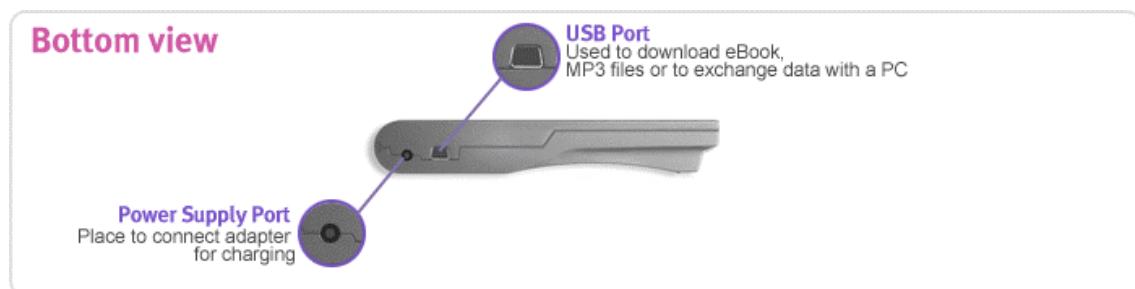

- Power Supply port
  - Use this to charge hiebook™ with power adapter.
- USB port
  - Use this to make the connection with your cable. You can download ebooks,MP3 files and synchronize with your PC.

◆ Rear view

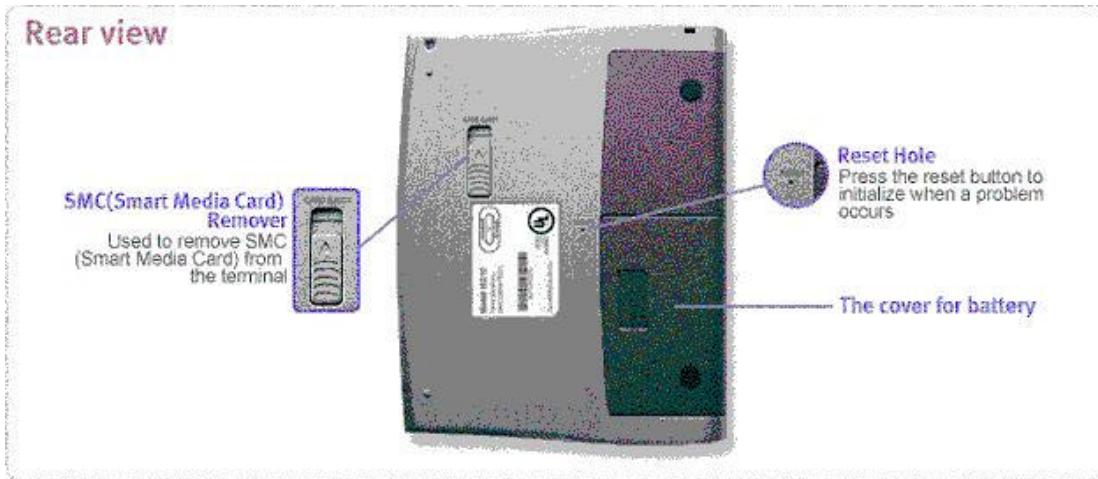

- SMC(Smart Media Card) Remover
  - This is button that remove SMC from hiebook™.
- Reset hole
  - This is the button that resets and restarts your device.
- The cover for battery
  - This is battery cover that protects Li-ion battery.

■ Other components

- Power Adapter
  - You can charge hiebook™ using this adapter.
  - hiebook™ requires only adapter which is supplied by Korea ebook Inc..
- USB cable
  - For downloading data and synchronizing contents, you should connect hiebook™ with your PC through USB cable.


### 1.3 Introducing of standard usage

■ Calibration


- ? Push the reset button
- ? Tap the middle point of calibration mark precisely in each corner of the screen. When done, automatically return to the home screen.

Periodically if you find that items on the screen are not activated as expected when you tap them with the stylus, please adjust the calibration.

## ■ System setting

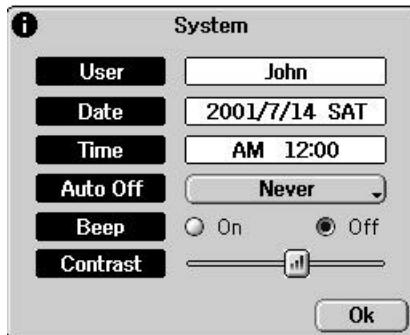

- Starting Program : tap System Icon.
- Close
  - Select “Close”
- Setting user preferences
  - Input user information
- Date
  - set month, date and year

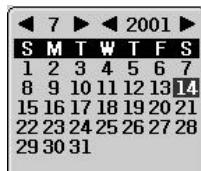

- Time



- Auto power off
  - hiebook™ has an automatic power off function that turns off the power after a period of inactivity.
  - During playing music or recording voice memo, it doesn't work.



- Beep
- Contrast

## 1.4 How to charge and battery

- How to charge
  - Plug in power adapter to a wall outlet.
  - The lamp keeps red in charging and become turn off when full-charged.
  
- hiebook™ requires only adapter which is supplied by Korea ebook Inc..
- Battery
  - hiebook™ has a built-in rechargeable battery.
  - Battery life Icon 
  - Battery life Icon is located on the right side of top screen and display 6 levels battery life status. As the battery becomes low, message appears on screen with alarms.
  - Disposal of battery
    - Discard used batteries separately from wastes.

## 1.5 System requirements

- System requirements
  - OS : Microsoft Windows 98, Windows 2000, Windows ME
  - RAM : Depend on OS requirement
  - HDD : 10MB free disk space
  - Available USB port
  - CD-ROM drive
  - Internet connectivity

## 2. Standard usage

### 2.1 Introducing applications



## ■ Introducing applications

- **hiebook Reader**
  - The application, which enables to read eBook, also provides audio book function, comics viewer, and function to display various kinds of document.
  - It will give you a new reading experience and a chance to broaden your knowledge with a variety of functions such as bookmarks, keeping previous page, memo, search, page rotation, hyperlink, which are not allowed in paperbacks.
- **Music**
  - To free you from the inconvenience of carrying around a book and a MP3 player with separate, hiebook supports MP3 player. You can enjoy reading eBooks while listening to your favorite music.
- **Recorder**
  - When you have a flashing idea or on a discussion during conference, you can use hiebook for recording. This function is also great for checking your voice and pronunciation for study!
- **Schedule**
  - The wider screen helps you organize your schedule more efficiently than the previous PDAs'. You can keep track of your month/day/time schedule, anniversary and lunar calendar, etc..
- **Address**
  - You can put various information and memo and search is available. Also, if you wish to share data

with your PC, just sync your Newress data with MS Outlook of your PC via hisync program .

- **Text Memo** 
  - You can enter data by using pop-up keyboard or take notes in your own handwriting since hiebook use handwriting recognition technology. It is great for taking notes and quickly entering phone numbers and appointments. Also, you can edit TXT file delivered from PC to hiebook.

- **Drawing Memo** 
  - You can write down memos just as you do on paper using the stylus pen. Also, useful when drawing an outline map easily and quickly.

- **Image viewer** 
  - You can download various types of image files from PC. You can display your personal photos, images or maps downloaded from the internet everywhere you go.

- **Calculator** 
  - General calculator you may use everyday.

- **Game**

Othello  Puzzle  Omok  Sokoban 

Games that you can play to pass the time.


## ■ Using the menus



- **Application Menu** 
  - Selects application menu to display list of application icons
  - Tap the icon of the application that you want to open.




- File Menu 

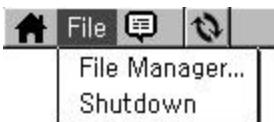

- Selects File menu in main menu and just tap "Close" to turn off.
- File Manager



- 1) Indicate internal and external memory status.
- 2) Indicate memory status of various files.
- 3) If you select format, you can format internal and external memory.

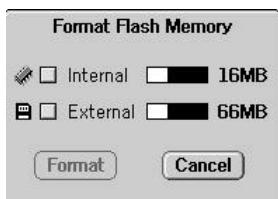

- Help Menu 

- If you select Help Menu in main menu, information window appears.
- Shows the information of application during processing the application.

- Page Rotation Icon 

- You can change the display orientation for the screen just by tapping screen.

- Battery Icon 
  - You can monitor the battery life status.
- Time **12:00 am**
  - Displays the current time

■ How to use application

- 1) At home screen, tap the icon of the application that you want to open at home.
- 2) Select the icon of the application in main screen by using back / previous button and press play button to open the application.
- 3) Selects the application menu  and tap the icon of the application that you want to open.
- 4) [hot key – music]: When the hiebook™ is on, press and hold Play Button for more than two seconds to play music.
- 5) [hot key – voice recorder] : When the hiebook™ is on, press and hold Stop Button for more than two seconds to record voice memo.

## 2.2 How to input data

■ How to use screen keyboard

You can input data by using various kinds of keyboard.

- English keyboard

- basic mode




- shift mode



- Extended character keyboard



- Internet keyboard

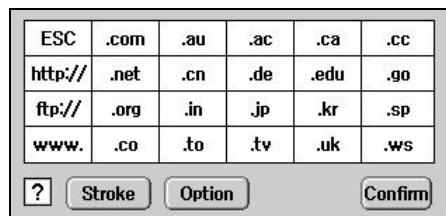


- Support internet keyboard to input e-mail address or URL rapidly

## ■ How to use handwriting recognition


Write text, numbers and extended characters with stylus pen, they are recognized instantly.

- Handwriting recognition pop up window

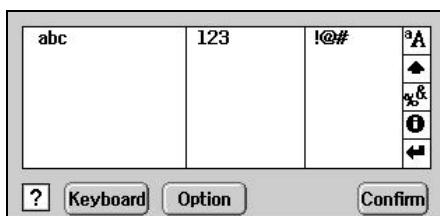


- abc** : Alphabet input area
- 123** : Numeric input area
- !@#** : Extended character input area
- Ⓐ** : Caps lock mode
- ▲** : Shift mode
- %^&** : Extended character keyboard open icon
- 🌐** : Internet keyboard open icon
- ➡** : Enter

- Handwriting recognition option

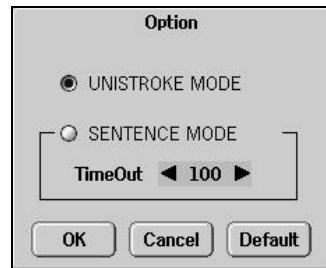


- UNISTROKE MODE : You can input alphabet characters only in the **abc** area.

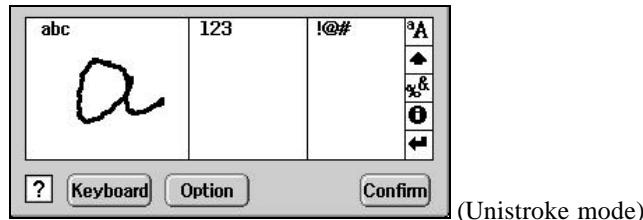


1) Alphabet unistroke image



2) Numeric and Gesture unistroke image

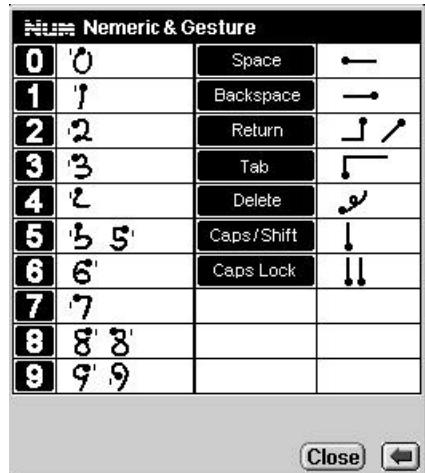

- SENTENCE MODE : You can input alphabet characters in the whole recognition area

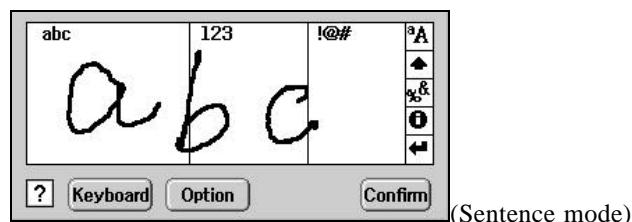

(Sentence mode)

- TimeOut : Recognition tempo setting

### 3. How to use application

#### 3.1 hiebook Reader

- The program, which enables to read eBook, also provides audio book function, comics viewer, and function to display various kinds of document.
- It will give you a new reading experience and a chance to broaden your knowledge with a variety of functions such as bookmarks, keeping previous page, memo, search, page rotation, hyperlink, which are not allowed in paperbacks.

##### ■ Starting program

- 1) Tap hiebook Reader icon  to open.
- 2) Select hiebook Reader icon using Backward / Forward Button and press Play Button to open


hiebook Reader .

3) Select the icon of the program menu  and then tap hiebook Reader icon  to open.

■ Closing program

- 1) Select File menu and tap “Close”.
- 2) Press Stop button in the right.

■ File Open & Delete

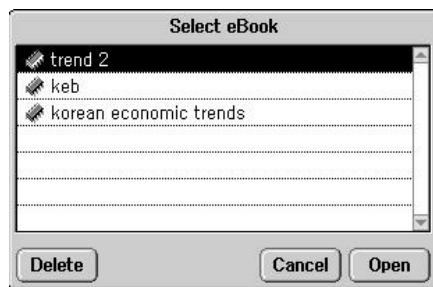

• File open

- 1) Case 1
  - ? Selects File Menu at menu bar
  - ? Tap Open Menu
  - ? File list window appears
  - ? Selects ebook that you want to read.
  - ? Tap Open Button

2) Case 2

- ? Press Play Button(hardware) to open.
- ? Select ebook that you want to read using Backward / Forward Button
- Press Play Button to open ebook

• File delete

- ? Select File Menu at menu bar
- ? Tap Open Menu
- ? File list window appears
- ? Select ebook that you want to delete
- ? Tap Delete Button.
- ? Tap Confirm Button

## ■ Using the menus




- File
  - Open : displays ebook list window.
  - Close : closes hiebook Reader.




- Help
- Displays hiebook Reader information.

- Select
  - Selects text for using find or bookmark.

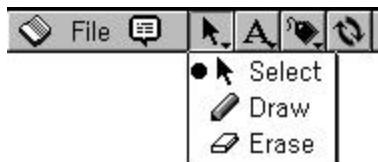

- Draw
  - Draws memo over the text.
- Delete
  - Deletes drawn memo.
- Font Size

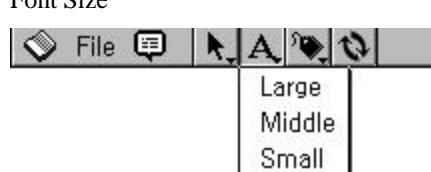

Changes font size such as large, medium and small.

- Bookmark & Memo




- Bookmark List
  - 1) If you select this menu, bookmark list window appears.
  - 2) You can delete bookmark or move to selected bookmark page at bookmark list window.
- Memo list
  - 1) If you select this menu, memo list window appear.
  - 2) You can delete memo or move to selected memo page at memo list window.

- Find 



- If you select this menu, find window appears at the bottom of the screen.

- Rotation 

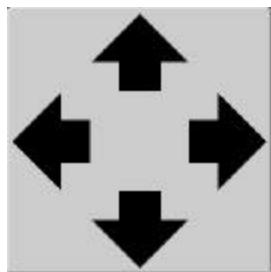

- You can change the display orientation in 4 directions.

## ■ Page backward / forward

- 1) You can turn the page by using Backward / Forward Button.
- 2) You can turn the page by touching the edge of the screen in case of select mode. 
- 3) You can move to the page you want to view using navigation bar at the bottom of the screen.




## ■ Hyperlink

- If you select hyperlink, you can go to linked page directly.



## ■ Annotation

- If you select the sentence with image , The annotation window appears at the bottom screen.

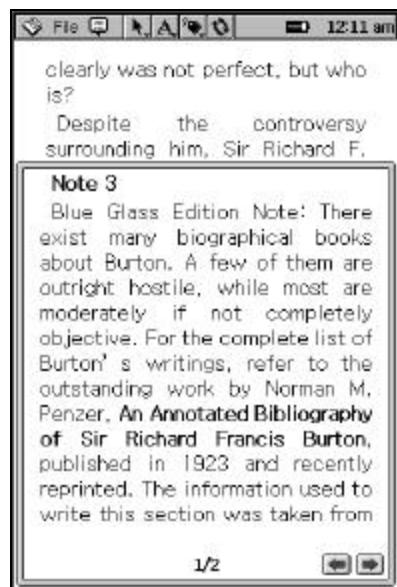


## ■ Bookmark


- New bookmark

- ? Turn to the select mode , select the area you want to New bookmark
- ? Appears New Bookmark Menu when you take off stylus pen
- ? If you tap New Bookmark Menu, appears New Bookmark windows.
- ? You can express 2 kinds of style (underline, highlight)
- ? You can take a memo selecting the memo box.

? Tap Confirm Button.

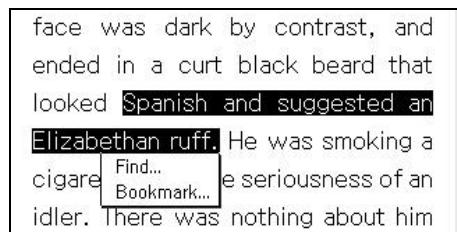

face was dark by contrast, and ended in a curt black beard that looked Spanish and suggested an Elizabethan ruff. He was smoking a cigarette. Find... Bookmark... e seriousness of an idler. There was nothing about him

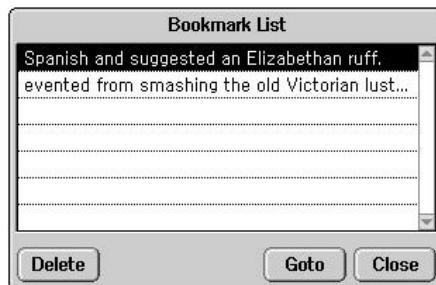

- Delete bookmark

- 1) Case 1

- ? Select the bookmark list from bookmark at the menu
- ? Delete the item you want to delete.
- ? Tap Delete Button.

- 2) Case 2

- ? Select the sentence with the bookmark
- ? Tap Delete Button at the list of bookmark window.

- Go to bookmark page

- ? Select the bookmark list from the menu.
- ? Tap the item you want to go to.

- Find


- Find

- 1) Case 1

- ? Turn to the select mode  , select the item you want to find
- ? Appears Find Menu when you take off stylus pen.
- ? If you select Find Menu, appear find area at the bottom screen
- ? Find by using Previous / Next Arrow Button

- 2) Case 2

- ? Tap Find Icon 
- ? The find menu appear at the bottom of the screen.
- ? Tap the text input area and then input window appears.
- ? Input the text you want to find.
- ? You can search the text you want to find using Previous / Next Arrow Button.

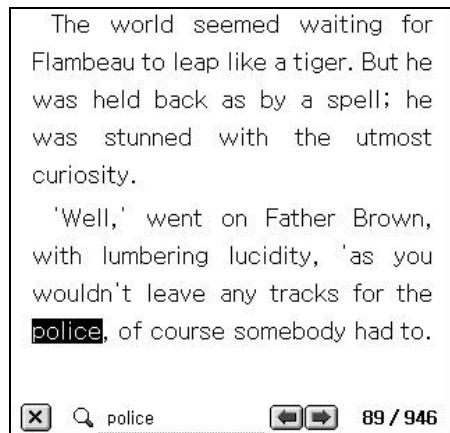

- Find cancel
  - 1) Select the X icon 
  - 2) Tap out of the find area.

#### ■ Text memo

You can Input text memo in the Bookmark window or in the New Bookmark window.

#### ■ Drawing memo

- New drawing memo
  - ? Select Draw Mode icon 
  - ? Write in memo to the screen with stylus pen.
- Delete memo
  - 1) Case 1
    - ? Select Delete Mode Icon 
    - ? Delete the drawn memo using stylus pen.

## 2) Case 2

? Selects the memo list  from the menu.

? Selects the item you want to delete and then tap Delete Button.

- Go to memo page

? Select the memo list from the menu.

? Select the item you want to go and then tap Go to Button.



? When you go to the item you want to go, the font size and the screen direction will be back to the condition before.

? The memo page in the memo list indicates the first line of that page.


### ■ Previous page

- If you want to go previous page, tap Previous page button. 

### ■ Rotation

? Select the rotation button  from the menu.


? Tap Direction Button you want to change.

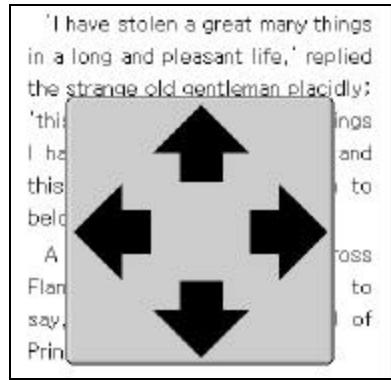

### 3.2 Music

To free you from the inconvenience of carrying around a book and a MP3 player separately, hiebook supports MP3 player. You can enjoy reading eBooks while listening to your favorite music.

- Music player window

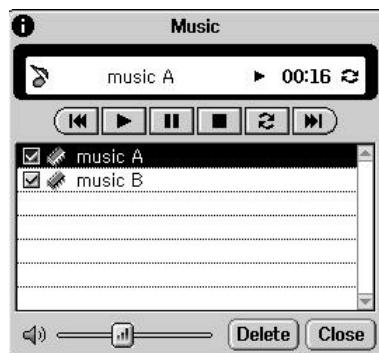

- Play screen
  - Displays currently loaded title, play or stop, time, repeat or not.
- Button and Icon
  - Previous button : selects previous file.
  - Next button : selects next file.
  - Play button
  - Pause button
  - Stop button
  - Repeat button
  - File choice icon : selects the file you want to select
- Volume control bar

- You can adjust the volume with the stylus pen.

- Play music

- 1) Case 1

- ? Select music icon 

- ? Select the title you want

- ? Tap play button

- 2) Case 2

- ? Press Music Icon with Backward / Forward Button

- ? Opens the music list window using Play Button

- ? Select the title you want with Backward / Forward Button

- ? Press Play Button

- 3) Case 3 : [hot key - music]

- While the device is on, press and hold the play button(hardware) for about more than one second to play the music player.

- Closing music

- 1) Case 1

- ? Tap Stop Button of the music player

- ? Tap Close Button

- 2) Case 2

- ? Press the stop button for closing music.


- ? If you press the stop button once more, the music player will be closed.

- Delete music file

- ? Selects music file.

- ? Tap Delete Button

- ? Confirm

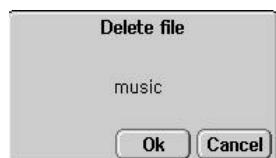


- Repeat
  - Repeat setting & cancel
    - Repeat setting : tap Repeat Button 
    - Cancel : if you tap Repeat Button, the repetition function will be canceled.
  - Repeat selected file
    - Selects Choice icon  and then tap Repeat Button 
- Move file in play
  - You can go to other file using Move Button   or Backward / Forward Button in play.
- Volume control
  - You can adjust the volume using Volume Bar located at the bottom of the screen.
- Play as Background
  - While playing music, If you tap the close button, the music player will disappear and play music as background.
  - You can play the music in the background excepting voice recorder.



### 3.3 Recorder

When you have a flashing idea or on a discussion during conference, you can use hiebook for recording. This function is also great for checking your voice and pronunciation for study!

■ Voice recorder window

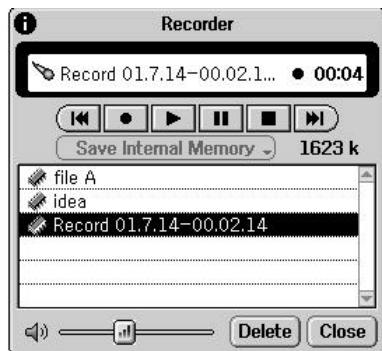

- Voice recorder screen
  - Recording : displays the current date, status, recording time.
  - Playing back : displays file name and playing time.
- Button and Icon
  - Previous button : selects previous file.
  - Next button : selects next file.
  - Record button
  - Play button
  - Pause button
  - Stop button
- Memory select for saving
  - You can store on internal memory or external memory



- Volume control bar
- You can adjust the volume by stylus pen.

■ recording

1) Case 1

- ? Tap Voice Recorder Icon with stylus pen or Backward / Forward Button
- ? Tap Record Button

## 2) Case 2

One click recording : While the device is on, press and hold the play button for about more than one second to play the voice recorder.

- Closing

- Tap or Press Stop Button

- Playing back

### 1) Case 1

- ? Tap Voice Recorder Icon 
- ? Selects the file you want
- ? Tap Play Button 

### 2) Case 2

- ? Selects Voice Recorder Icon using Backward / Forward Button
- ? Press Play Button.
- ? Selects the file you want using Backward / Forward Button
- ? Press Play Button.

- Move file in play

You can go to other file using Move Button  or Backward / Forward Button in play.

- Closing

1) Case 1 : Tap Stop Button  and then tap Close Button.

### 2) Case 2

- ? Press Stop Button for closing
- ? If you press Stop Button once more, the voice recorder will be closed.

- Delete recording file

- ? Selects music file
  - ? Tap Delete Button
  - ? Tap Confirm Button



- Volume control

You can adjust the volume with stylus pen.

### 3.4 Schedule

The wider screen helps you organize your schedule more efficiently than the previous PDAs'. You can keep track of your month/day/time schedule, anniversary and lunar calendar, etc..



- Starting

- 1) Tap Schedule Icon
- 2) Select Schedule Icon using Backward / Forward Button and then press the play button.


- Closing

- 1) Selects the file menu and then tap the close menu
- 2) Press the stop button.

## ■ Input schedule

### 1) Case 1 : Day Schedule window

- ? Selects New Button or selects area you want to input, and then input window appears
- ? Selects text area
- ? You can add your new schedule.

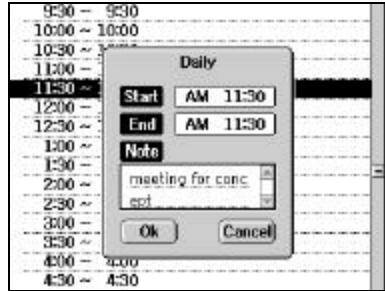


### 2) Case 2 : Month Schedule window

- ? Selects Schedule at the bottom of the screen
- ? Selects New Button
- ? Input window appears
- ? Selects text area
- ? You can add your new schedule.

## ■ Time setting

You can set time by 30 minutes in the input window.

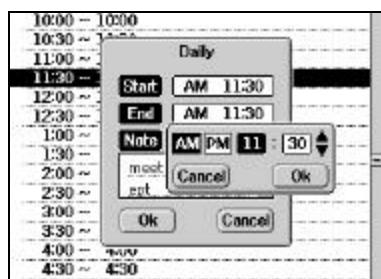

## ■ Delete

### 1) Case 1 : Day Schedule window

- ? Select the schedule you want to delete
- ? Tap Delete Button
- ? Tap Confirm Button

2) Case 2 : Month Schedule window

- ? Selects Schedule item at the bottom screen
- ? Selects Schedule you want to delete
- ? Tap Delete Button
- ? Tap Confirm Button



■ Modify

1) Case 1 : Day Schedule window

- ? Selects the schedule you want to modify
- ? Tap Modify Button
- ? Input window appears
- ? Tap the text box
- ? You can modify your schedule

2) Case 2 : Month Schedule window

- ? Selects Schedule item at the bottom screen
- ? Selects the schedule you want to modify
- ? Tap Modify Button
- ? Input window appears
- ? Tap the text box
- ? You can modify your schedule

■ ToDo : Input, Delete, Modify



- Input
  - ? Selects ToDo at Month Schedule window

- Tap New Button
- To do window appears
- Select the text box and then you can input to do

- Delete
  - Selects To Do at the bottom screen
  - Selects the item you want to delete
  - Tap Delete Button
  - Tap Confirm Button

- Modify
  - Selects To Do at Month Schedule window.
  - Selects the item you want to modify
  - Tap Modify Button
  - To do window appears
  - Tap the text box
  - You can modify the item you want to modify

#### ■ Anniversary : Input, Delete, Modify



- Input
  - Selects Anniversary Folder at Month Schedule window
  - Tap New Button
  - Anniversary box appears
  - Tap the text box
  - You can input Anniversary
- Delete
  - Selects Anniversary Item at Month schedule window

- Selects the item you want to delete
  - ? Selects the item you want to delete
  - ? Tap Delete Button
  - ? Tap Confirm Button
  
- Modify
  - ? Selects Anniversary Folder at Month window
  - ? Selects the item you want to modify
  - ? Tap Modify Button
  - ? Anniversary window appears
  - ? Tap the text box
  - ? You can modify the item you want to modify
  
- Change screen (Month <->Day)
  - Month -> Day : tap Day Button at the bottom or tap the date of calendar.
  - Day -> Month : tap Month Button at the bottom screen.

### 3.5 Address

You can put various information and memo and search is available. Also, if you wish to share data with your PC, just sync your Address data with MS Outlook of your PC via hiSync program .



- Starting



- 1) Case 1 : Tap Address Icon
- 2) Case 2 : Select Address Icon by using Backward / Forward Button and then press Play Button.

- Closing

- 1) Case 1 : Selects File Menu from the menu bar and then tap Close Menu
- 2) Case 2 : Press Stop Button.

- Input

- ? Selects New Button at the bottom of the screen
- ? Tap the blank line you want to input
- ? Input box appears
- ? you can input what you want

- Modify

- ? Selects Address Icon
- ? Tap Detail Button at the bottom screen or tap the item you want in twice
- ? You can move to the detail screen.
- ? Tap the item you want to modify
- ? Input box appears
- ? You can modify the item

- Delete

- ? Selects the item you want to delete
- ? Tap Delete Button
- ? Tap Confirm Button

- Memo input


- ? Selects the blank line of memo at the bottom of the detail screen
- ? Input box appears
- ? You can input your memo

- Find

- ? Selects the blank line beside Find Button
- ? Input box appears
- ? You can input what you want to find
- ? You can find it using Find Button

### 3.6 Text memo

You can enter data by using pop-up keyboard or take notes in your own handwriting because hiebook use handwriting recognition technology. It is great for taking notes and quickly entering phone numbers and appointments. Also, you can edit TXT file delivered from PC to hiebook.

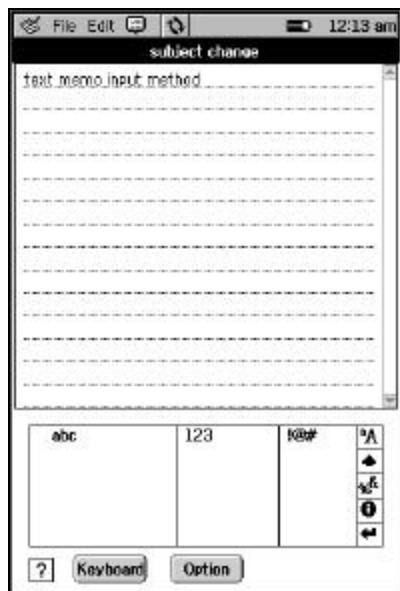


- Starting
  - 1) Case 1 : Tap Text Memo Icon
  - 2) Case 2 : Selects Text Memo Icon by using Backward / Forward Button and then tap Play Button.
- Closing
  - 1) Case 1 : Selects File Menu at the menu bar and then tap Close Menu.
  - 2) Case 2 : Press Stop Button.
- Menu
  - File
    - New : open new memo
    - Open : open file list window
    - Save : save current file
    - Quit : close application

- Edit
  - Copy : copy selected text
  - Cut : cut selected text
  - Paste : inserts the text that you cut or copied
  
- Input memo
  - ? Open new file
  - ? Input your memo by using the input box
  
- Delete
  - ? Selects Open Menu from the menu bar
  - ? Selects the file you want to delete from the file list window
  - ? Tap Delete Button
  - ? Tap Confirm Button

### 3.7 Drawing memo

You can write down memos just as you do on paper using the stylus pen. Also, useful when drawing an outline map easily and quickly.

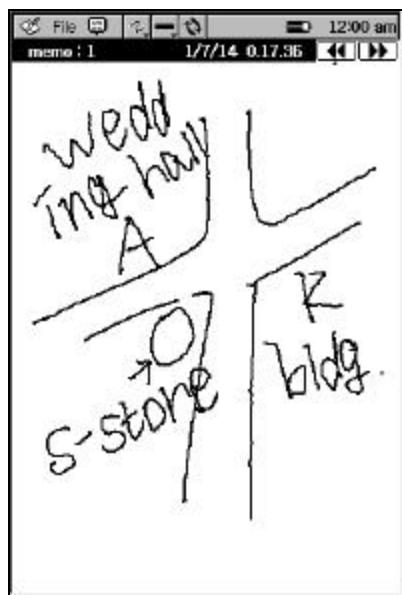

- Starting
  - 1) Case 1 : Tap Drawing Memo Icon
  - 2) Case 2 : Selects Drawing Memo Icon by using Backward / Forward Button and then tap Play

Button.

■ Closing

- 1) Case 1 : Selects File Menu from the menu bar and then tap Close Menu
- 2) Case 2 : Press Stop Button.(H/W)

■ Icon

-  Pen : freehand draw
-  Line : draws straight line
-  Rectangle : draws rectangle
-  Circle : draws circle
-  Erase : erases memo
-  Clear : deletes page
- Thin, Normal, Thick : selects line width



■ Input


- ? Selects Pen Icon
- ? You can draw memo by using stylus pen.

■ Erase & Delete

- 1) Erase
  - ? Selects Erase Icon
  - ? You can erase the memo partially
- 2) Delete
  - ? Selects Delete Icon
  - ? You can delete the memo page

### 3.8 Image Viewer

You can download various types of image files from PC. You can display your personal photos, images or maps downloaded from the internet everywhere you go.

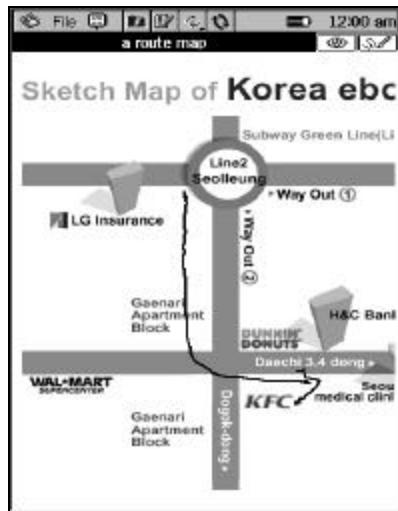

■ Starting

- 1) Case 1 : Tap Image Viewer Icon.
- 2) Case 2 : Selects Image Viewer Icon by using Backward / Forward Button and then Press Play Button.

■ Closing

- 1) Case 1 : Selects File Menu from the menu bar and then tap Close Menu.
- 2) Case 2 : Press Stop Button.

■ Icon

-  Drawing memo
  - If you select this, you can draw your memo and view your memo you drawn.
-  Text Memo
  - If you select this, you can input text.
-  Open image
  - If you select this, list box appears
-  Pen : freehand draw
-  Erase : erases memo

-  Clear : deletes all memo
-  Views as real size
-  Fit large image on the screen size(full image)

## ■ Viewing image

- Open image
  - ? Selects File Menu from the menu bar or tap Open Icon 
  - ? File list window appears
  - ? Selects the image you want to open in the file list window
- Delete image
  - ? Selects the file you want to delete in the file list window.
  - ? Tap Delete Button.
  - ? Tap Confirm Button.
- Supported image file format : bmp, jpg, jpeg, pcx, png, tga, tif, tiff)

## ■ Input memo

- ? Selects Drawing Memo Icon 
- ? Selects Pen Icon 
- ? Draws what you want on the image.

## ■ Erase Memo and Delete

- 1) Erase
  - ? Selects Erase Icon
  - ? You can erase the memo partially

2) Delete : if you select Delete Icon  , all the memo in that image will be deleted

## ■ Delete Text memo


- ? If you select Text Memo icon  , Data input window appears

? Delete Text Memo, and modify.

### 3.9 The others

#### ■ Calculator

General calculator you may use everyday.

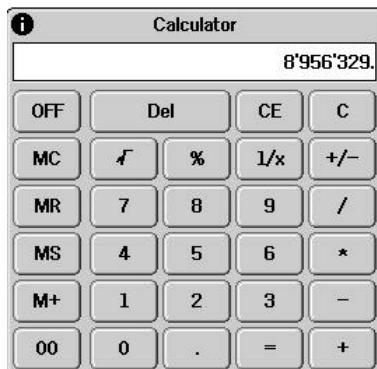

- MC : Clears the memory
- MR : Recalls the value stored in memory
- MS : Stores the number displayed.
- M+ : Adds the current value to the value stored in memory
- CE : Clears the equation.
- C : Clears the number displayed.
- √ : Calculates the square root of a number
- 1/x : Calculates the reciprocal number

#### ■ Game



- Othello

Othello is a two player strategy game. The board is 8 by 8 with tiles that are black on one side and white on the other side. The object of Othello is to flip as many of your opponent's tiles to your color as possible without your opponent flipping your tiles. This is done by trapping your opponent's tiles between two tiles of your own color.



- Puzzle



- Omok



- Sokoban

Sokoban is a simple game, requiring the ability to move the cursor around the screen, and to reverse-video some characters. The game lets you move around, pushing "packets" into a "store" area. You cannot push two packets at a time, only one. When you have pushed

all packets into store, you get a new screen

## 4. hiSync (Desktop Manager)

### 4.1 Synchronizing Data

#### ■ hiebook™ to PC

hiebook™ to PC : Plug one end of your cable into the USB port on your hiebook™ and plug the other end into a USB port on your desktop or laptop computer.

#### ■ Sync action


? Selects Sync Icon

? hiSync window appears

- Select Area : selects the field you want to synchronize among Address / Schedule / Manager

- Select Type

- hiSync <->hiebook™ : The data of hiSync will be synchronized with data of hiebook™.
- hiSync -> hiebook™ : hiSync overwrites hiebook™
- hiSync <- hiebook™ : hiebook™ overwrites hiSync

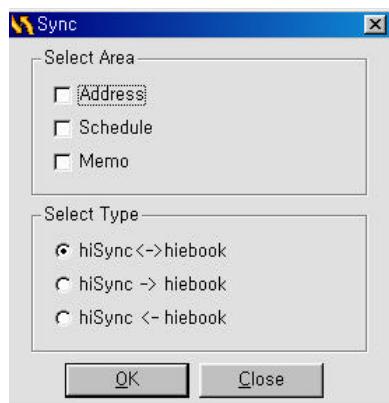

#### ■ Synchronizing

? Connects pc with hiebook™

? Click the hiSync Icon and then hiSync window appears


? Select area & type, select OK button.

? Synchronizes the data you want to synchronize among Address / Schedule / Memo

## 4.2 File Management

### ■ File manager

- If you select the file manager in the hisync, the file manager appears
- If you select the hiebook, you can see all file stored and delete them.

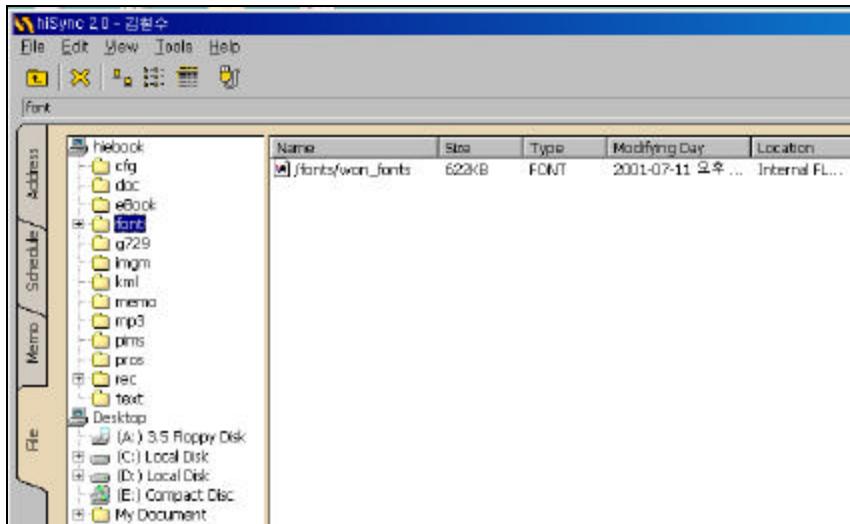

### ■ File format in the folder

- Data file
  - imgm : image file(hiebook support bmp, jpg, jpeg, pcx, png, tga, tif, tiff )
  - eBook : eBook file, text and comics file
  - memo :memo file
  - mp3 : mp3 music file
  - pims : Schedule, Address data file
  - pros : User profile
  - text : Text Memo file
  - rec : Voice memo file

- System file

The system files cannot be deleted by user (when try to delete, message appears)

- cfg :configuration file of system or applications. That has configuration value

- font :font file

### 4.3 Download File

#### ■ Download

You can download eBook file, MP3 file, image file, html file, hwp file, txt file using this menu.

- How to download
  - ? Selects the file you want to download
  - ? Click the right mouse button
  - ? Pop up menu appears
  - ? Selects Send a file to hiebook

## 5. Product Care

### 5.1 Caution

#### ***LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY***

(A) LIMITED WARRANTY. KOREA EBOOK WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR KOREA EBOOK PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE, NOR TO THE SCREEN GLASS. THE SOLE OBLIGATION AND LIABILITY OF KOREA EBOOK, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF KOREA EBOOK IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS KOREA EBOOK IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY KOREA EBOOK. NEITHER KOREA EBOOK NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY

YOU FOR THE KOREA EBOOK PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT.

YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK.

SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL KOREA EBOOK'S CUSTOMER SERVICE DESK, +82-2-501-5858, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID)

TO:

KOREA EBOOK INC.

ATTN: SERVICE DEPARTMENT

KORYO BLDG. 4<sup>TH</sup> FLOOR 904-14,

DAECHI-DONG, KANGNAM-KU,

SEOUL 135-280, KOREA

IF YOU RETURN A KOREA EBOOK PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, NEWRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

## 5.2 Resetting hiebook™

- Use the blunt end of a paper clip to gently press the reset button located on the back of the device just above the battery compartment.
- You should calibrate your device after resetting the device.

