


THRUSTMASTER®

QUICK INSTALL

FireStorm WIRELESS

STICKY FIRE

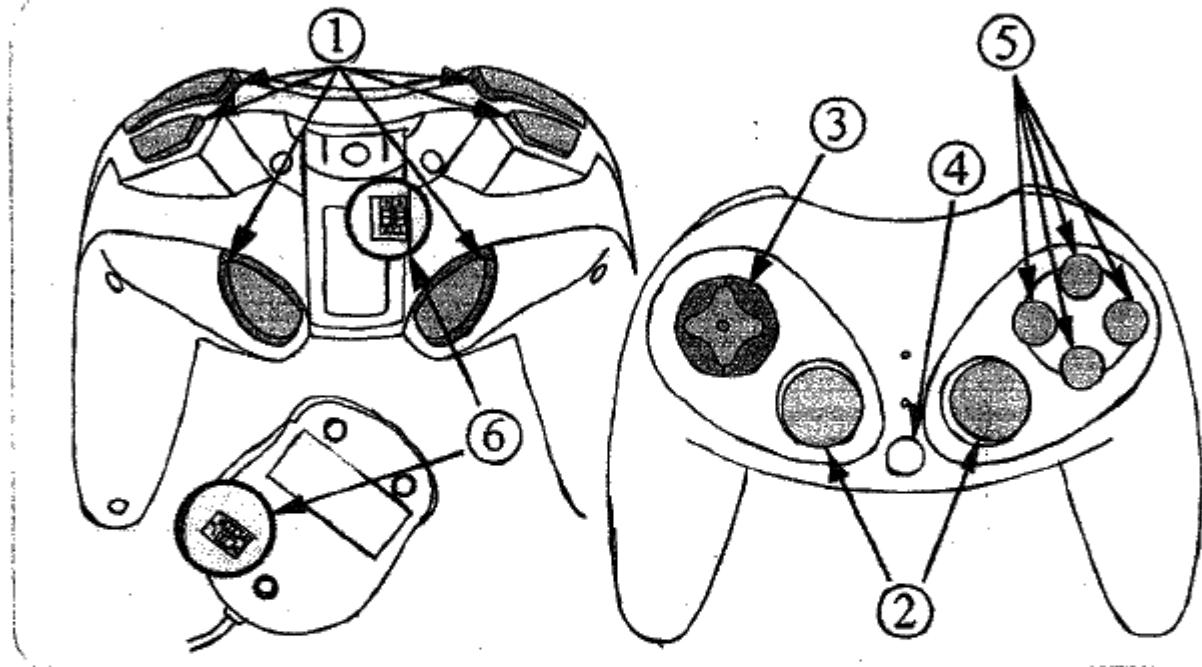

TECHNICAL FEATURES

- ① 6 action buttons
- ② 2 analog controllers / 2 action buttons
- ③ Multidirectional D-Pad
- ④ Mode button
- ⑤ 4 action buttons
- ⑥ Multiplayer setting buttons

©Guillemot Corporation 2001. All rights reserved. Thrustmaster®, Thrustmapper™ and Firestorm™ are trademarks and/or registered trademarks of Guillemot Corporation S.A. Microsoft® Windows® and DirectX® are registered trademarks of Microsoft Corporation in the United States and/or other countries. All other trademarks are property of their respective owners. Contents, designs and specifications are subject to change without notice and may vary from one country to another.

INSTALLATION

The CD-ROM supplied with your Firestorm Wireless Gamepad installs the Thrustmaster package, which includes the Thrustmaster drivers and the Thrustmapper programming software.

1. Switch on your PC and insert the installation CD into your CD-ROM drive. Click on *Next* (if the CD is not automatically launched, double-click on *My Computer*, then double-click on the CD-ROM icon).

If your system detects an earlier version of DirectX than the version provided with Thrustmapper, a dialog box will appear automatically in order to update DirectX. Follow the on-screen instructions to install the new version of DirectX and click on *OK* to reboot your PC. Continue the installation procedure: double-click on *My Computer* then double-click on the CD-

2. Click on *Next* and follow the on-screen instructions to install Thrustmapper.
3. The installation utility proposes two types of installation: *Typical* (recommended) or *Custom* (lets you select the components to be installed). Make your choice and click on *Next*.
4. The installation utility will then install the Thrustmaster drivers. Follow the on-screen instructions to finish the installation and restart your PC.
5. When Windows restarts, click on *Next* to complete the Thrustmapper installation and follow the on-screen instructions.
6. Plug your RF receiver's USB connector into one of the USB ports located at the back of your computer (if you are connecting a USB peripheral device for the first time, Windows may ask you for the Windows CD-ROM in order to install the required system files).
7. Click on *Start / Settings / Control Panel*, then double-click on the *Gaming Options* icon. If the gamepad has been installed correctly, it will appear in the list of game controllers, with *OK* status.
8. Click on *Properties* in the *Gaming Options* dialog box. The control panel of your gamepad will appear, allowing you to test your game controller.
9. You are now ready to play. If you wish to program your Thrustmaster device, please run the Thrustmapper programming software.

A QUICK NOTE ABOUT THRUSTMAPPER

Thrustmapper is a software application that allows you to assign personalized commands to buttons and to reconfigure the axes of your Thrustmaster game controller. You can create different programs (called presets) for all of your games, and have them called up automatically whenever the game is launched! Specialized game presets are available on the Thrustmaster website (www.thrustmaster.com). Please refer to the online manual for full details regarding the Thrustmapper software. **N.B.: for games with their own configuration panel (allowing you to program buttons and functions), the use of Thrustmapper is optional.**

GAMEPAD MODE CONFIGURATION

You can adjust Firestorm Wireless Gamepad's 4 control axes.

To switch from Digital mode to Dual Analog mode, press the *Mode* button (4).

- Digital mode: multidirectional D-Pad (8 directions, 4 diagonals) and 12 programmable action buttons.
- Dual Analog mode: 12 programmable action buttons, 2 analog controllers and programmable 8-directional POV function on the multidirectional D-Pad.

MULTIPLAYER FUNCTION

Firestorm Wireless Gamepad allows you to play with up to 4 players at once, thanks to the multiplayer setting buttons (6) located under the RF receiver and on the underside of your controller (in the battery compartment).

For multiplayer gaming, each player must select a different channel by configuring

both his or her RF receiver and gamepad to that channel.

1. Select an RF receiver channel according to this table.
2. Select a gamepad channel according to this table.

Channel	Button 1	Button 2
1	2	1
2	1	2
3	1	1
4	2	2

In the event of malfunction during use due to electrostatic emission, please exit the game and unplug the unit from your computer. Resume normal game play by plugging the unit back in and restarting the game.

US > We thank you for your purchase and inform you that this product offers a one (1) year warranty by exchange from the date of purchase.

- Surname:.....
- First name:.....
- Date of birth:
- Address:.....
- Postcode:.....

- Exact name of the product purchased:.....

- UPC #: (last six digits of UPC bar code located on packaging)



0 | 0 | 8 | 8 | 8 | 8 -

- What kind of games do you have? (Give 3 titles)

- 1).....
- 2).....
- 3).....

- Please check the two most important reasons why this product was purchased:

- 1 Features
- 2 Read a review
- 3 Price
- 4 Advertisement
- 5 Friend's recommendation
- 6 Read/Heard about it on the Internet
- 7 Used/Saw it at a friend's house
- 8 Received it as a gift
- 9 Other

- Do you own any other accessories?

- Gamepad
- Joystick/Flightstick
- Wheel
- Other (specify):.....

Serial number:.....
Shop where purchased:.....
Address:.....
Date:.....

PMU-54410921

WARRANTY INFORMATION

Thrustmaster warrants to the original purchaser of this product that it will be free from defects in materials and/or workmanship for a one (1) year period from the date of purchase. If a defect covered by this warranty is discovered within this one (1) year warranty period, Thrustmaster at its option will repair or replace any part that Thrustmaster determines to be defective.

To obtain a refund (only for manufacturer direct purchases - excluding shipping and handling) or a replacement during the warranty period, you must first call the technical support hotline* to receive a Return Merchandise Authorization (RMA) number and the appropriate address for U.S. and Canadian customers. You must then clearly write this number and the mention "WARRANTY RETURN" on the shipping box (shipping costs not paid by manufacturer). When returning the product, you must also enclose a copy of the original invoice and the reason(s) for returning the product. When returning the product, make sure all the materials such as the manual(s), connection cables, installation CD and the product packaging box are included.

NOTE: only packages that have been assigned an RMA number by a technical support agent will be accepted.

This warranty is limited to the internal works of this product and the external housing. It will not apply if your Thrustmaster product has been damaged by abuse, misuse, negligence, accident, modification, tampering, or by any other cause unrelated to defective materials and/or workmanship.

Repair or replacement as provided under this warranty is Thrustmaster's exclusive prerogative. Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited to one (1) year from the date of purchase and are subject to the conditions set forth in this limited warranty. In no event shall Thrustmaster or its affiliates be liable for consequential or incidental damage resulting from the breach of any express or implied warranties.

Some states do not allow limitation on how long an implied warranty lasts or exclusion or limitation of incidental/consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

***Technical Support/Customer Service Hotline**
(for questions, troubleshooting, or additional instructions): 1-877-484-5536

***Shipping and Handling Fees for US and CANADA WARRANTY SERVICE**
Racing Wheel requires US\$12.00. All others require US\$6.00.

Thrustmaster Technical Support (Accessories)
5505 Boulevard Saint Laurent,
Suite 4204
Montreal, Quebec
H2T 1S6
CANADA

HOTLINE: Opening Hours: 8.30AM - 7PM (Eastern Standard Time)

THRUSTMASTER®
www.thrustmaster.com

For FCC Part 15.21

**If you cannot eliminate the interference,
the FCC requires that you stop using your device.**

IT IS VIOLATION OF THE FCC REGULATIONS TO REMODEL
OR ALTER THIS DEVICE IN ANYWAY WITHOUT PERMISSION
ANYONE WHO VIOLATES THE REGULATIONS WILL LOSE
THE RIGHT TO OPERATE THE DEVICE.