

PARTS LIST

MODEL E7020X-Y

NO.	DESCRIPTION	QTY		NO.	DESCRIPTION	QTY
1	Cabinet	1		26	Fan motor	1
2	Door assembly	1		27	Fan	1
3	Upper hinge	1		28	Capacitor	1
4	Lower hinge	1		29	High voltage diode	1
5	Base board	1		30	Double diode	1
6	Foot	4		31	Capacitor clip	1
7	H.V. transformer	1		32	Fuse	1
8	Crash rubber	1		33	Filter	1
9	Switch bracket	1		34	Magnetron	1
10	Interlock switch	3		35	Thermal cut-off	2
11	Monitor switch	1		36		
12	Control panel	1		37		
13	Control	1		38		
14	Power supply cord	1		39		
15	Indicator light	1		40		
16	Wind-guide plate	1		41		
17	Oven	1		42		
18	Nameplate	1		43		
19	Turntable motor	1		44		
20	Roller assembly	1		45		
21	Turntable glass	1		46		
22	Drive shaft	1		47		
23	Spill prevention plate	1		48		
24	Mounting plate	1		49		
25	Fan bracket	1		50		