


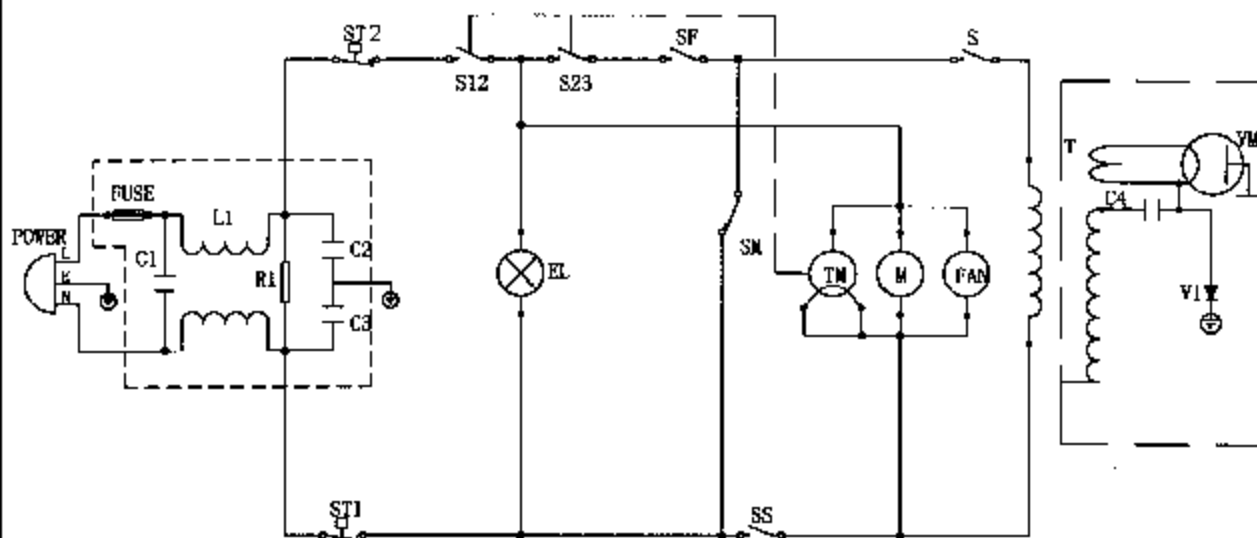

S	door	EL	lamp
S12	time switch	TM	timer
S23	power switch	M	turntable motor
SM	monitor	FAN	fan motor
SF	primay switch		
SS	secondary switch		

Note: when the timer switch is on, if the oven door open, the lamp is on; when the timer switch is off, if the oven door open, the lamp is off

M6017X-Y M7017X-Y schematic diagram

标记	处数	更改文件号	签字	日期
设计	方叶伟	标准化		
校对		描图		

图样	标记	数量	重量	比例

材料: