


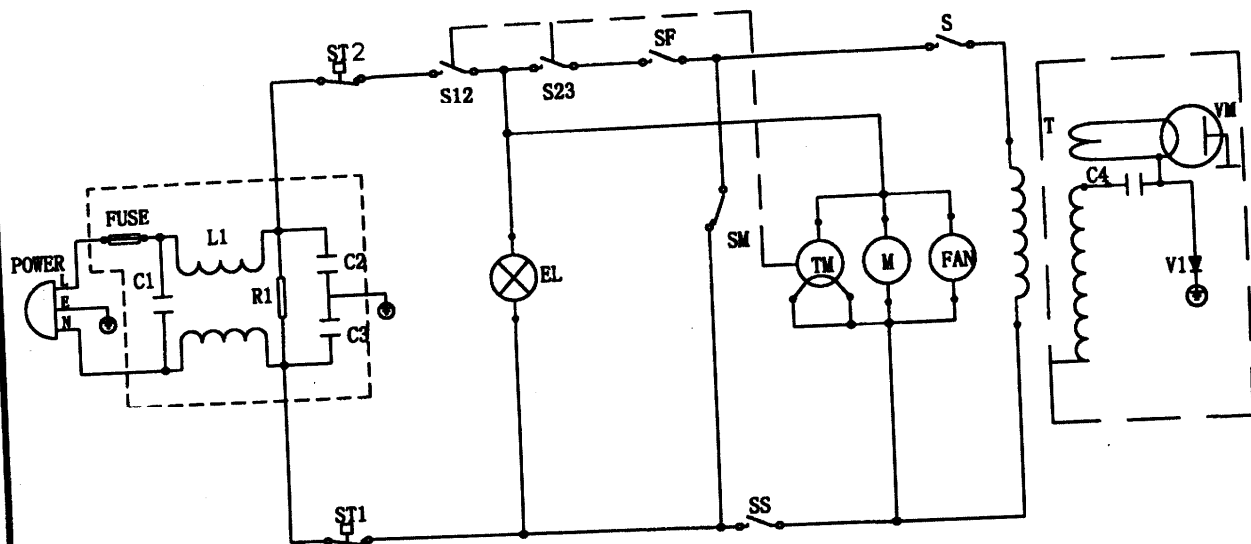

S door

S12 time switch

S23 power switch

SM monitor

SF primay switch

SS secondary switch

EL lamp

TM timer

M turntable motor

FAN fan motor

Note: when the timer switch is on, if the oven door open, the lamp is on; when the timer switch is off, if the oven door open, the lamp is off.

M6017X-Y M7017X-Y schematic diagram

设计处 数 更改文件号 签 字 日期

设计 方叶伟 标准化 图样 校 对 描 图

图 样 标 记 数量 重量 比例

材料:

兰的制站站制站右阳八三