



Rikomagic **MK802 II**

Android 4.0 Mini PC Manual

Shenzhen Rikomagic Tech Corp., Ltd

1.Declaration.....	3
--------------------	---

 
2.Device connection Instruction	5
3.Boot state	5
4.Main interface introduction	7
4.1 Function column	9
4.2 Status bar	9
4.3 Application	10
5.Settings	11
5.1 WIFI Setting.....	11
5.2 Wired network setup	12
5.3 PPPOE Settings.....	12
5.4 Sound	12
5.5 Display	12
5.6 Storage	13
5.7 Apps	13
5.8 Security	13
5.9 Language & input.....	13
5.10 Backup & reset.....	13
5.11 Date and time	13
5.12 Developer options	13
5.13 About device	13
6.Download & Install Apps.....	14
6.1 Delete Apps.....	14
7.Web browsing.....	14
8.local playback.....	15
8.1 Music.....	16
9.Use virtual keyboard	16
10.Switch input methods	16
Question & Answer	17
Specifications	17

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Declaration:

- This user manual includes all the information for safe and correct operation of the MK802 II device. To avoid accidents and device damage, please go through these contents carefully before using the device.
- Please keep the device away from high temperatures, humid and dusty environments.
- Do not drop, hit or knock the device.
Do not power off the device when it is formatting or upgrading, etc, otherwise an operation system (OS) error may occur. Most OS errors can be solved with a simple reset of the device.
- Do not dis-assemble the device. Do not clean it with alcohol, thinner or benzene.
- We retain the right to upgrade and modify the device without giving notice.
- Disclaimer: While we are responsible for the warranty and after-sale services, the user is responsible for his own data written into the device. We are not responsible for the loss of any data or related.
- The device is not water-proof.
- All the pictures in this manual are purely for reference.

1. Connector

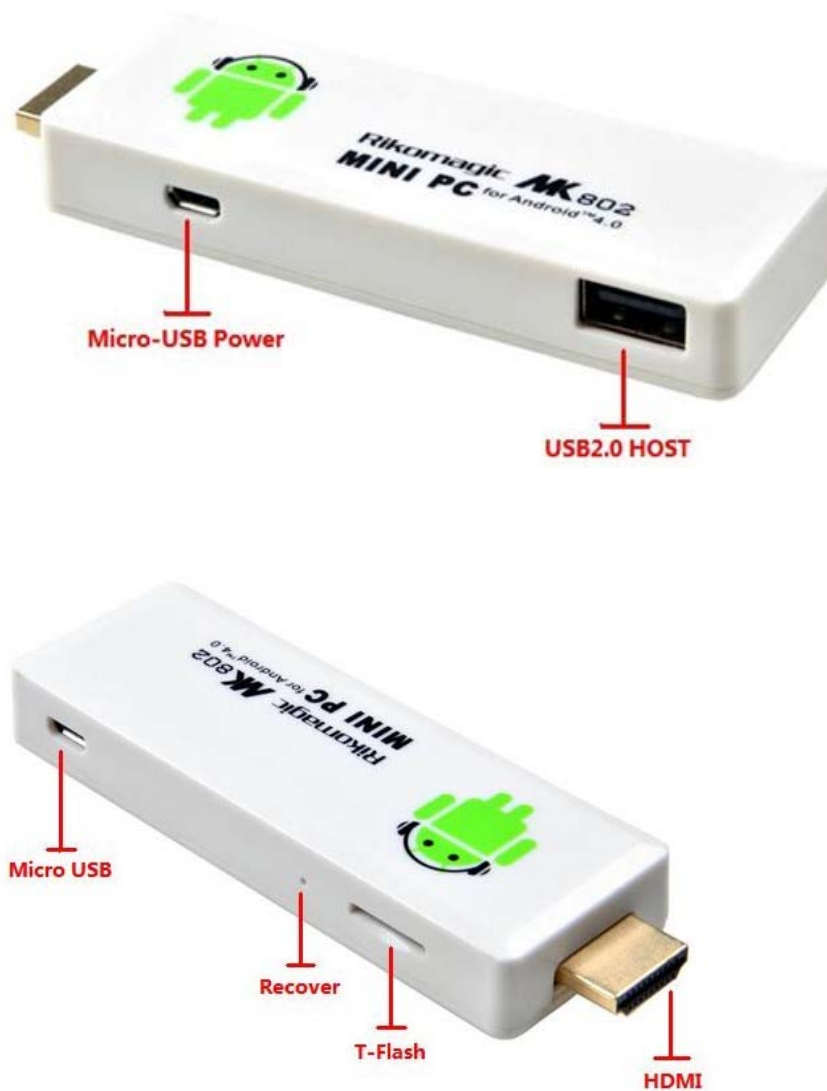

Micro-USB Power: 5V 1A Power

USB 2.0 HOST & Micro USB: Connecting with USB devices; or data transfer with computer

T-Flash: Supports expansion of storage memory from 2GB to 32GB using TF card (micro-SD)

Recover: Firmware recovery button

LED: Power light

HDMI: High Definition Multimedia Interface output (male) to TV or Monitor display

2. Device connection Instruction

 
 
- a) Insert the MK802 II into your TV or Monitor HDMI port (if there is not enough space around your HDMI port, please use the HDMI extension cable included in the box). Set your TV to receive signals from the MK802 II into this particular HDMI port (refer to your TV set user manual).
- b) Power supply connection: take out the included Micro USB cable, plug it into the MK802 II's Micro USB 2 port, then plug the other end of the cable's full-USB 2 into your TV's USB port. (If there is no USB 2.0 port on your TV or you need to connect an external HDD, please connect the power adapter for a more stable power supply).
- c) This device suggests using 2.4GHz wireless keyboard or mouse. Plug a 2.4GHz receiver into the USB Host port. Or plug into the micro-USB OTG port using the included micro-USB converter. If only a wireless mouse is plugged in, the device will provide a soft keyboard from the operation system. If the device detects a physical keyboard, the soft keyboard will be hidden by the OS automatically.
- d) Mouse left button for "OK", right button for "Return", scroll wheel for Page Up and Page Down. Hold left button to drag icon or Copy & Paste file. Hold middle button for Properties.

3. Boot state

After power on for about 10 seconds, the boot screen will appear.



Followed by the Rikomagic boot logo:

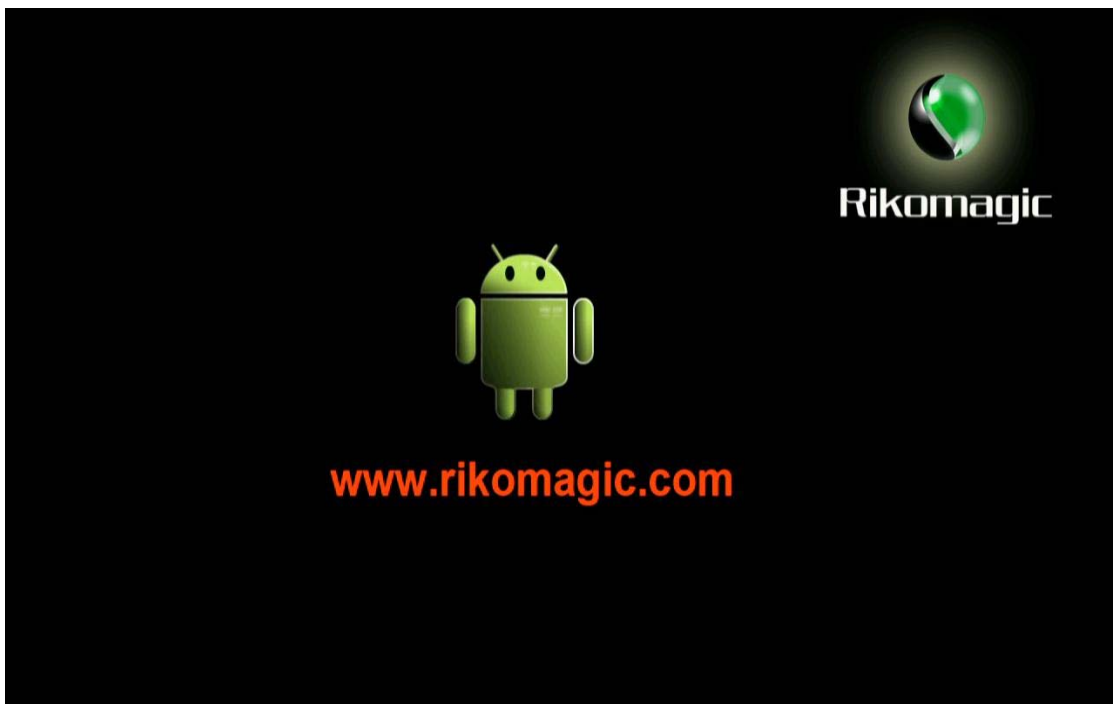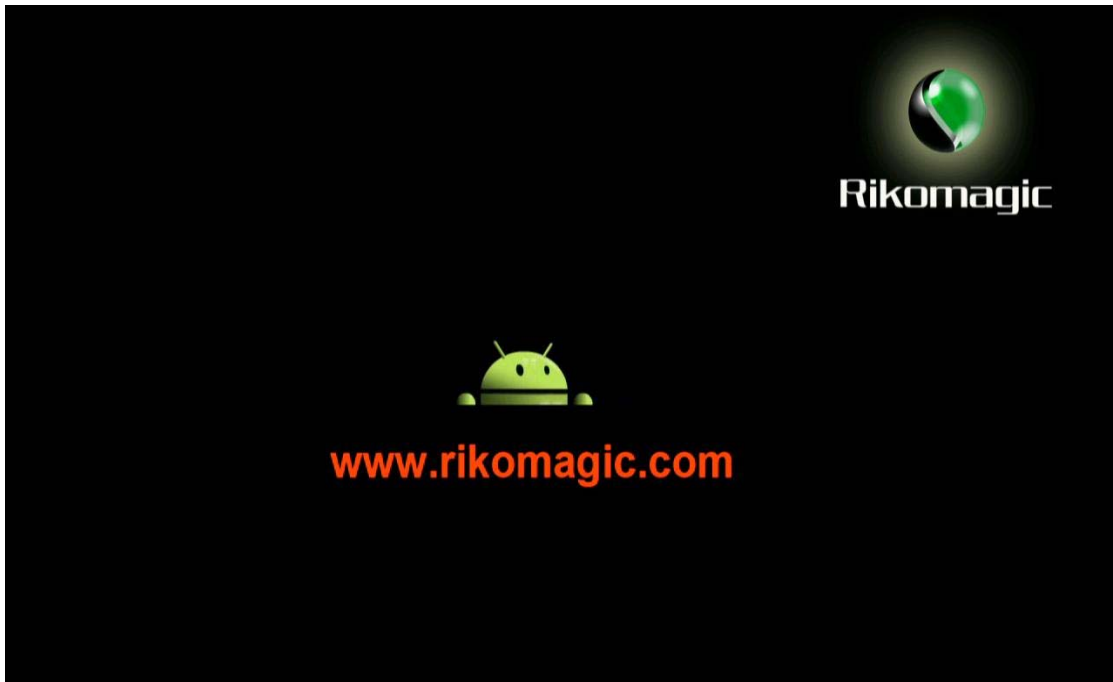

In about one minute, the main screen will display:

 


4. Main interface introduction

Hold down the left button of your mouse on any icon to drag it anywhere you like. You can similarly drag any app shortcut onto the main screen.




Drag any icon into the top "X" (it turns red) to delete it:

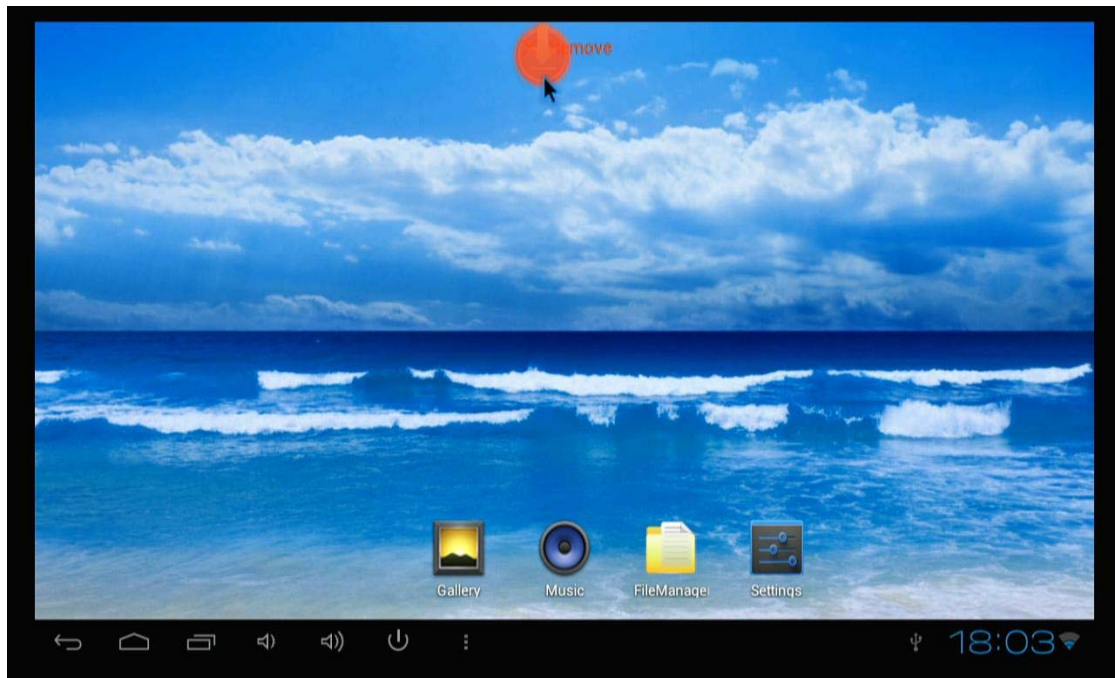

Move your cursor to any (empty) space and drag towards left or right to turn to the next page.

 You can also use the mouse wheel for scrolling to the next page.

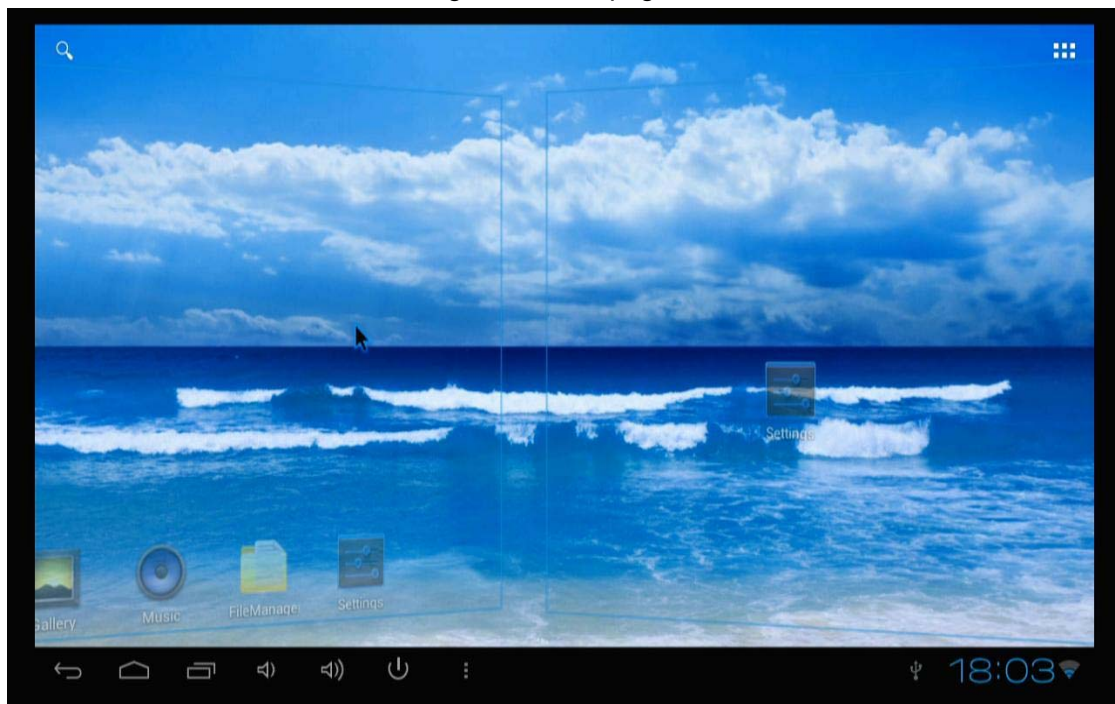

4.1 Function column



Return button: return to Previous Page.



Main menu button: click it anytime to return to Main Menu.



Program button: click to check all the running programs.



Volume decrease button: click to decrease Volume.



Volume increase button: click to increase Volume.



Shutdown button: in any page, click this button to power off the device.



Properties button: when in different apps, it shows different contents. It is equivalent to Windows properties button.



Search button: located in the top left corner of the desktop, click this icon to search the web or apps.



 
Program tools button: located in the top right corner of the desktop, click this icon to see installed apps.

4.2 Status bar

The right bottom corner is the status bar. It shows the status of the T-Flash (micro-SD) Card, USB connection, Time, Wifi and Downloads, etc.




Click a status bar icon to pop up the respective hidden menu.

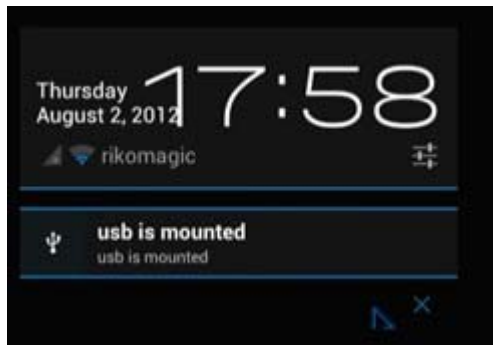

4.3 Application

 
Click  to show all the installed apps and setup tools icon.

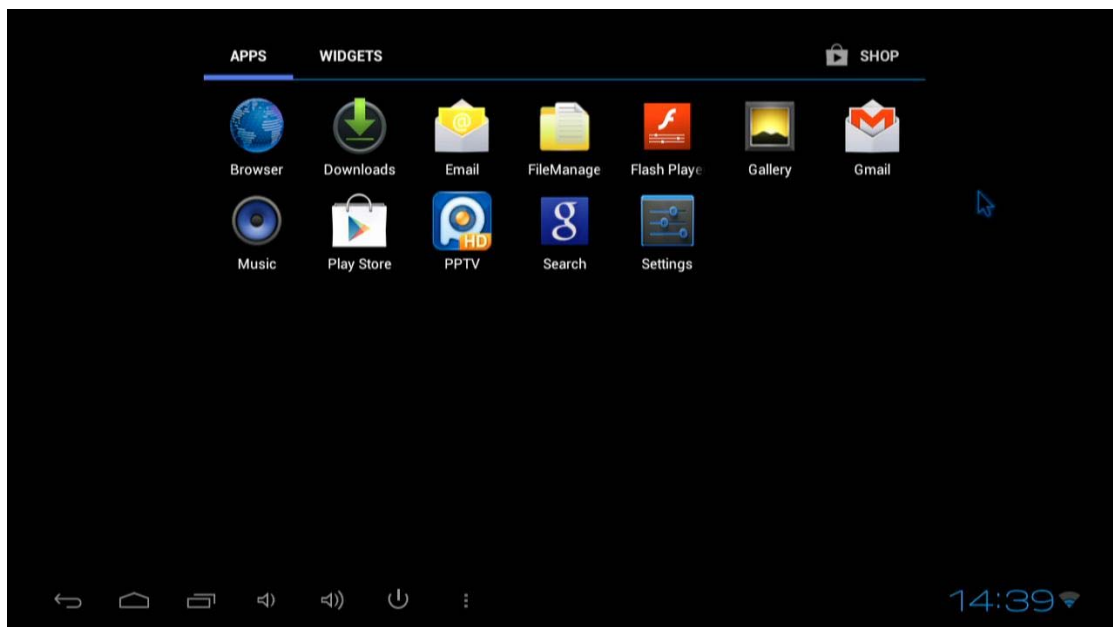

- If there are more app icons than the page can display, you can drag the cursor to right or left for the next page to see the rest of the app icons.
- You can launch any app directly or drag it to anywhere onto the desktop if you want.




 - Click “WIDGETS” to access; keep pressing on widgets to make them into shortcuts on the desktop.

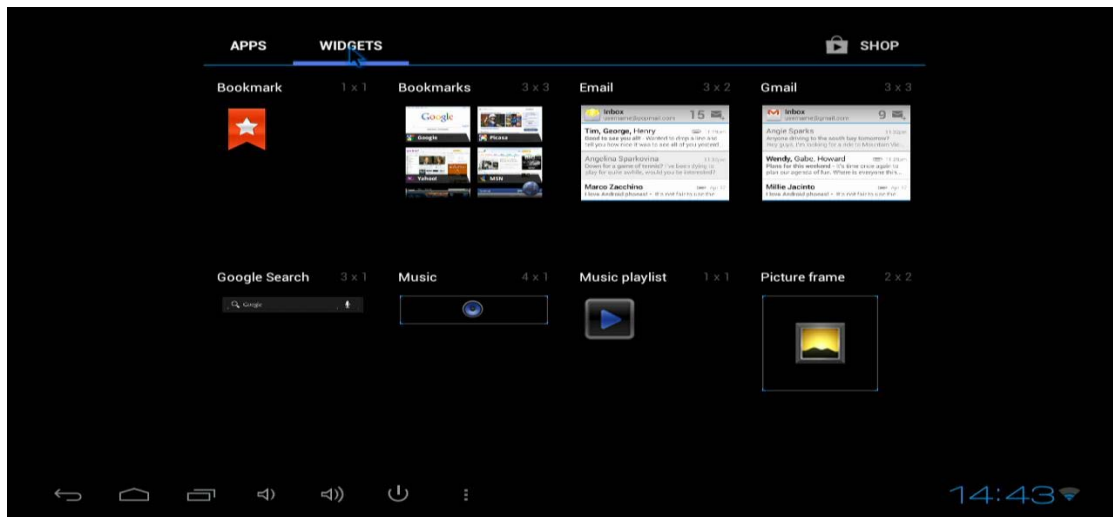


5. Settings

 In Settings, the user can setup the device according to his own requirements, such as network connection, language, input methods, video output resolution, sound output and check storage space, etc.



 Settings is on the tool bar. Click to pop up the screen below:

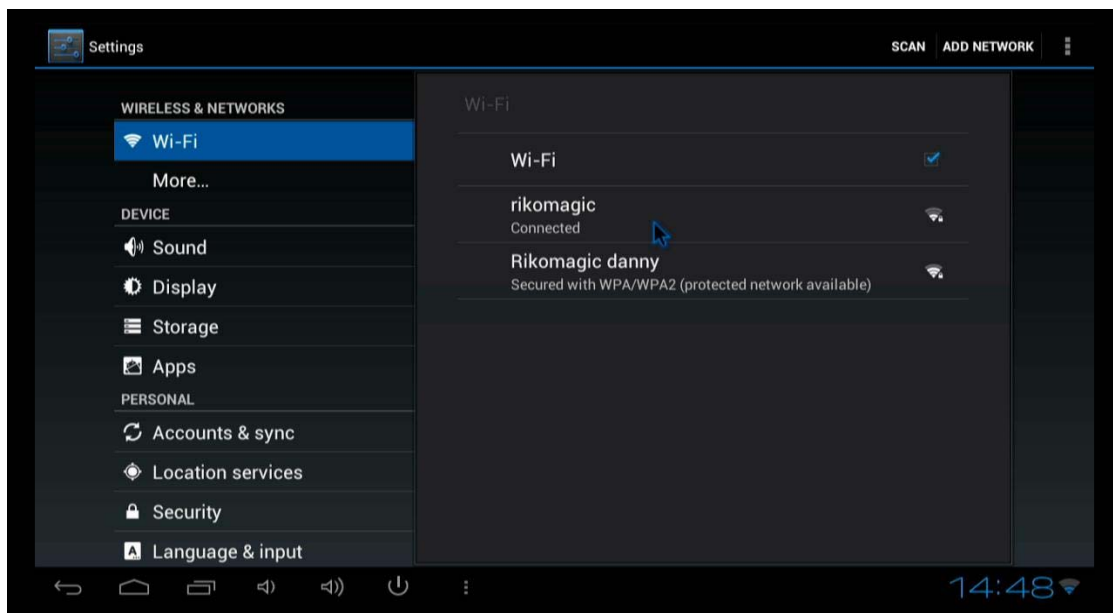

5.1 WIFI Setting

 
When opened, the Wifi player will search for available wireless router signals within 30 meters. User simply

chooses a router access point named on the screen, input the correct password and can then access the internet. If the access point is not locked with a password, the Wifi player will connect to the internet directly.

5.2 Wired network setup

If there is no wifi, you can use an ethernet (LAN / RJ45) cable to access the internet. But first, you have to buy a USB 2.0 ethernet (LAN / RJ45) Adapter and plug one end into the MK802 II's USB Host or OTG ports. (Note: The network supported is limited, so please ensure the correct type).

Connect RJ45 / LAN / ethernet cable, click "Settings" → "More" → "Ethernet" → tick "Use Ethernet"

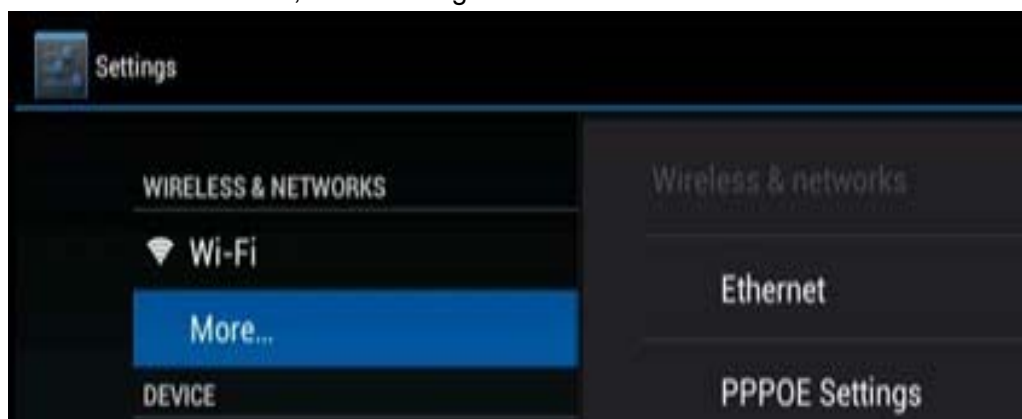

5.3 PPPOE Settings

If your family or office network is Dial-Up, then click PPPOE Settings and input the account and password.

Connect RJ45 / LAN / ethernet cable, click "Settings" → "More" → "PPPOE Settings" → input account and password.

5.4 Sound

Volume: Click to setup volume level for music, video and games or other media

Click sounds: Click to turn on or turn off click sounds

Screen lock sound: Click to turn on or turn off screen lock sound

Audio output mode: User can choose HDMI or SPDIF audio output mode

5.5 Display

Brightness: Click to setup screen brightness level

Contrast: Click to setup screen color display contrast

Saturation: Click to setup screen color display saturation

Wallpaper: Choose this option to change the wallpaper according to your preference

Font size: Click to set system font size according to your preference

Screen adaptation: Click to adjust display size for games

Screen trimming: Click to adjust the size of screen

Display output mode: Click to choose appropriate display output resolution

5.6 Storage

In this option, user can view device internal storage space and external T-Flash or micro-SD card storage space, uninstall apps or format the card.

5.7 Apps

In this option, user can view installed and running apps; at same time also check DDR parameters.

5.8 Security

User can set a password.

5.9 Language & input

Language: user can set the Language for system menus according to country or preference (60 languages supported)

Input: Chinese and English input are supported by default and user needs to install other input methods if desired.

Users can also setup here the keyboard and mouse cursor speeds and simulation mouse step length.

5.10 Backup & reset

Backup: when you have very important files or apps, choose Backup in case files are lost.

Reset: when you choose this option and confirm, the device will erase all user settings and all downloaded apps and re-apply the factory default configurations (not recommended unless necessary).

5.11 Date and time

The device does not support a built-in battery, so user-set date and time cannot be saved. However, user can set automatic date & time so when the machine connects to the internet, the date and time will update automatically to the correct time and date for your area.

5.12 Developer options

USB debugging: USB debugging is for developers to copy data between a computer and the MK802 II, to install apps on the device without notification and to read log data.

5.13 About device

This option shows current system information.

6. Download & Install Apps

 
To download apps from the internet, ensure that the extension of the app is **.apk** or it will not be recognized. Users have two methods to install apps:

1. Download apps from the various android markets or Google Play store and after the download is complete, follow the steps to finish the installation.
2. You can also use USB disk to install apps. First, connect USB disk with device, then open the USB disk, choose the apps you prepared, select the apps, then follow the steps to finish installation.

Note: if the **.apk** apps are not from Google Play store, the system will regard it as not safe, so user needs to go to “System Settings” → “Security” → “Unknown Source”, then tick inside the box to allow installation of these Third Party apps.

6.1 Delete Apps

- a. Go to “Settings” → “Apps” → “Manage Applications”, to see the installed apps list
- b. Click the app icon you want to delete, and the delete dialog box will pop up
- c. Click “Uninstall”, then wait until the app-delete is completed

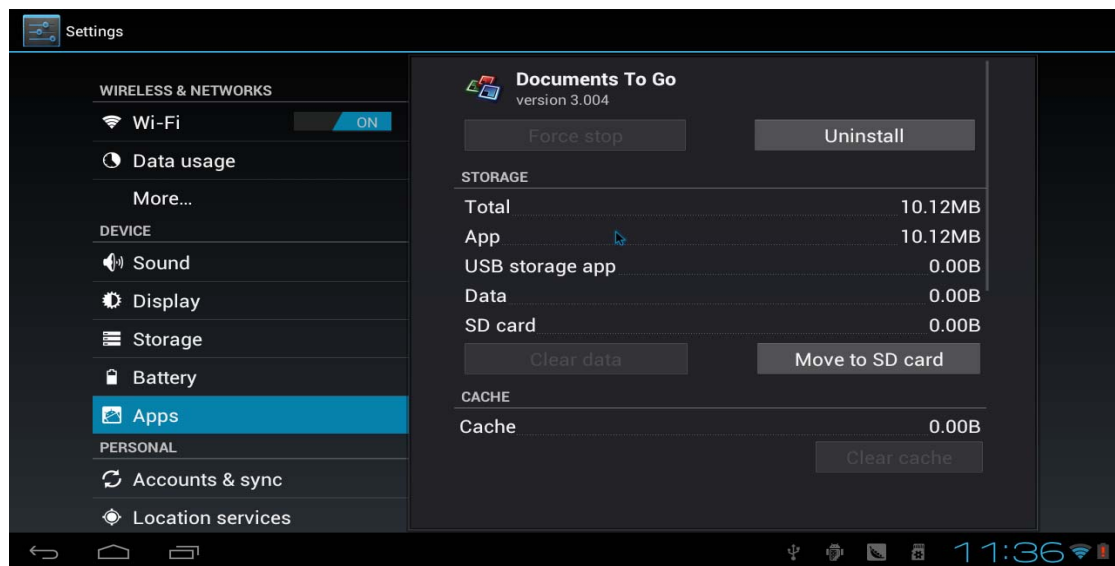

7. Web browsing

 
To connect to the Internet, use the Android 4.0 built-in browser, or download and install other browsers.



When you open the Android 4.0 browser, you will see a new webpage with a 'tab' at the top which you can click “+” to add another new webpage, or click “-” to close the webpage. Most browsers use this method of 'tabs' to organise web browsing.

8. Local playback

You can use the File Manager to navigate and browse through your external TF (micro-SD) card, a connected USB flash drive or external HDD and play back any of the music, videos, pictures and files in them.

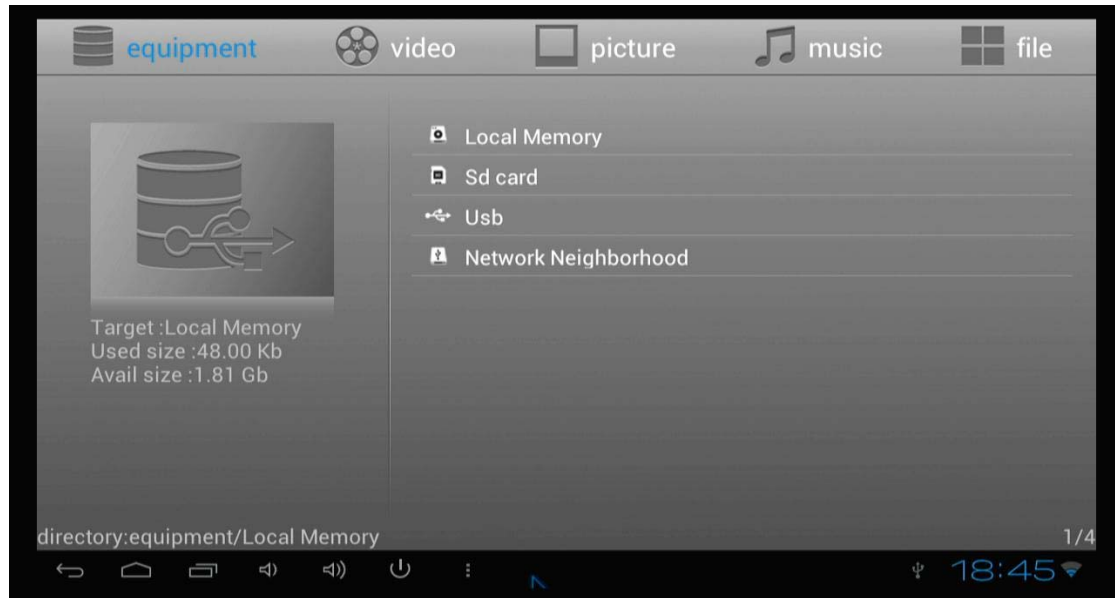


8.1 Music

Click “Settings” → “Music” to play music.

The device can also play local videos but you need to download and install a Media Player first (there are many media players among the more than 600,000 apps in the Google Play store).

9. Use virtual keyboard

 The MK802 II supports a connected mouse, with a soft keyboard. If the device detects a connected physical keyboard, the soft keyboard will be hidden.

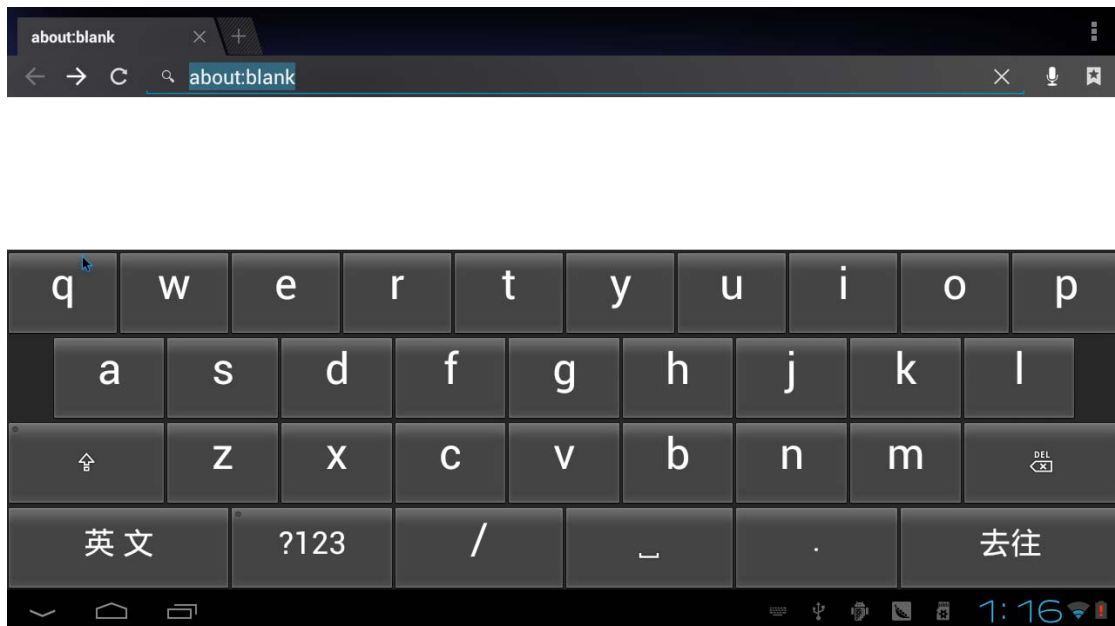

10. Switch input methods

When you click any input box, you can choose your input methods.

To set up, please click the desktop keyboard icon at the bottom right of the status bar.



All the installed methods will display as in the picture below, and you can choose one you prefer:



Question & Answer

- Screen flicker or unstable operation: please check if the HDMI cable has been connected tightly.
- Cannot start device: please download recovery software from Rikomagic official website: www.rikomagic.com to refresh the device OS. Make sure all your important data have been backed up before doing this. If this still does not work, please contact the distributor you bought from.
- System keeps restarting: please check if the device is getting enough power supply. Sometimes, external HDD can cause power drops. Please plug an additional power supply for external HDD or other external devices.
- Cannot find file in micro-SD card or another drive: please check all the connections of the device and ensure you have ticked off micro-SD and USB Host in "Settings"

Specifications

Model	MK802 II
OS	Android 4.0
Main Chip	Allwinner A10 / 1GHz Cortex-A8
Memory	1GB
Storage	4GB
Graphical processor	2D/ 3D/ OpenGL ES2.0 (AMD Z430) / OpenVG1.1 (AMD Z160) @ 27M Tri/sec
Network	Wireless 802.11 b/g, WAPI (Ralink 8188)
Expand Memory	Micro TF (micro-SD) 2 to 32GB
IO/Ports	Micro USB x2; USB 2.0 x1; HDMI x1; Micro-SD x1
Keyboard	virtual keyboard; supports 2.4GHz wireless keyboard, fly mouse
Audio	AAC, AAC+, eAAC+, AMR-NB, AMR-WB, QCP, MP3, WMA, WAV, MIDI, M4A
Video	WMV/ASF/MP4/3GP/3G2M4V/AVI/MJPEG/RV10/DivX/VC-1/MPEG-2/ MPEG-4/H.263/H.264/1280*720P HD 30 fps, 1080P/720*480 D1 30fps
Android Apps	Youtube, Twitter, Angry Birds, Office, Gmail, Browser, Skype.
HDMI	1080P & 2160P
Power Input	Powered by USB cable
Accessory	Micro USB to USB (male) cable; Micro USB to USB (female) adapter;

	HDMI female to male cable
Unit Size	9.7*2.8*1.2cm
Total weight	0.2kg

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Address: 2F, Liangshi Building, Qi'an Road 6#, Shajing Street, Bao'an, Shenzhen, China, 518125

Forum: <http://www.rikomagic.co.uk/forum>

E-mail: Sales@rikomagic.com

Official website: www.rikomagic.com