

User Manual

MP3 Player
(OSM-MP3)

Westech Korea Inc.

FCC NOTICE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE
OPERATION.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Operation

Keys

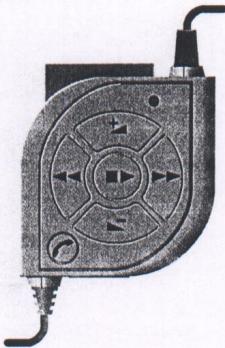

- ▶▶ Play: Hold down.
Pause: Press briefly.
Stop: Hold down.
- ▶▶ Jump forward one track:
Press briefly.
- ◀◀ Jump back one track:
Press briefly.
- Volume:
+ Loud.
- Quiet.

After a pause of about 10 minutes the MP3 player will stop to save energy.

Settings

During a pause, you can make the following settings:

- ▶▶ Change the playback mode:
Normal, Shuffle,
Cont, CoSh (Cont.+ Shuffle)
- ◀◀ Shuffle: Random
track sequence.
- Cont.: Tracks
are repeated.
- + Set individual tones:
Jazz, Klass, Rock, Pop,
Bass, Mono, MP3Di

Bass: Megabass on.
Mono: Mono mode on, equalizer off.
MP3Di: Equalizer off.


Display

When your mobile phone is in stand-by, information about the current track is displayed when you press any key (except the PTT key) or when a new track starts:

01/08 Cont/Class ic	Track 1 of 8
---->..... 02:57	Progress/Length
Kleine Nachtmusik-	Track -
Mozart	Performer/ Composer

4 Making a phone call

The MP3 player USB switches to pause whenever you receive or make a call. When the phone call has ended the melody that was interrupted will continue.

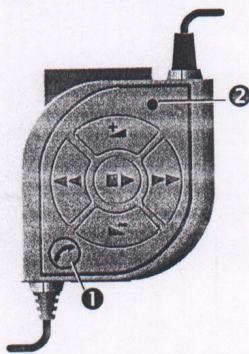

Press the PTT key 1 to accept and end a call.

Please refer to the operating instructions of your mobile phone for setting the auto talk feature.

The integrated microphone 2 enables you to talk without having to take your mobile phone out of your pocket.

Notes

During a phone call, all keys of the MP3 player are not assigned a function.

A short beep indicates that an SMS has been received. Transmission of an SMS and WAP receipt is signalled in the same way.

Please note that the phone's standby time is reduced when using the MP3 player (the reduction corresponds to that of phone calls).

While the MP3 player is connected to the PC via the USB cable, the keys of the MP3 player are not assigned a function.

The MultimediaCard™ can also be used to transport data other than MP3 music files.

Please visit our online shop on the Internet:
www.siemens.com/mobileproducts

Getting Started

Safety precautions

- Mobile phones must be completely switched off at all times in an aircraft.
- When using the phone while participating in road traffic, always keep one ear free.
- Do not use the MP3 player when the temperature is below minus 5° Celsius or above plus 50° Celsius.
- Protect the MP3 player from rain and moisture, dust and dirt.
- The MultimediaCard™ can be removed. Caution! Small infants may swallow it.


Technical note

The mobile phones C35, M35 and S35 require software version 18 or later to use the MP3 player. If you are using an earlier software version you must first detach your mobile phone from the MP3 player, then switch it off and on again, to be able to use it.

If in doubt check the version by entering the following key code on the mobile phone:
* # 0 6 # then press the left soft key.

For a free software update please call our service line. The phone numbers can be found at the end of this User Guide or in the Internet under:

<http://www.siemens.com/cd.service>

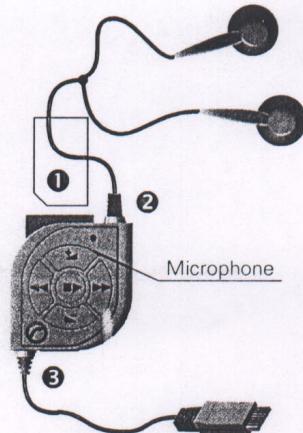

- Insert the MultimediaCard™ 1 into the slot at the top of the MP3 player as shown in the figure above (make sure the angled corner is in the correct position).
- Plug the stereo headset 2 into the MP3 player.
- Plug the cable 3 into the mobile phone.

A microphone for making calls is integrated in the MP3 player. For good voice quality, make sure that it is near your mouth.

You can use the clip on the back of the MP3 player to fasten it to your shirt or suit pocket, for example.

Copying MP3 files to the MultimediaCard™

You can copy your own MP3 music files from a PC to the MultimediaCard™ of your MP3 player.

Please observe all copyright restrictions.



Installing the drivers

Windows® 2000

No special driver installation is required for this operating system. Connect the MP3 player USB to your PC as described below in section "Connecting to the PC".

Windows® 98 / Windows® ME

For the installation the MP3 player USB must **not** be plugged into the PC!

Insert the CD provided into the CD drive of your PC.

A setup program that can be used to install the driver is found on the CD.

Detailed instructions for the installation are also found on the CD.

You can also download the current driver version from the Internet:
www.siemens.com/mp3player

If the driver has been installed correctly, you are informed that a new unit has been found.

The next steps are executed automatically and the MP3 player USB appears as an additional drive in your Windows Explorer™.

Copying an MP3 melody

A melody in MP3 format has been provided on the CD as an example. Copy this file or other MP3 music files to the main folder of the "MultimediaCard™ drive" or to the "MP3" folder using, for example, the Windows® Explorer.

Copying 32 MB will take approx. 5 minutes. You can also use the Windows® Explorer to delete files from the MultimediaCard™.

During the copy process the mobile phone should be unplugged from the MP3 player USB. Otherwise conflicts between the PC and mobile phone may occur.

Connecting to the PC

Use the cable provided to plug the MP3 player USB into a USB port on your PC.

OSM – MP3 Player Specification

- * 7 Equalizer Modes
Normal, Pop, Jazz, Rock, Classic, Base, Mono
- * 4 Program modes
Normal, Continou, Shuffle, Shuffle-Continue
- * Hands Free Function with Mobile Phone
- * Do not need the driver for Windows Me and Windows 2000
Include the driver for Windows 98

Memory	MultiMedia Card 16MB / 32MB / 64MB / 128MB
User Interface	USB
Transmission Rate	960Kbps
S/N Ratio	90dB
Output Power	10mW
Putput Frequency	20Hz ~ 20Khz
Dimension	45 x 44 x 14
Weight	43g(MP3 player) + 38g(USB Cable) + 18g(Earphone)
Power Supply	From Mobile Phone