



Install the main PCB by sliding into the HF PCB connector and then lowering into place. Make sure the two PCB notches align with the ribs in the bottom plastic.

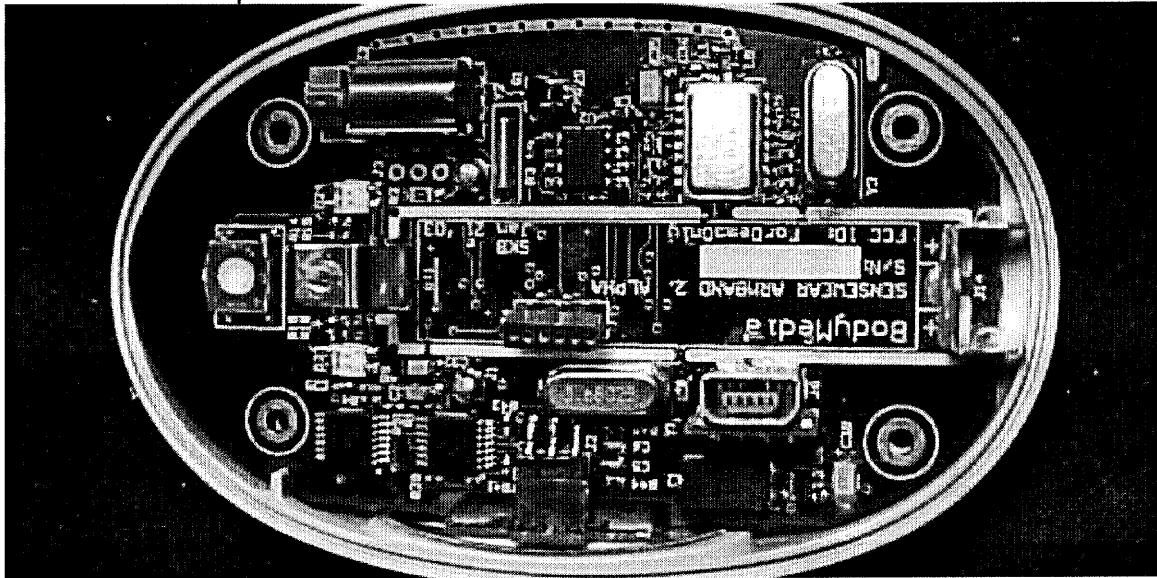

Place the battery well on top of the PCB, inserting the two pegs into holes on the board.

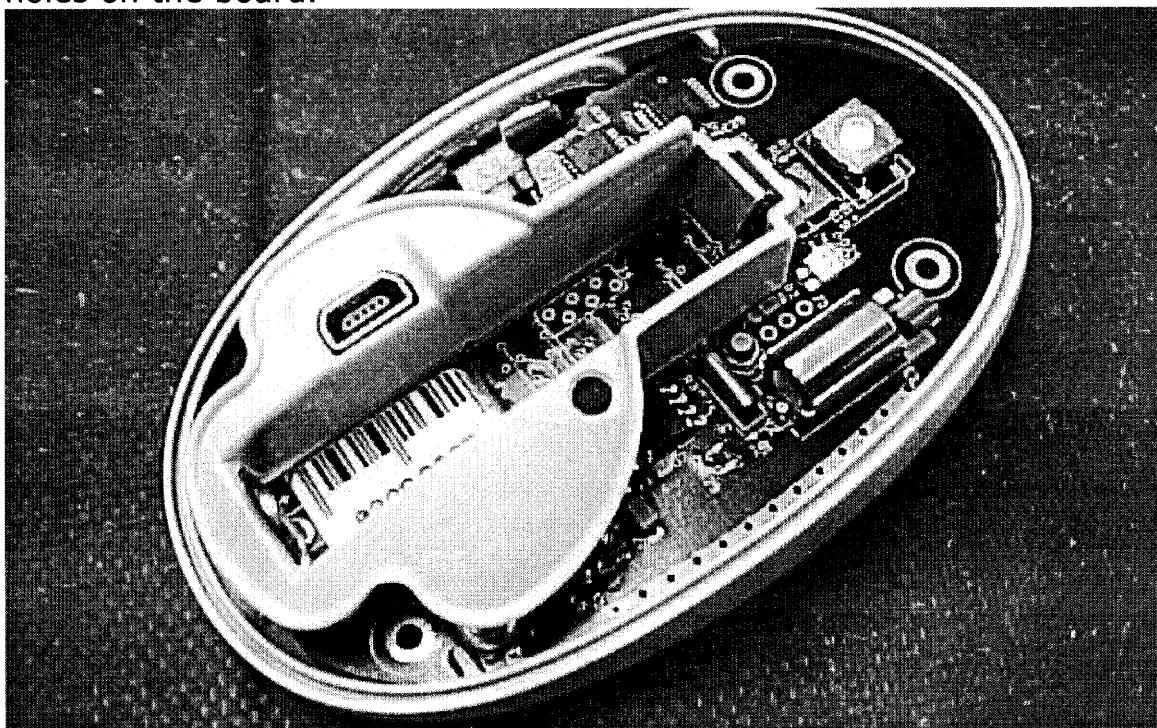

V  
e  
r  
s  
i  
o  
n  
0  
3