

Dear sir:

1. The Test Setup photos have been submitted, file name is TestSetup.PDF.
2. The EUT(Tx) is not include USB interface, just EUT(Rx) must be connect the USB cable into the USB port of PC. About this, please see the P. 4 of User's manual.

Thanks.

Jacob Lin

Training Research Co., Ltd.

Chapter 2 Installation

2.1 Install the Grand RF Grabber USB

Insert the supplied driver disk to your Floppy device.

1. Connect the supplied power adapter (DC 6V, 800mA) to both Transmitter & Receiver & then set up the channel (4 selectable channels).
2. Connect the USB cable of Receiver into the USB port of your PC,

