

TEN3 Manual

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
 - A、 The battery power ICONS shows have no power
 - B、 The system automatically shut off, startup after power off soon
 - C、 Operation buttons no response
- When the device in the format or ongoing upload and download file, please do n't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、 Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street, USB be used for data transmission and charging

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】 All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

TEN3 Manual

1. appearance



2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】 : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA.. Output: DC5.0~5.5V/2A), USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

【Remark】 : 1. If you long time don't to use this Tablet, ,in order to avoid power consumption caused damage,pls charge/play the battery once a month.

2 、 After low battery shut down,connect USB,device will remind low battery,charging,need to wait some time until the battery is enough power to enter into main menu.


3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption,it may cause longer charging time.

TEN3 Manual

2.2 Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

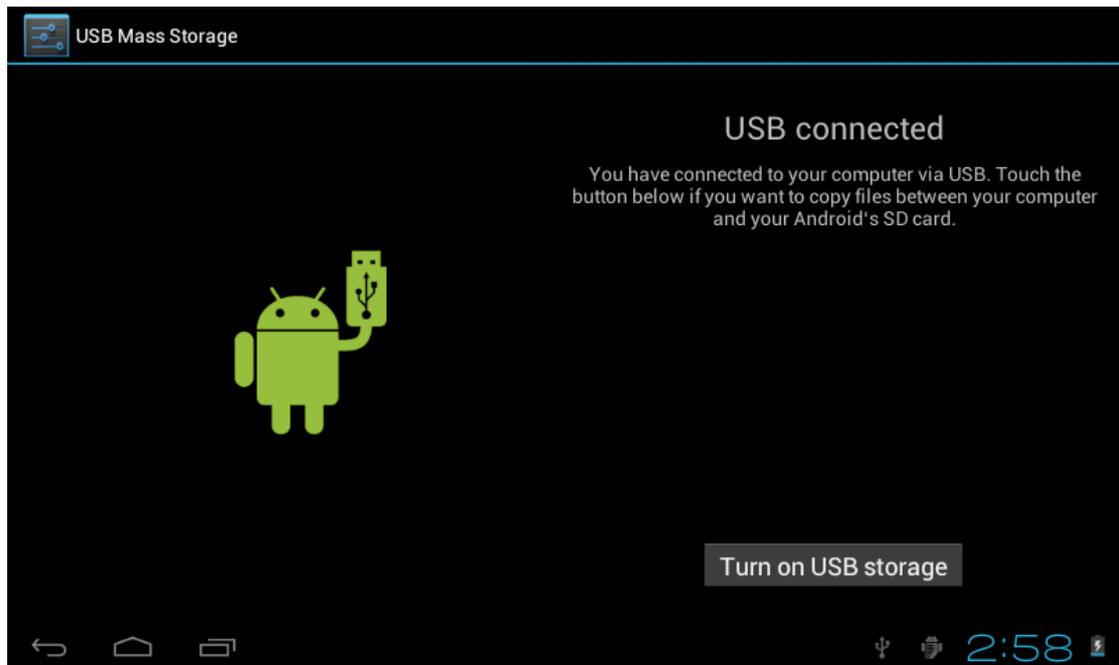


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

3. Equipment operation interface

3.1 Main interface describe


After startup will enter the main interface

TEN3 Manual

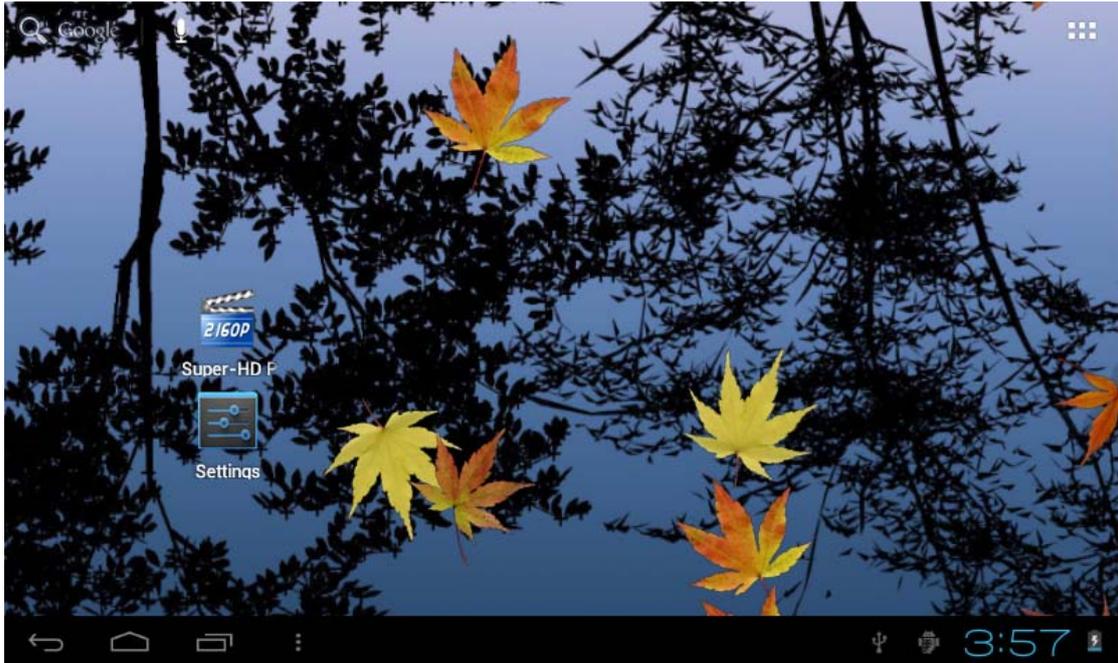

In the main interface, you can :


Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

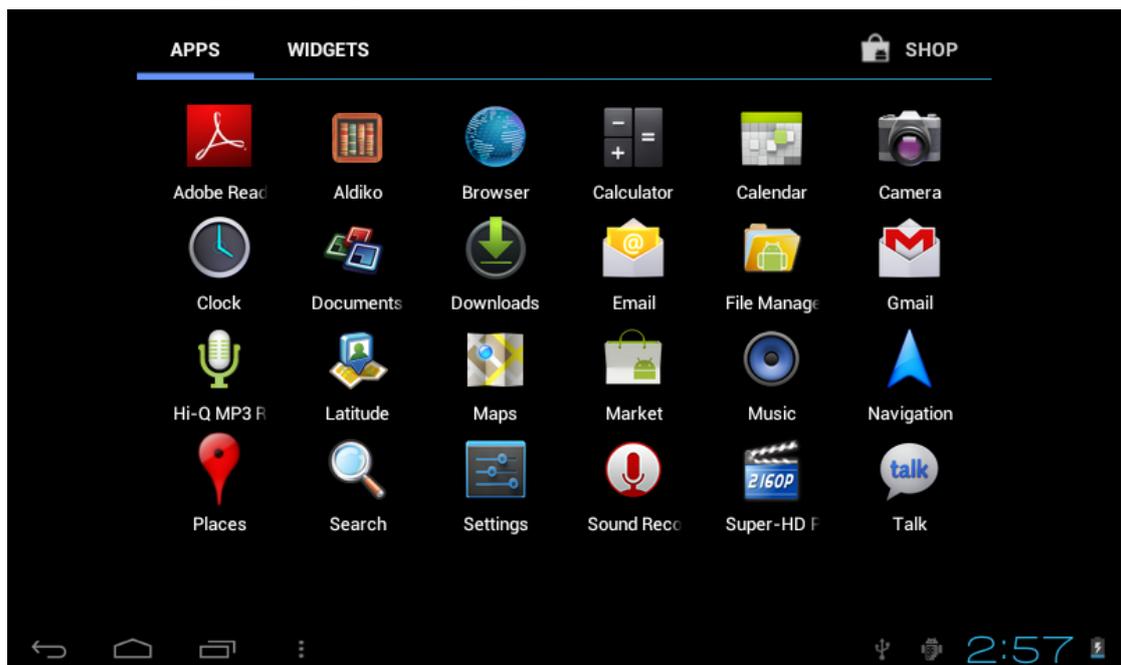

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box "Add you Home screen" as shown below:

TEN3 Manual

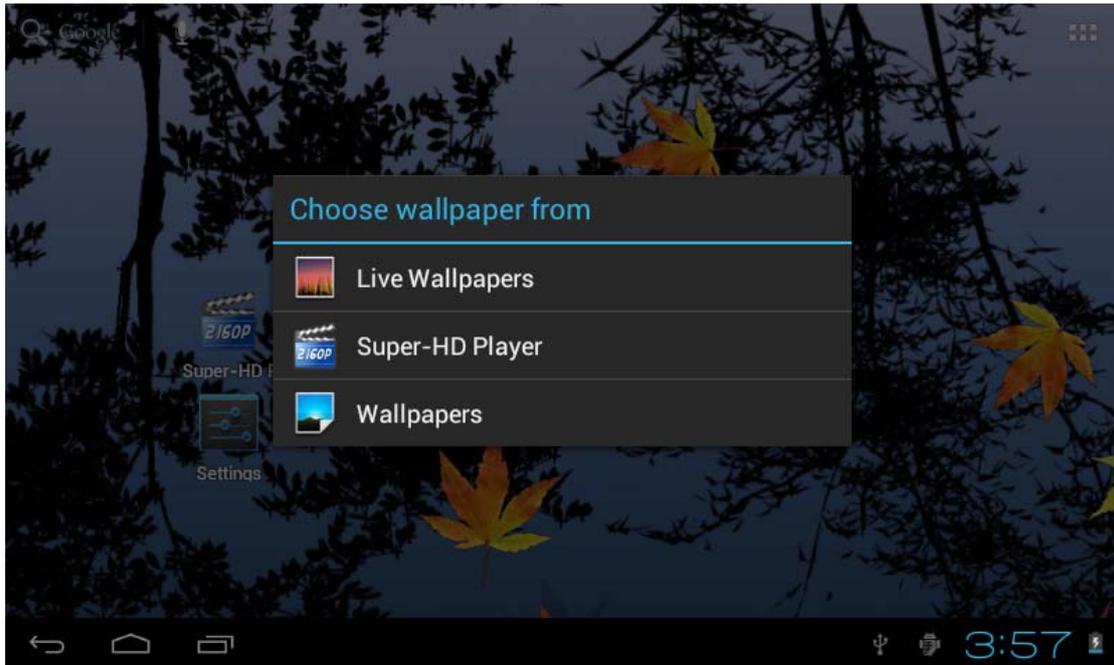

3.2 status bar describe



- The status bar above of the screen

The lower left corner is the return key, a key to return to the soft keys, menu key keyboard



The lower right corner display the battery, battery charge icons, current time, T-Flash card, USB connection status and WIFI WIFI signal icon .

3.3 Use touch panel

Device equipped with a 7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key .


【Attention】 The main screen soft key  functions as the machine back key .

In different applications, by tapping the back soft key , you can Return to the previous menu interface.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

【Remark】 : The main screen soft key  functions as the machine manu .

TEN3 Manual

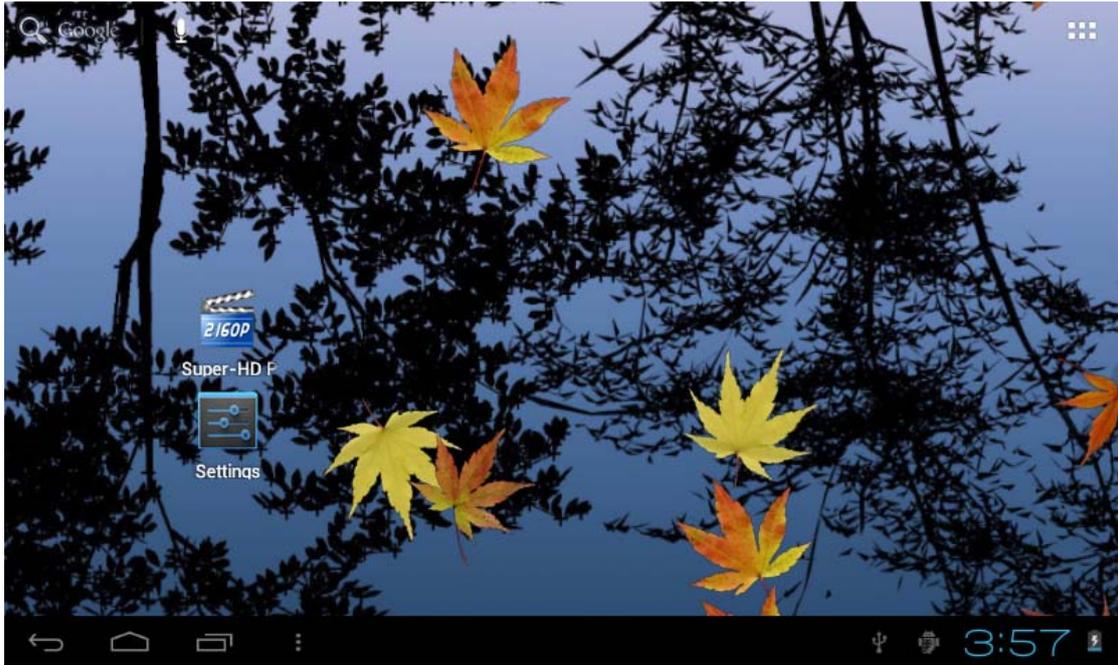


In the main interface, you can touch the icon to open the APPs


In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment basic set


Setting: Click setting icons , enter setting interface

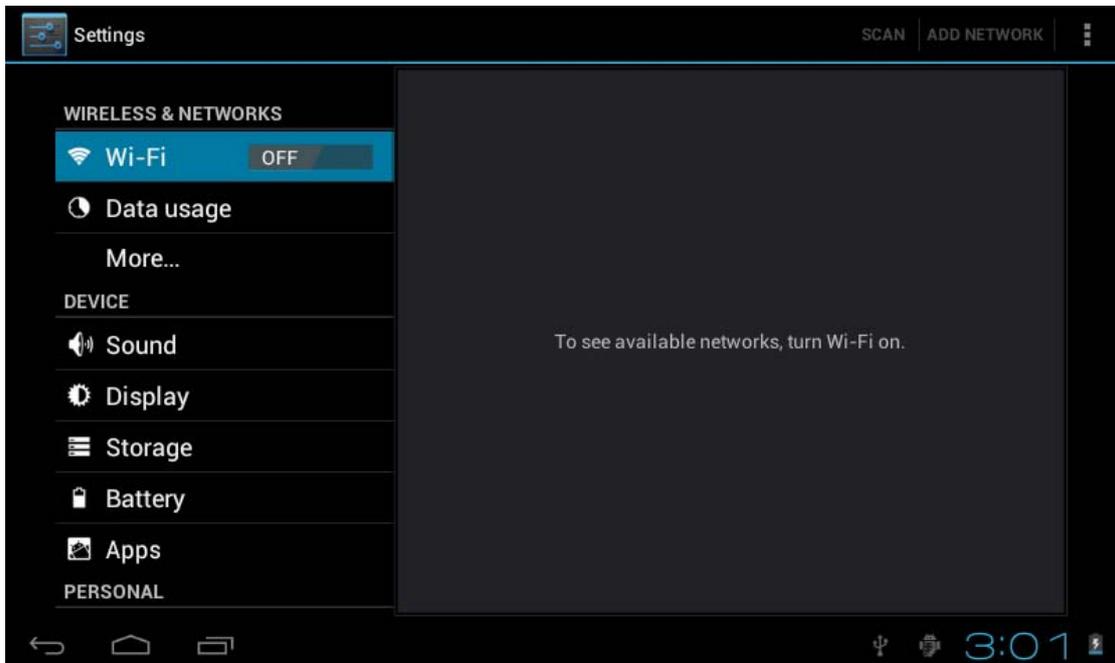

TEN3 Manual

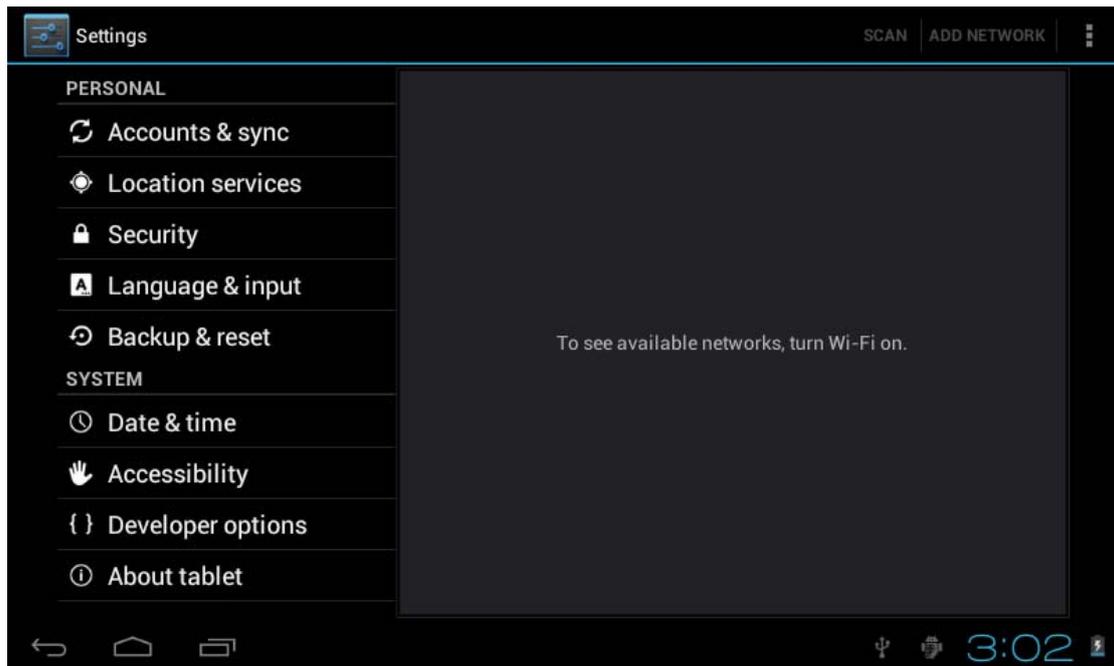


4.1 Silent mode, Volume, Touch tone, Audible selection, Screen lock sounds,

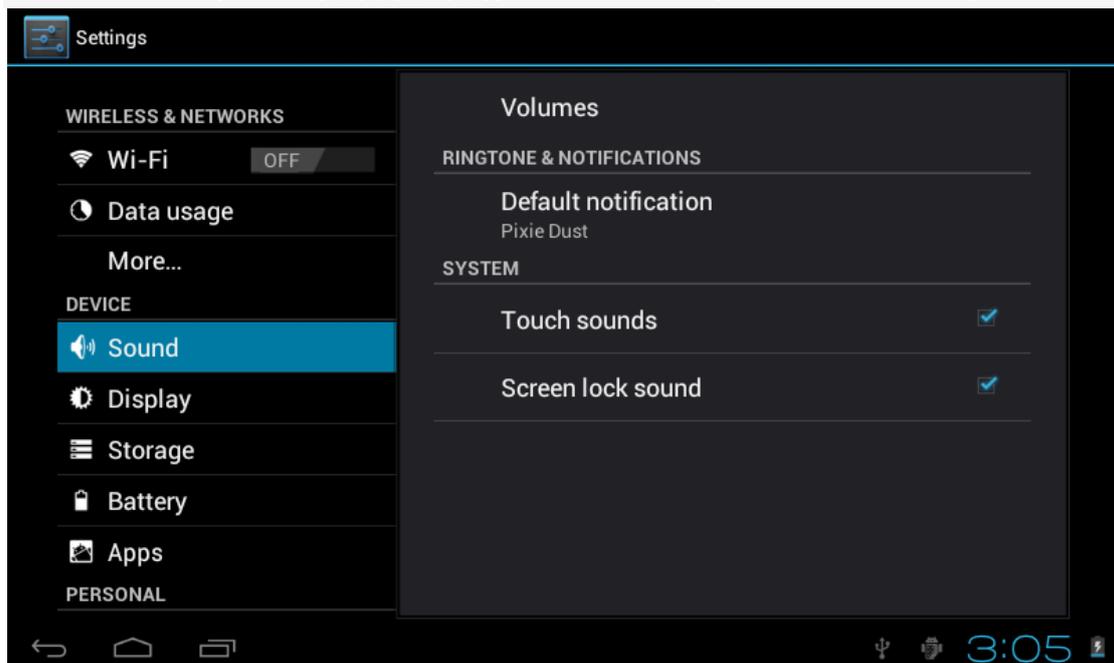

4.2 Display

Display settings you can set brightness, wallpaper, automatically rotate the screen, font size.

TEN3 Manual

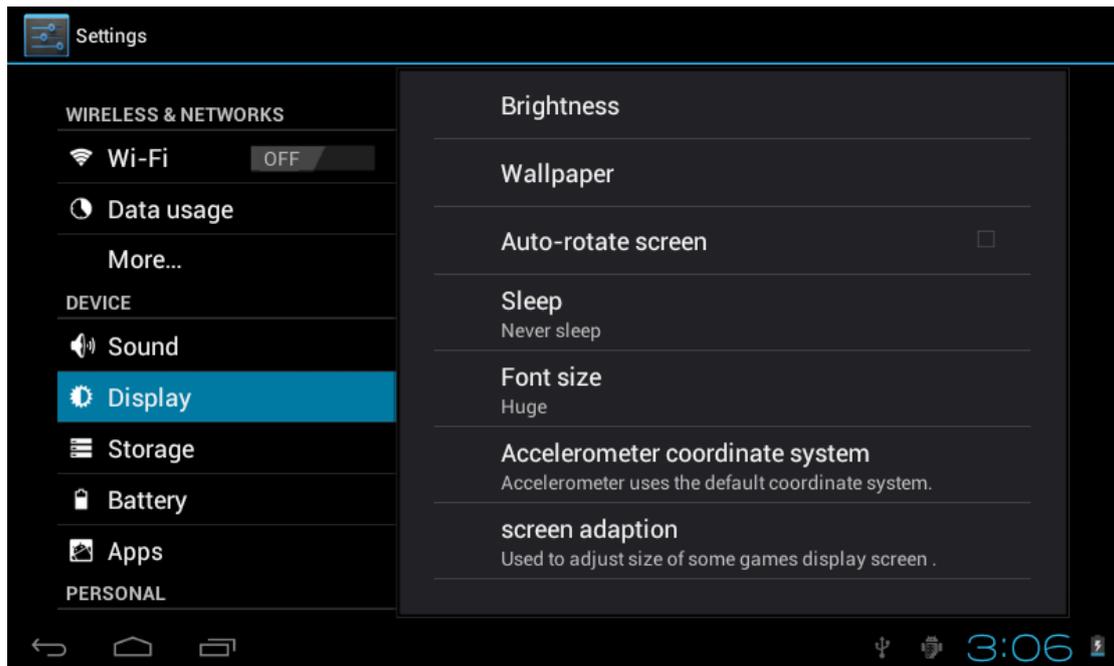

4.3 3G USB Dongle

Your Device can connect to 3G networks. To connect

1. First turn off the WiFi
2. Touch **settings**, touch **wireless & more & Mobile networks**
3. To Data enabled and Data roaming checked. .
4. SIM card into the 3G dongle, then use OTG cable to the USB interface of the MID
5. Such as the lower-right corner of the 3G icon you can use the 3G internet




4.4 Bluetooth

Bluetooth is a short distance (typically 10m) wireless communication technology to support data exchange between Bluetooth devices. The device has Bluetooth, you can communicate with other Bluetooth headsets and Bluetooth-enabled devices.


TEN3 Manual

1. Touch **settings**, touch Bluetooth to on.
2. The system will automatically scan for available Bluetooth devices.

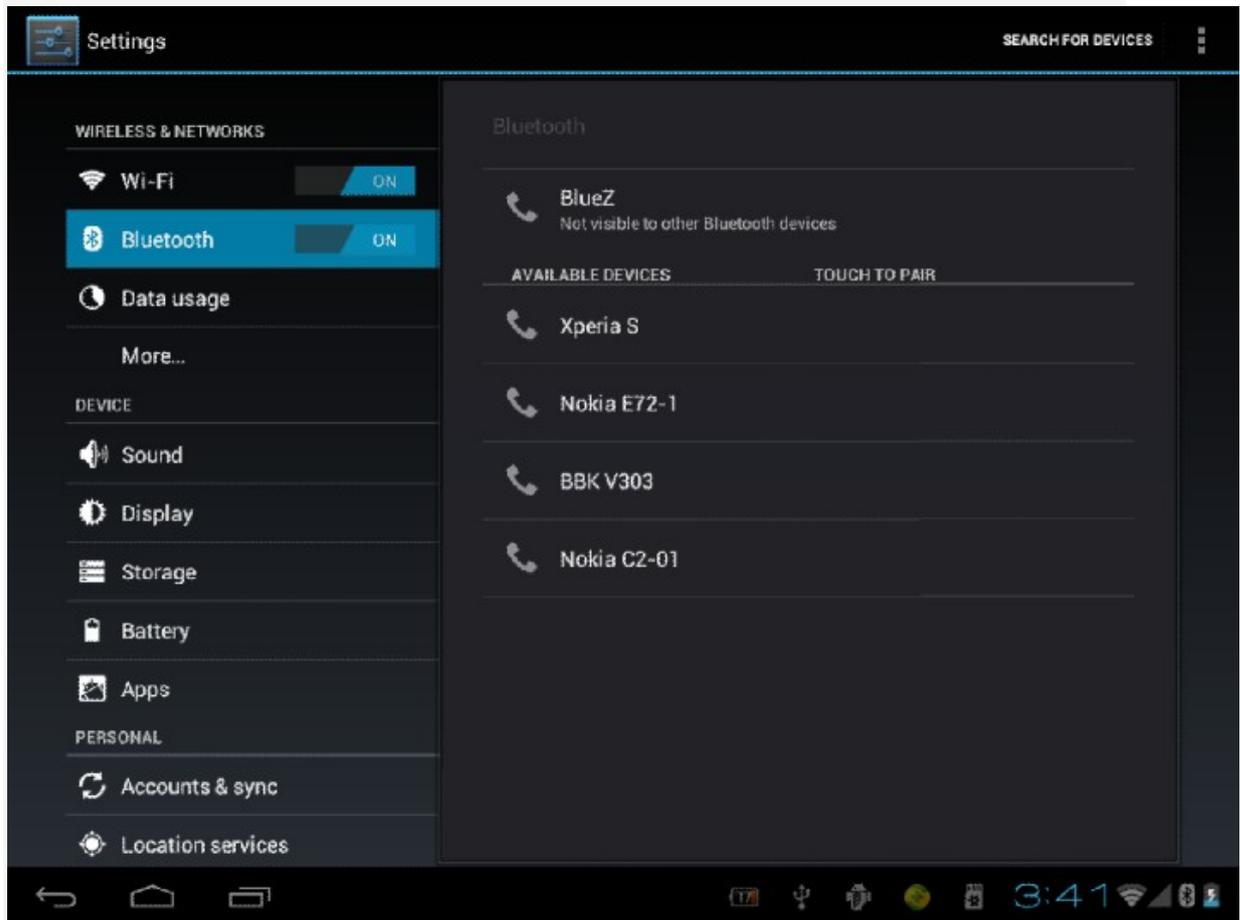

3. Select the paired Bluetooth device, enter the pairing PIN code, click Finish and confirm.

TEN3 Manual

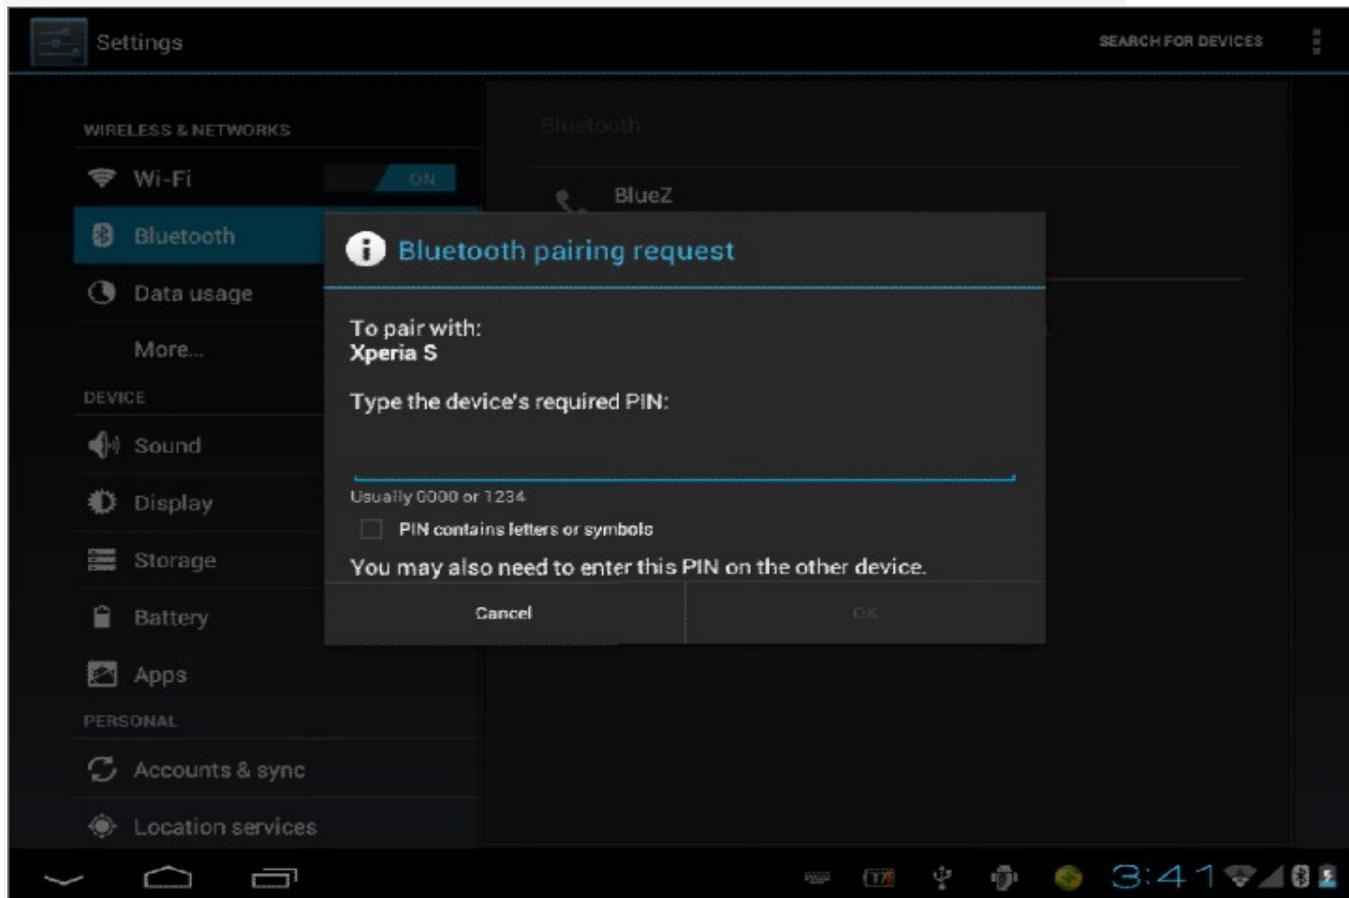


4. Enter the same PIN code in the paired devices, click OK.

5 After a successful connection need to be transmitted in the file manager, select the file, press and pop-up menu, click share, select the paired device name, click to receive the matching device, may be relative to send files.

4.5 Application

Manage applications

TEN3 Manual

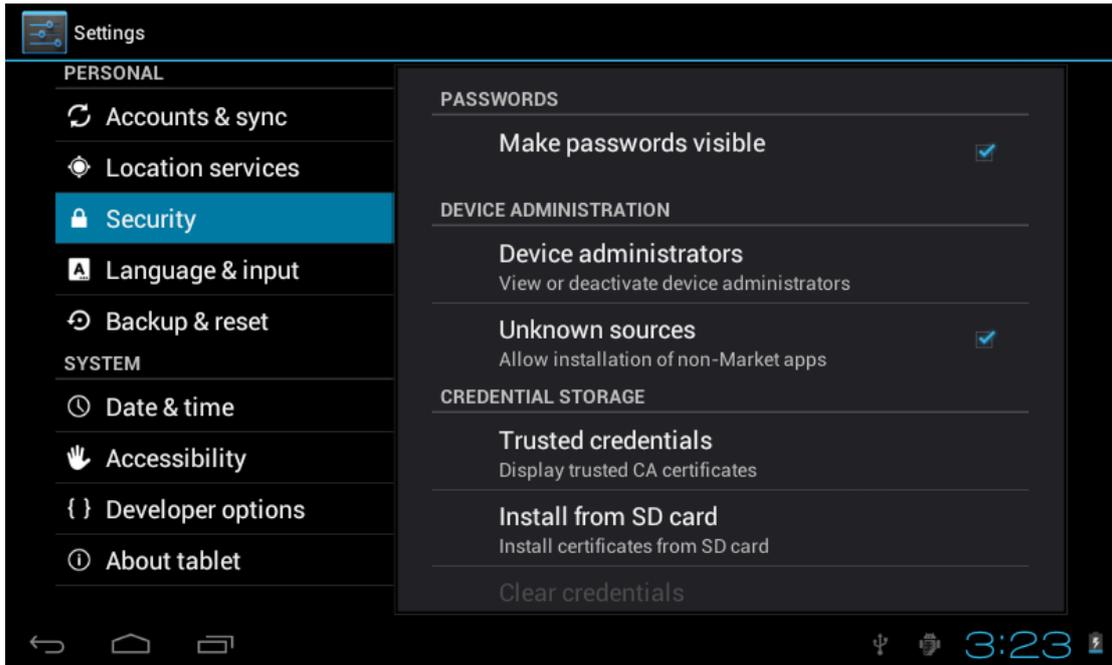


Unknown sources: Click “Unknown Sources”, then click “OK”
Manage application: installed and uninstall Application

【Remark】 : when you Firmware Upgrade, please close the USB connect

How to uninstall?


1. enter  “setting”>”Application”>”Manage application” And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can delete the application

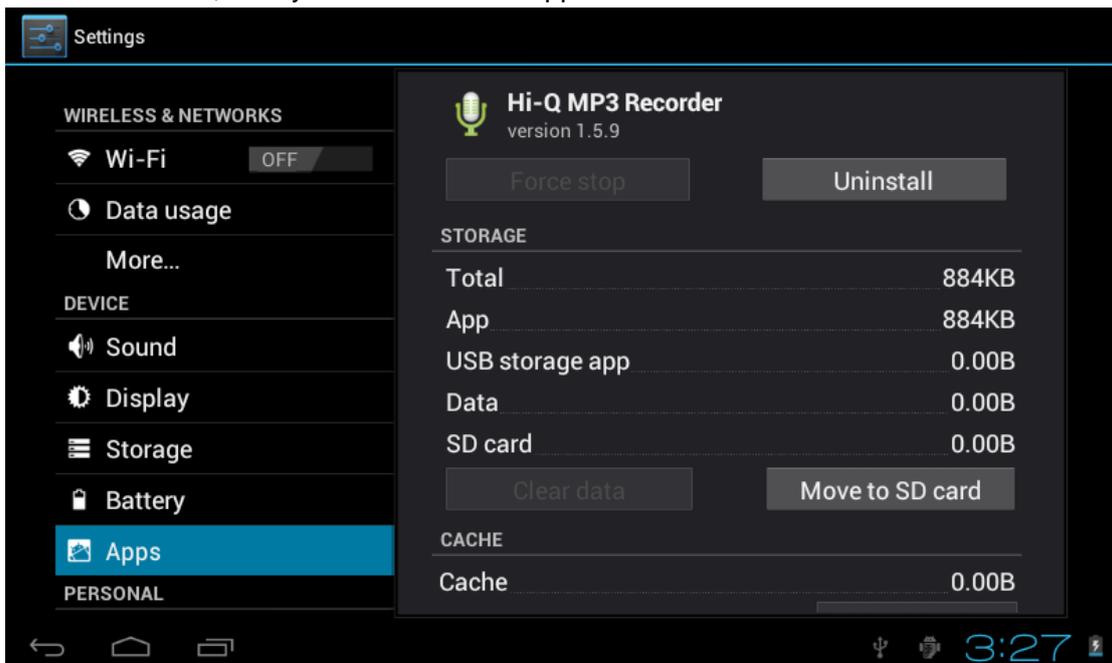

4.6Privacy


TEN3 Manual

Factory data reset

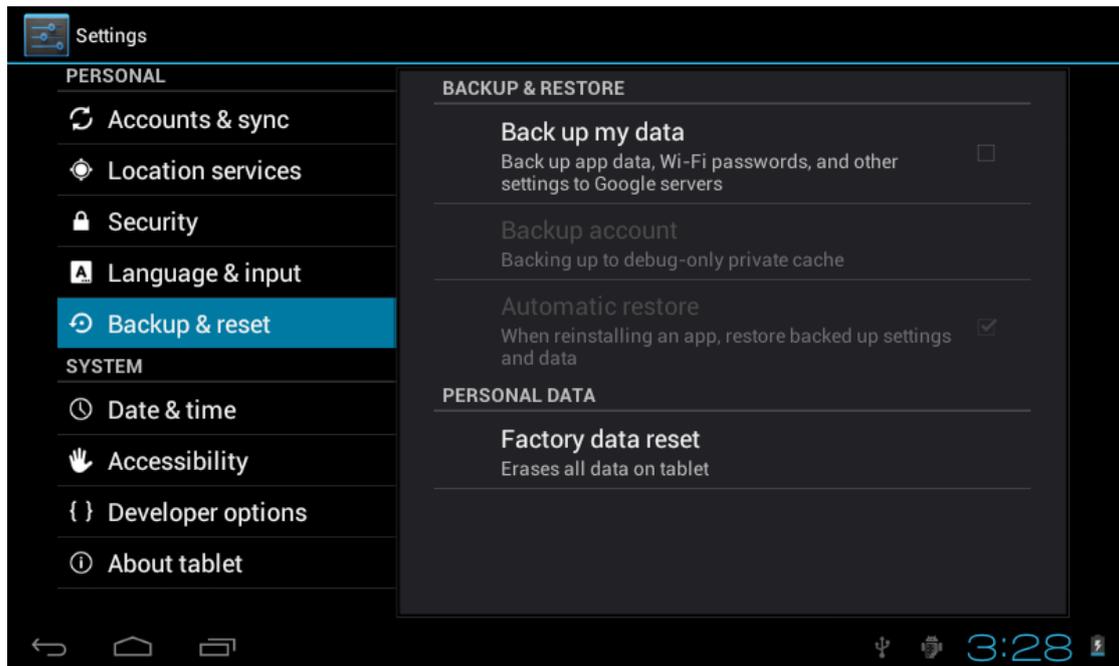

Storage

Insert TF card, view of the available storage space

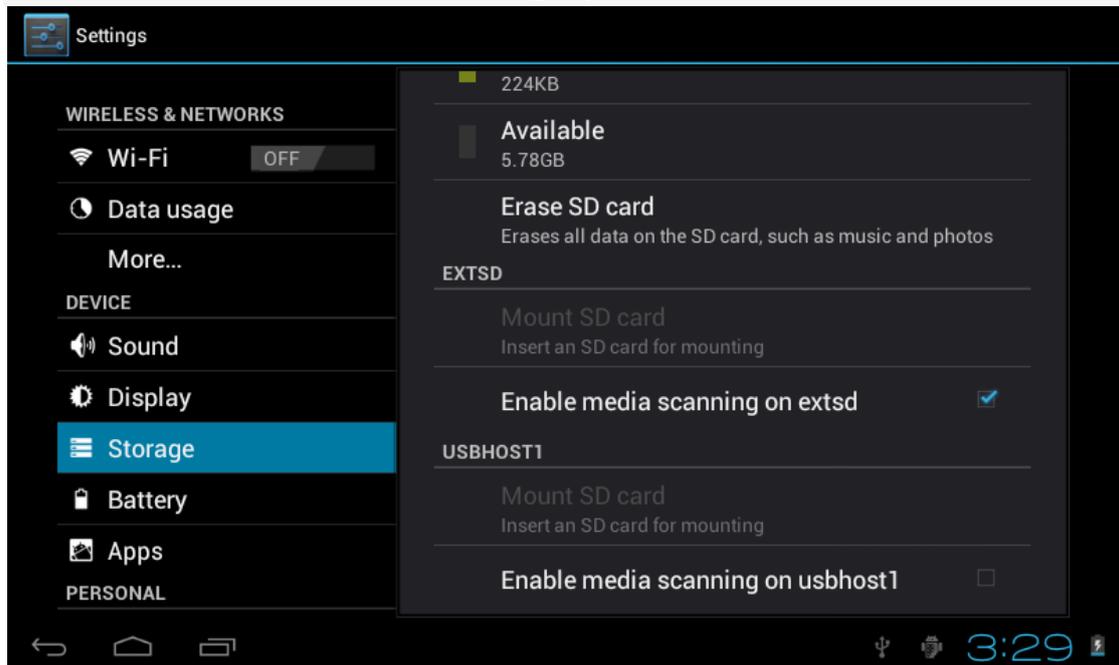

【Remark】 : pls touch option"delete SD card", so that can safety to romeve SD card

TEN3 Manual

4.7. Language & keyboard

Setting: (Language), text input and automatic error correction options;



Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now menu interface just support 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press

Auto-capitalisation


Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word

4.8. Date & time setting

Set date, set time, Select time zone and select date format


TEN3 Manual

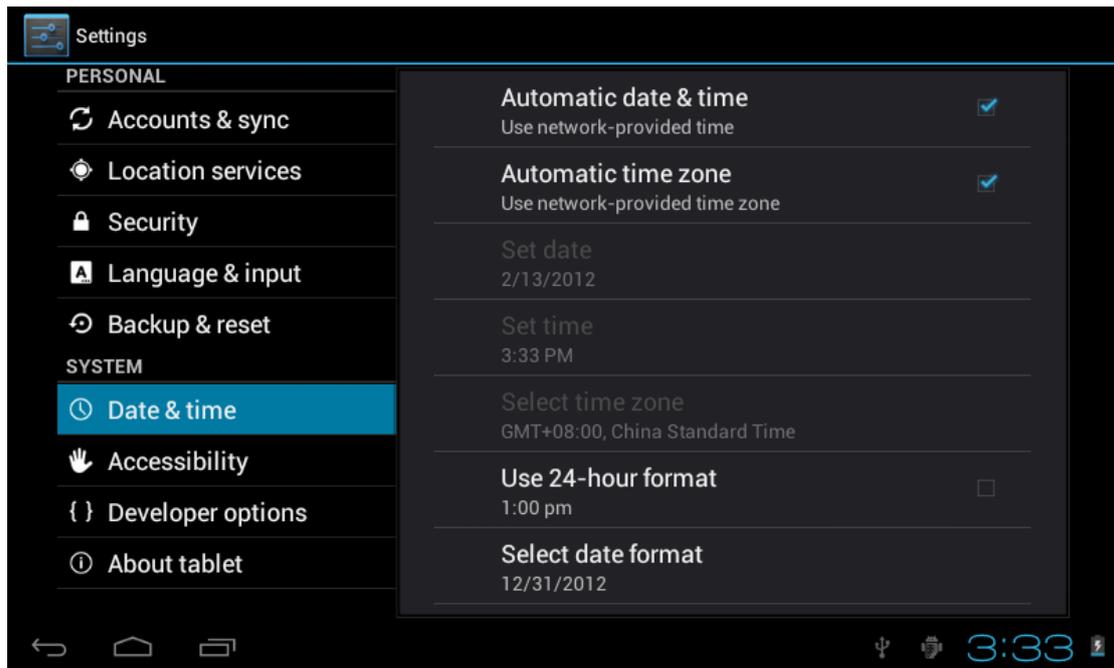

4.9 USB Mode Select

Choose USB work pattern: OTG/HOST/SLAVE.....

5.0 About device

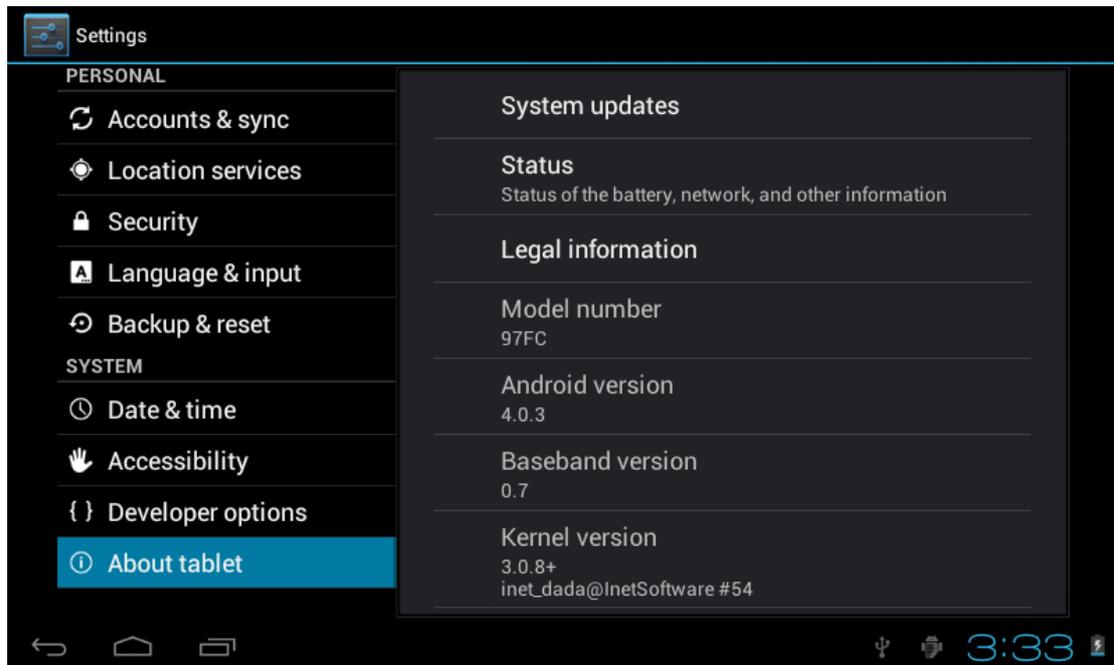

6.Apps Install and manage

6.1 Application

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Application icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

TEN3 Manual

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card, downloaded 3rd app may not install properly on device.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

7.0 Problem solution

Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contact with the contact

After startup the screen or the opening picture has been appear, the the device appear shutdown

1. Power is not enough, please charge

Headset can't hear the voice

1. Pls check the volume whether set to 0
2. Check the music file damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

Can copy file or play music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

TEN3 Manual

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

ii • Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.