



• Service Center Phone Number •
080-777-1550
 • Information for Monitor •
02-3462-1550



TM150^{AV}

Creating the affluent cyber world
 construction the netropolis and web community



If you need some information on using our monitor
 or on any new product, contact our service center.
 Mon-Fri: 08:30-19:00, Sat: 09:30-14:00 (excluding sundays and holidays)
 Never fail to read 'Safety Precautions' before using and use your monitor correctly!

TOPHEAD

8 Dong Pharmaceuticals Building 2F 50 Yungja-dong Seochon-gu, Seoul
 Tel: 02-3462-1550 Fax: 02-3462-1560

TH150AV is the registered
trademark of Tophead Co.



Note for User:

This equipment has been tested and found to comply with the limits for a electromagnetic compatibility, and can be used in all area, including a residential installation. The equipment with electromagnetic compatibility in residential installation means it can be used in both the residential area and the commercial area.

Service Center Representative Phone Number (Domestic)
085-777-1550 (Requires no D.O.D number)
Global Service: <http://www.tophead.com>
Contact us if you need service due to malfunctions of the product.
We will always provide kind and accurate service as soon as possible.

Il Dong Pharmaceutical Building 2F
50 Yangja-dong
Seochon-gu, Seoul
Tel: 02-3462-1550
Fax: 02-3462-1560
Internet: <http://www.tophead.com>

Information to user : PART 15, PARAGRAPH
15.21 AND 15.105(b)

Changes or modifications not expressly
approved by the party responsible for
compliance could void the user's authority to
operate the equipment

FCC Notice

NOTE : This equipment has been tested and
found to comply with the limits for a Class B
digital device, pursuant to Part 15 of the FCC
Rules. These limits are designed to provide
reasonable protection against harmful
interference in a residential installation. This
equipment generates, uses and can radiate radio
frequency energy and, if not installed and used
in accordance with the instructions, may cause
harmful interference to radio communications.
However, there is no guarantee that interference
will not occur in a particular installation. If this
equipment does cause harmful interference to
radio or television reception, which can be

determined by turning the equipment off and on,
the user is encouraged to try to correct the
interference by one or more of the following
measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the
equipment and receiver
- Connect the equipment into an outlet on a
circuit different from that to which the
receiver is connected.
- Consult the dealer or an experienced
radio/TV technician for help.

This device complies with Part 15 of the FCC
Rules. Operation is subject to the following two
conditions: (1) this device may not cause harmful
interference, and (2) this device must accept any
interference received, including interference that
may cause undesired operation.

{ TM150AV }

TOPHEAD MONITOR



User's Guide


Before Using	Correct Posture of Monitor User	2
	Checking Package Contents	2
	Features	3
	Safety Precautions	3
Basic Description	Installation and Connection	6
	(1) To connect with computers	6
	(2) Names and Description of Each part	7
	(3) Name and functional description of buttons in OSD Function Knob	8
	Description and Usage of Remocon	9
	(1) Name of remocon buttons	9
	(2) How to use the remocon	10
	TM150AV - 15" OSD MENU (Key or Remocon)	13
	(1) PC Mode	13
	(2) TV/Video Mode	20
Other Information	TM150AV - 6.4" OSD MENU (Key or Remocon)	22
	(1) Description of Menu	22
	Other Information	24
Installing Drivers	(1) Checkpoints when reporting malfunctions	24
	(2) Specification of Product	25
	Installing drivers for the monitor	25

Correct Posture of Monitor User

- Set the monitor in the convenient place and adjust the tilt stand upward or downward to any angle you want.
 - As your eyes get tired if using the monitor for a long time, take enough rest (10 minutes per hour) while working with the monitor.
 - Referring the following figure, sit comfortably in front of the monitor.
- 
- Your eyes should look a little lower point than the straight forward.
 - Relax your shoulder and arm, and lean your back against the chair.
 - Keep your arm at the level and put your hands on the keyboard gently.
 - Set the position of the screen not to reflect any light.
 - Adjust the tilt stand upward or downward to the angle you want.
 - Keep some room below the worktable.
 - Put your feet even on the floor.

Checking Package Contents

After opening the box, check the package contents that are supplied with the monitor, and if anything is missing, contact to the representative where you bought the product.

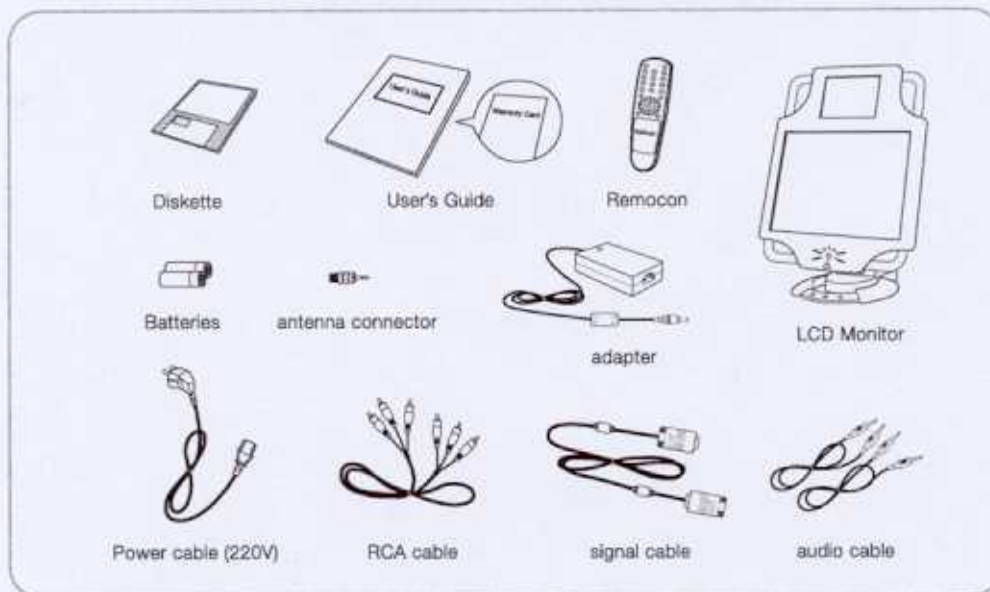

■ The design and components of the above product may be changed without any prior notification to improve the performance of the product.

Features

▪ Employs one-body dual display first in the world

- This is a dual display monitor in which you can select PC, TV, and Video signals in the main screen and, TV and Video signals in the sub-screen at the same time through one monitor.
- It can output up to three display signals by using the PIP function. For example, you can see TV in the sub-screen and PC+TV or PC+Video in the main screen. In addition, you can select audio signals you want among display signals.
- The customized icon feature enables you use computers more easily and conveniently.

▪ Concise and graceful design

- On the whole, it provides elegant design and screen with smooth curve.

▪ Ergonomic monitor

- You can adjust the angle of inclination with the tilt stand as you want.

▪ TV Display

- You can see TV with TV tuner while using PC.

Safety Precautions

- Be sure to observe 'safety precautions' that help users use the product safely and correctly to lengthen the life of the product and to prevent safety accident.
- Precautions are divided into 'Warnings' and 'Cautions', and the meanings of 'Warnings' and 'Cautions' are as follows:

CAUTIONS

If you don't observe the instruction, it is likely to incur injuries or damages to the product that are not serious.



WARNING

If you don't observe the instruction, it is likely to incur serious injuries.



• **Note:** If the malfunction of the product is incurred due to the consumer's negligence, you should be charged for the service even if it is under the warranty.

⚠ Cautions

After reading this user's guide, keep the guide near the monitor, so that you can refer it when you need it at any time.

- Place the monitor at a certain distance (above 10cm) from the wall, so that it may be well-ventilated.

It may cause the damage of the product due to increase of the internal temperature.




- Be sure to hold the plug, not the cord, when disconnecting the monitor from an electric socket.

If you disconnect it by pulling the cord, some of core wire in the cord may be cut. In such case, it may cause heating or fire.



- Be sure that the ventilation opening is not blocked by tablecloth or curtains.

It may cause the damage of the product due to increase of the internal temperature.

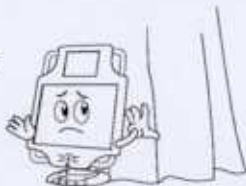


- Do not set the monitor in such places where the shelf is vibrating or tilted.

If it is dropped, the product may be damaged or the operator may be injured.



- Do not set the monitor in such places as bookshelves where it is not well-ventilated.

It may cause the damage of the product due to increase of the internal temperature.

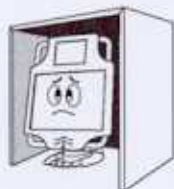

- When cleaning the surface of LCD panel, unplug the power cord and wipe with soft cloth. Do not wipe it with damp cloth and do not use detergent.

If moisture may soak into any opening on the surface, it may incur electric shock or serious accident.



⚠ Warnings

This is for safe usage of the product and prevention of dangers or loss of property. So, be sure to read and observe it carefully.

- Never dissemble or reconstruct the monitor without qualified servicemen. If you want to check, calibrate, or repair the monitor, contact our agent or service center.

It may incur fire or electric shock.



- Do not place such containers as flower vase, flowerpot, cups, or cosmetics, which is filled with chemicals or water.

It may soak into the product and damage the internal circuit.



Never insert anything metallic such as coins, hairpins, or ironware, and inflammables such as matches into the monitor openings.

Doing so may create the danger of electric shock or fire.



Avoid exposing your monitor to direct sunlight or another heat source such as stove.

fires may occur.



Plug the power cord firmly so that even the end part of the plug may not be shaken.

Unstable connection may cause fire.



If smoke or strange odor is present, immediately stop using the monitor. In such case, switch the monitor off and call service center.

If you continue using the monitor, fire or electric shock may occur.



Do not sprinkle water or detergent directly to any part of the body when cleaning the monitor.

It may cause electric shock or fire.




Avoid to wire the power cord near any heating appliance.

Doing so may melt the clothing of the cord and cause fire or electric shock.



When you move the monitor, never fail to switch the power off and disconnect the power cord. In addition, check that all connectors are disconnected from any external equipment, and then move the monitor.

If the cord is damaged, it may cause fire or electric shock.

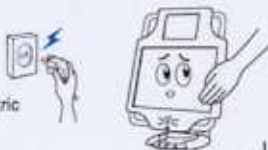

Unplug the monitor when it is going to be left unused for an extended period of time or you are going to go out.

If you left the monitor plugged into the power socket, it may cause electric shock and fire due to heating, ignition, or deterioration of insulation.



Never touch the power plug with wet hands.

It may cause electric shock.



Never use your monitor if the power cord has been damaged or is plugged loosely into the power socket.


It may cause electric shock or fire.



Installation and Connection

(1) To connect with computers

Make sure the computer, the monitor, and peripherals are turned off, and then connect the signal cable and the power cord as shown below.

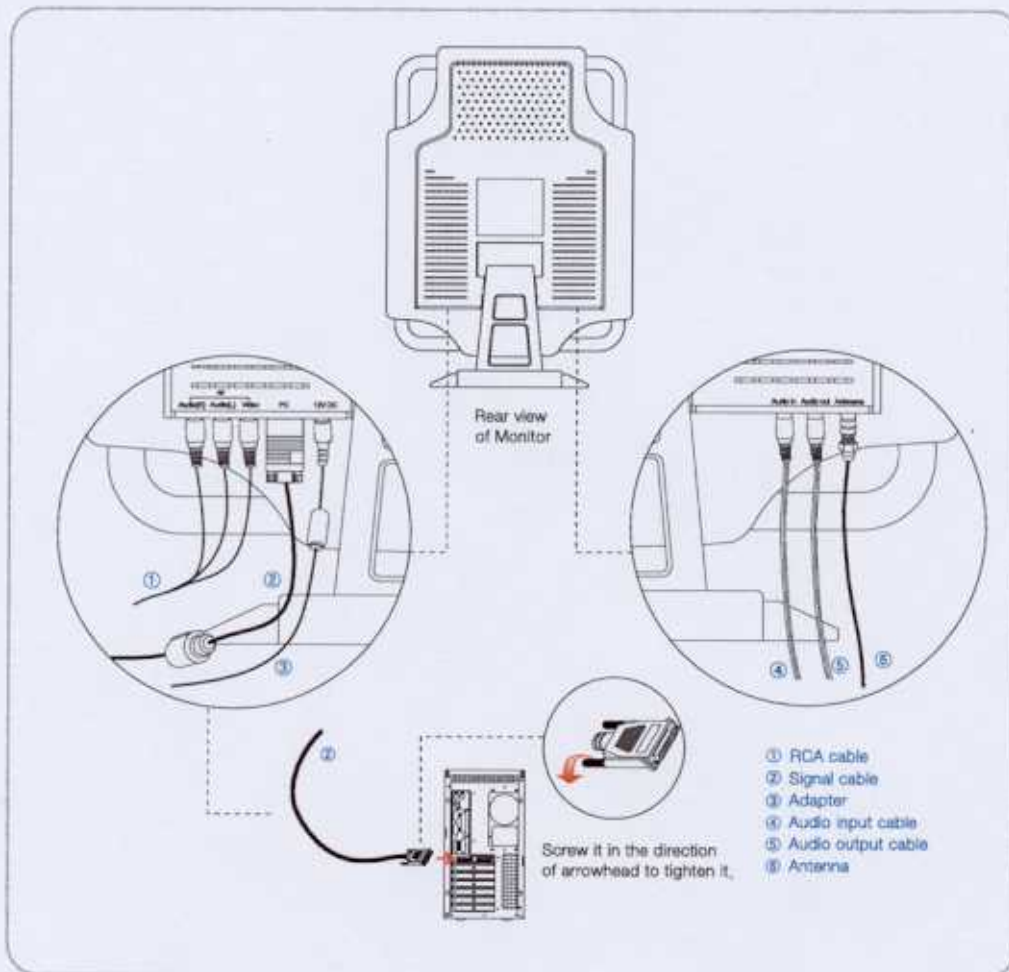


If the audio-out port of your PC sound card supports both speaker-out and line out, set it to line out by using the jumper of the card or any other program. (Refer to your sound card manual)
(If the audio-out port of your PC sound card supports only speaker-out, down the volume of PC sound.)

※ Note

- Line out port: Port connecting to the speaker in which an amp is included.
- Speaker-out port: Port connecting to the speaker in which an amp is not included.
- Be sure to check the connecting port of PC sound card before connecting it.

(2) Names and Description of Each part

① Front Side


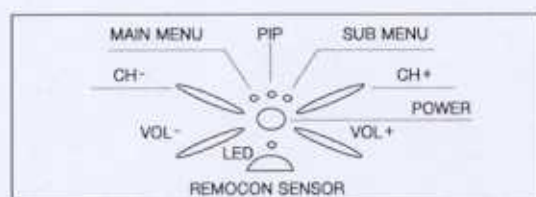


OSD(On Screen Display) Function Knob


Sub-screen
(Head screen)

Main Screen

② Rear Side

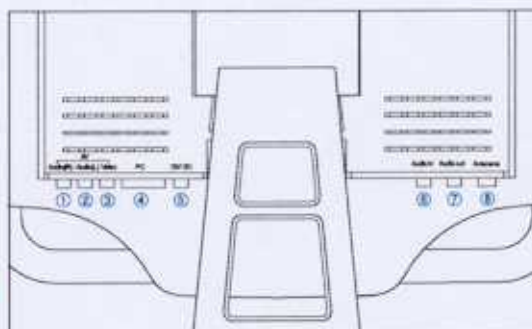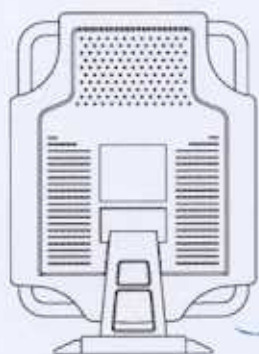

- ① ② Audio Input Port ③ Audio Input Port ④ Signal Input Cable
- ⑤ Power Port ⑥ PC Audio Input Port (connecting to PC sound card)
- ⑦ Audio Output Port (connecting to the speaker)
- ⑧ Antenna Input Port

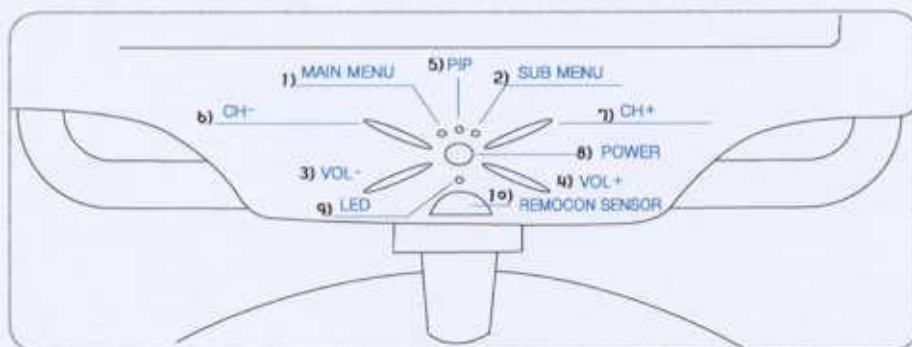(3) Name and functional description of buttons in OSD Function Knob**1) MAIN MENU (Main Screen)**

Used to open and exit OSD MENU of MAIN (15") screen
(cannot open this menu with SUB OSD functions simultaneously)

2) SUB MENU (Sub Screen)

Used to open and exit OSD MENU of SUB (6.4")
(cannot open this menu with MAIN OSD functions simultaneously)

3) VOL -

Used to down the function level of OSE MENU to the level you want (decrease the value).
In case of TV or Video, it decreases the volume.

4) VOL +

Used to up the function level of OSE MENU to the level you want (increase the value).
In case of TV or Video, it increases the volume.

5) PIP (Picture in Picture)

If the 15" screen is used for PC output, you can see TV or Video signals in one screen.

6) CH -

Used to move the icon of OSD MENU toward left and select it.
In case of TV, it downs the channel.

7) CH +

Used to move the icon of OSD MENU toward right and select it.
In case of TV, it up the channel.

8) POWER

Used to on/off the power.

9) LED


It lights in green during normal operation and in amber during abnormal operation.

10) REMOCOON SENSOR

It is the sensor screen for remote control.

Description and Usage of Remocon


(1) Name of remocon buttons

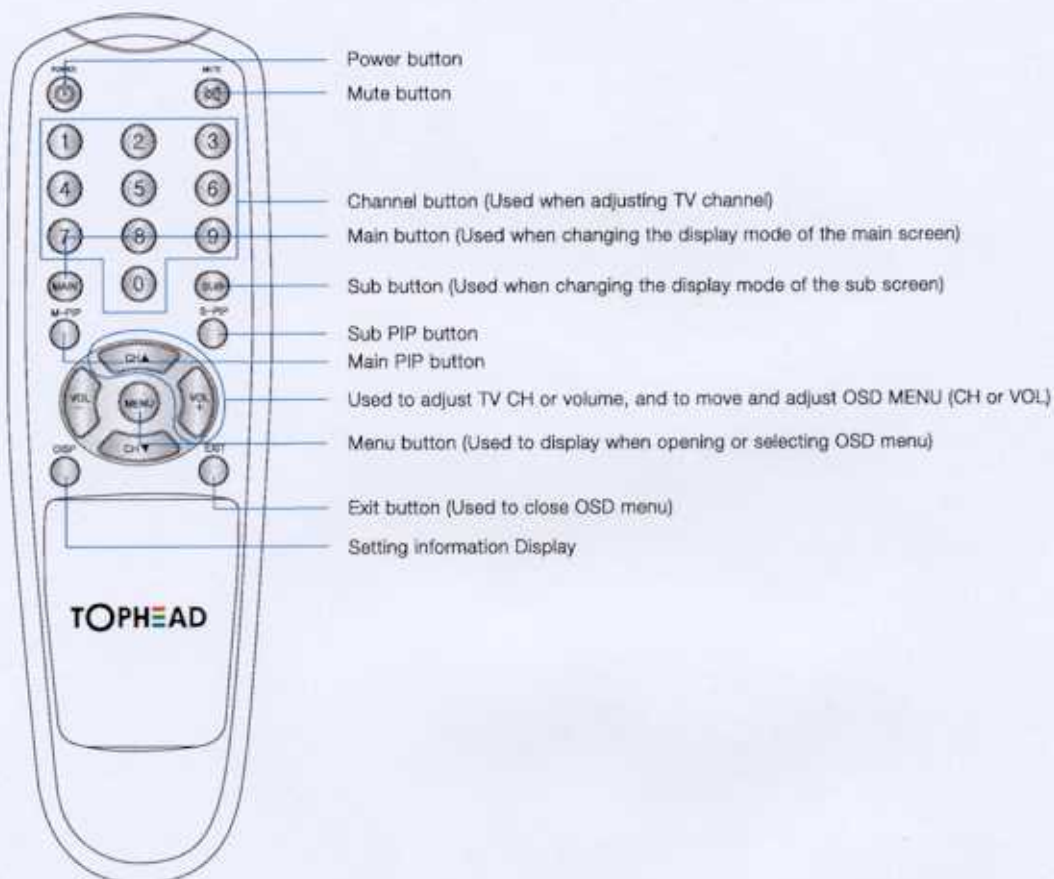


The remocon doesn't work

1. Is the polarity of the battery correct?
2. Is not the battery consumed completely?
3. Is the power supplied correctly?
4. Is the power cord connected correctly?
5. Is the special fluorescent light or neon sign lit around it?


(2) How to use the remotecon

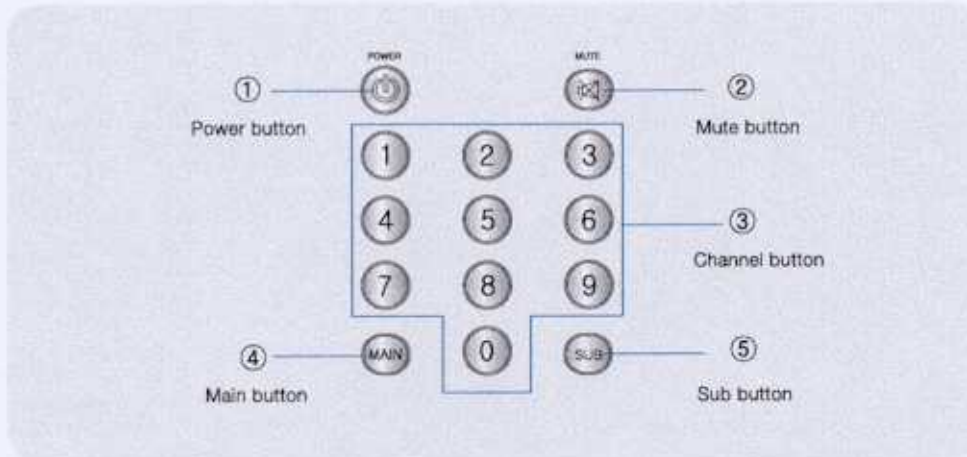

① Power button	Used to on/off the power.
	- When the power of the monitor is off, pressing button turns the monitor on. - When the power of the monitor is off, pressing button turns the monitor off.
② Mute button	Used to turn the sound off temporarily.
	- Pressing button with the sound on turns the sound off. - Pressing button with the sound off turns the sound on.
③ Channel button	Used to change the channel of TV.
	Ex) If you want to watch No. 31 channel of TV, press ③ button and ① button. - You can use this button only when running PIP in PC display.
④ Main button	Change the display mode of the main screen and the sub-screen automatically.
	Ex) When the main screen is in PC display, pressing changes the display mode in the order of PC -> TV -> VIDEO -> S-VIDEO -> PC
⑤ Sub button	When the sub screen is in PC display, pressing changes the display mode in the order of PC -> TV -> VIDEO -> S-VIDEO -> PC.
	The display mode of some models may be different, and PIP functions may not run.

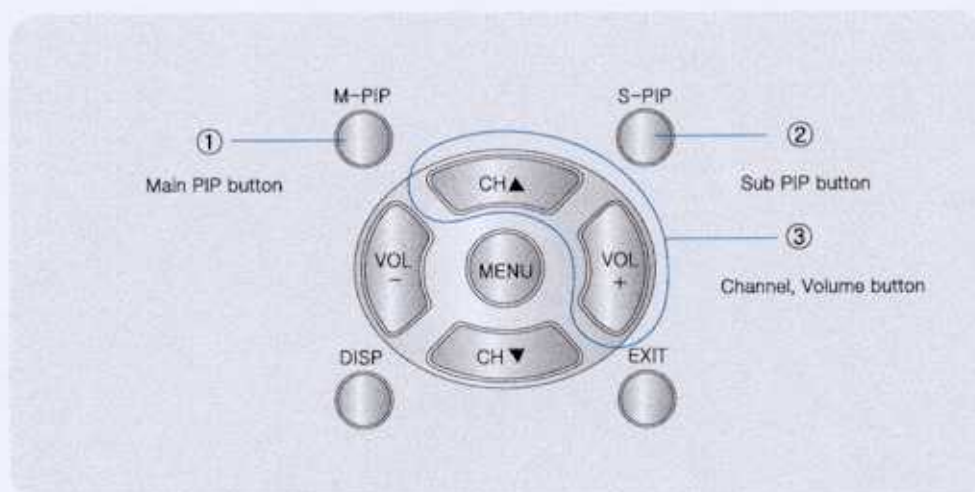


① Main PIP button	Used when you want to watch two screens simultaneously in one screen. (You can use this button only when displaying PC)
	  Pressing  (Display simultaneously in Main screen) or  (Display simultaneously in Sub screen) display two screens simultaneously.
② Sub PIP button	  If you press  or  when two screens are displayed simultaneously, the mode of simultaneous screens is changed
	• Mode Change of Simultaneous Screen The simultaneous screen mode will be changed in the order of PC+TV -> PC+VIDEO -> PC+S-VIDEO -> PC+TV. The display mode of some models may be different, and PIP functions may not run.
③ Channel, Volume button	Used to adjust TV CH and Volume level, and to move (CH) and adjust (VOL) OSD menu item.
	- Pressing   button changes channels of TV. - Pressing   button changes volumes of TV and Video. • The above functions are same on simultaneous display of two screens (PIP). - Pressing   button on OSD menu moves the menu item, and pressing   button adjusts the selected menu item.

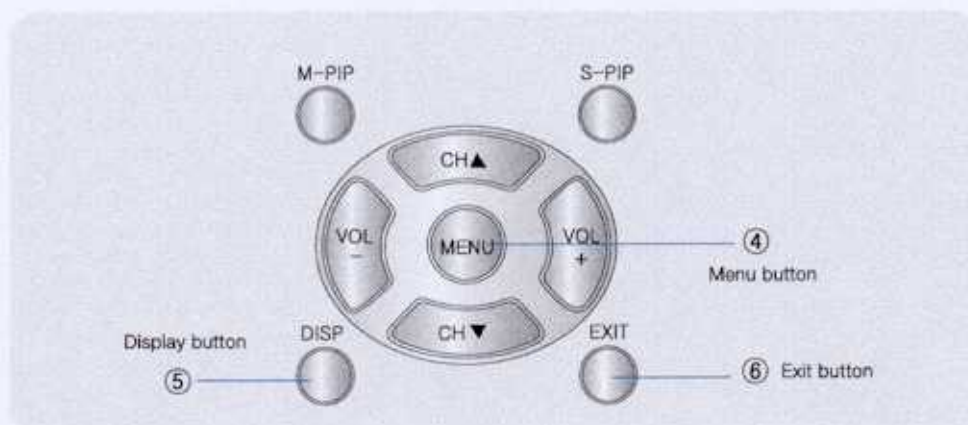

④ Menu button	Used to enter the customized control screen or select the function port on OSD screen.
	- Pressing  button opens or selects OSD menu item based on the display mode of the main screen and the sub screen. - If you want to cancel the incorrect selection, press  button to cancel the function.
⑤ Display button	Displays the setting information
	Pressing  button displays the information of the main screen and the sub screen that is displayed. In other words, you can see the display mode, and in case of TV, you can see the information of the displayed channel together.
⑥ Exit button	Used to exit the menu window or the function.
	Pressing  button exit the selected OSD menu item. It is used to exit OSD menu item.

TM150AV - 15"OSD MENU (Key or Remocon)

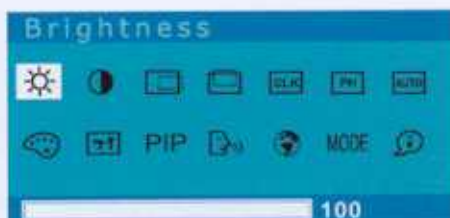


PC Mode



TV/Video Mode

(1) PC Mode

① Adjusting Brightness and Contrast

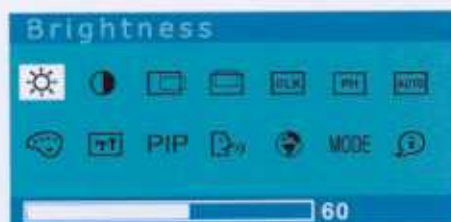

- Open OSD with Main key, and move the icon to Brightness or Contrast with Channel key, and set the brightness and contrast with Volume key.
- After finishing the adjustment, the adjusted value will be stored automatically. Pressing Main key once again will exit the Menu.

② Adjusting H-position and V-Position of the screen



- Open OSD with Main key, and move the icon to H-Position or V-Position with Channel key, and set the horizontal position and the vertical position with Volume key.
- After finishing the adjustment, the adjusted value will be stored automatically. Pressing Main key once again will exit the Menu.

③ Adjusting H-size of the screen



- Open OSD with Main key, and move the icon to CLOCK with Channel key, and set the clock with Volume key.
- After finishing the adjustment, the adjusted value will be stored automatically. Pressing Main key once again will exit the Menu.

④ Adjusting Phase



- Open OSD with Main key, and move the icon to Phase with Channel key, and set the phase with Volume key.
- This is used when there is noise in the screen or the character line is overlapped, and after adjusting clock.
- After finishing the adjustment, the adjusted value will be stored automatically. Pressing Main key once again will exit the Menu.

⑤ Adjusting Auto-config



- Open OSD with Main key, and move the icon to AUTO with Channel key and press Volume key. Now, Auto-config will start.
- Adjusts the top/down and right/left position of the screen, the frequency, and the phase automatically to make the optimum condition.
- After finishing the adjustment, the adjusted value will be stored automatically. Pressing Main key once again will exit the Menu.

⑥ Adjusting Color



- Open OSD with Main key, and move the icon to COLOR with Channel key and press Volume key. Now, the Color adjustment Sub Menu appears.



- If you move the icon with Channel key and press the Volume key, you can open the color setting.



- You can adjust any color by moving the icon with Channel key and using the Volume key.
- After finishing the adjustment, the adjusted value will be stored automatically. You can exit the Menu by pressing Main key once again, or can move to the main menu by moving the icon to EXIT and pressing Volume key.

⑦ Adjusting Special Color



- Open OSD with Main key, and move the icon to COLOR with Channel key and press Volume key. Now, the SPECIAL adjustment Sub Menu appears.



- The Video level is the input signal level of Video for adjusting contrast. If you press Volume key, the status of the screen will be changed with "0.7V" / "1.0V" displayed in the bottom of the Menu, and the corresponding information will be stored.



- It is to adjust the frequency in MS-DOS mode. In case of MS-DOS, if you press the Volume key, the size of the screen will be changed with "640M" / "720M" displayed in the bottom of the Menu, and the corresponding information will be stored.



- This is to adjust the sharpness of the screen that is not 1024X768, and if you press the Volume key the sharpness will be adjusted and the corresponding information will be stored.


⑧ Adjusting PIP



- Open OSD with Main key, and move the icon to PIP with Channel key and press Volume key. Now, the SPECIAL adjustment Sub Menu appears.



- This is to on/off the PIP screen. If you press Volume key, the PIP screen will appear or disappear with "ON/OFF" displayed in the bottom of the Menu.

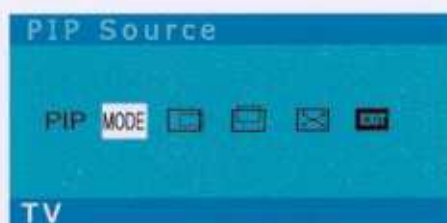

- This is to change the input source of PIP screen. If you press the Volume key, the PIP screen will be changed with "TV/Video" displayed in the bottom of the Menu.




- This is to change the position of the top/down or right/left of the PIP screen. If you press the Volume key, you can set the PIP screen at any position in top/down or right/left.



- This is to change the size of the PIP screen. If you press the Volume key, the size of the PIP screen will be changed with "SMALL" / "LARGE" displayed in the bottom of the Menu.

⑨ Selecting Audio Source

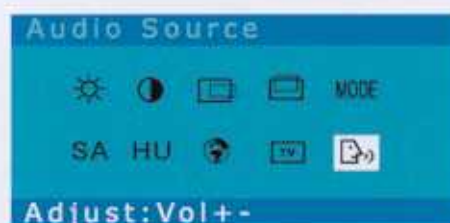

- Audio out is basically based on the mode of the Main (15") screen. However, you can change it if you want to hear other kinds of audio.
- Open OSD with Main key, and move the icon to Audio Source with Channel key and press Volume key. Now, the Audio Source adjustment Sub Menu appears.




- Move the icon to the corresponding audio source with Channel key, and press Volume key. Now, you can hear the corresponding sound through audio output.

⑩ Selecting Language



- Open OSD with Main key, and move the icon to Language with Channel key and press Volume key. Now, the corresponding language is indicated in the bottom of the menu, and the language that is displayed in OSD will be changed and stored.

⑪ Selecting Source

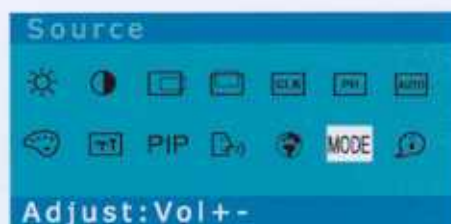


- Open OSD with Main key, and move the icon to Source with Channel key and press Volume key. Now, the Source adjustment Sub Menu appears.



- Move the icon to the corresponding source with Channel key, and press Volume key. Now, the corresponding screen will appear in the Main screen.

⑫ Information

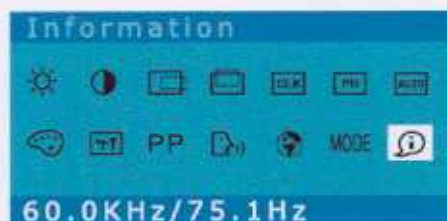

- Open OSD with Main key, and move the icon to Information with Channel key. Now, the Resolution / Vertical frequency of the current mode will be displayed.

(2) TV/Video Mode

① Adjusting Brightness and Contrast of Video Mode



- Open OSD with Main key, and move the icon to Brightness or Contrast with Channel key. And then using Volume key, set brightness and contrast.
- After finishing the adjustment, the adjusted value will be stored automatically. You can exit the Menu by pressing Main key once again.

② Adjusting horizontal or vertical position of the screen



- Open OSD with Main key, and move the icon to H-Position or V-Position with Channel key. And then using Volume key, set the horizontal position and the vertical position.
- After finishing the adjustment, the adjusted value will be stored automatically. You can exit the Menu by pressing Main key once again.

③ Adjusting Saturation (SA) and Hue (HU) of the screen



- Open OSD with Main key, and move the icon to SA or HU with Channel key. And then using Volume key, set saturation and hue.
- After finishing the adjustment, the adjusted value will be stored automatically. You can exit the Menu by pressing Main key once again.

④ Adjusting Channel Value in TV Mode




- Open OSD with Main key, and move the icon to Channel Menu. And then using Volume key, Open the Channel adjustment Sub menu.



- This is used to store the current TV Channel into the memory.
- You can select Volume key by moving the icon with channel key.



- This is used to delete the current TV channel from the memory.
- You can select Volume key by moving the icon with channel key.

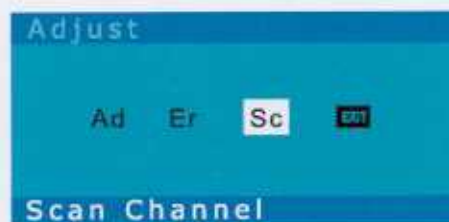


- This is used to store into the memory the channel that you can see at that time.
- You can select Volume key by moving the icon with channel key.

TM150AV – 6.4" OSD MENU (Key or Remocon)


(1) Description of Menu

① TV SOURCE

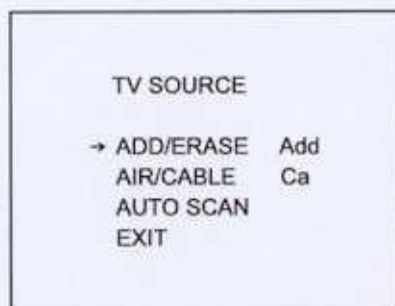

- ADD/ERASE : If you press Volume key after selecting the menu, the memorized condition of the current selected channel is changed.
- AIR/CABLE : If you press Volume key after selecting the menu, the condition of the broadcasting is changed to Air or Cable (ca).
- AUTO SCAN : If you press Volume key after selecting the menu, automatic channel setting starts. If you press Sub Menu while setting it, automatic check is stopped.
- EXIT : If you press Volume key after selecting the menu, it exits from the menu.

② INPUT SOURCE

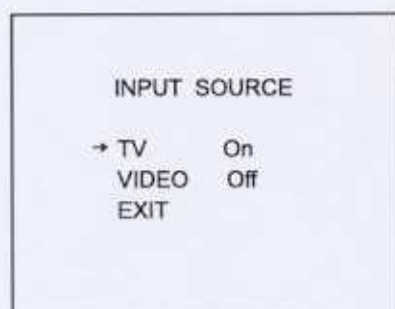

- If you watch TV currently, TV is On and VIDEO is Off. If you watch VIDEO currently, TV is Off and VIDEO is On. If you press Volume key after selecting the menu that is Off, the selected SOURCE is changed to On and it is displayed on the screen.
- EXIT: If you press Volume key after selecting the menu, it exits from the menu.

③ DISPLAY SOURCE

DISPLAY SOURCE		
→ BRIGHT		50
CONTRAST		50
COLOR		50
EXIT		

- BRIGHT : After selecting the menu, adjust the brightness of the screen by using Volume key.
- CONTRAST : After selecting the menu, adjust the contrast of the screen by using Volume key.
- COLOR : After selecting the menu, adjust the color density of the screen by using Volume key.
- EXIT : If you press Volume key after selecting the menu, it exits from the menu.

Other Information

(1) Checkpoints when reporting malfunctions

Check...	Doing this....	Note
1. There is no screen image.		
- Is the power cord of the monitor disconnected? - Is the power indicator off? - Is the power on and the power indicator green? - Is the power on and the power indicator yellow? - Is a message 'CHECK SIGNAL' displayed? - Is a message 'Out of Frequency' displayed?	Plug the power cord in the power socket correctly. Push the power button. Adjust brightness and contrast again. The monitor is using the power management system. Try to move the mouse or press a key in the keyboard. Check to see that the SIGNAL CABLE connector is connected correctly to the VGA card. The signal transmitted from PC (Video card) exceeds the range of horizontal or vertical frequency of the monitor. Refer to the (Product Specification) section in this Guide and reset the frequency.	
2. The colors of the screen is abnormal		
- Is the colors of the screen discolored (to 16 colors)? - Is the colors of the screen unstable or Does it look like monochrome colors? - Is there some specks in the screen?	Reset the number of colors to above 16-bit color. In Window/98/NT, [Control Panel] - [Display] - [Settings] - [Colors] Check the connection of the signal cable and connect it correctly again. Reinsert the video card on PC. (Refer to the manual of the video card.) There may appear some color specks (red, green, white, and black) on the screen. This is natural in the LCD panel. In other words, it is not a defect and unrelated with the performance of the monitor.	
3. After connecting the monitor, the phrase "unknown monitor" is displayed.		
Have you installed the driver for the monitor?	Install the driver for the monitor by using the monitor driver diskette supplied with the product, or using our homepage in the internet (http://www.tophead.com).	
4. The characters are too light or there is horizontal noise.		
- Have you performed PHASE adjustment well? - Is the screen set to the optimum condition?	Run AUTO function in the MENU screen. Then it is adjusted automatically to the optimum screen for the current mode. If you are not satisfied with the adjusted TOP/DOWN, adjust the PHASE in the OSD menu manually. The optimum resolution of this product is 1024 X 768@60Hz. If you set it to SVGA(800 x 600) or else, the line of the character may look dimmed or uneven.	

(2) Specification of Product

		15" (LCD)	6.4" (LCD)
LCD	Screen Size (diagonal length of visible screen)	380.1mm	163.2mm
	Pixel Pitch	0.297(width) x 0.297(length)	0.136(width) x 0.136 (length)
	Viewing angle (CR) 10)	top 40°/down 60°/left 60°/right 60°	top 15°/down 35°/left 55°/right 55°
	Maximum Color of Display	16,777,216 colors	
TV/VIDEO	image signal audio signal Video format		NTSC Stereo CVBS
Video signal	Horizontal frequency Vertical frequency Recommended resolution Synchronizing format		31-61 KHz 56-75Hz 1024x768@60Hz Seperate
Signal Input Cable	Detachable	15pin D-Sub, RCA, TV Tuner	
Power	nominal voltage nominal current consumption		DC12V(4.5A) 54W
Product Dimension	Including Support	235.5(D) x 372(W) x 515(H)	
Weight	Body (excluding packaging) (including packaging)		5kg 8.6 kg
Operational condition	Temperature Humidity		10 C - 35 C 10% - 80%

* This specification may be changed without any prior notification for the improvement of the product.

Standard Signal Mode

NO	RESOLUTION	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
1	VGA 640x350	31.47	70
2	VGA 720x400	31.47	70
3	VGA 640x480	31.47	60
4	MAC 640x480	35.00	67
5	VESA 640x480	37.86	73
6	VESA 640x480	37.50	75
7	VESA 800x600	34.16	56
8	VESA 800x600	37.88	60
9	VESA 800x600	48.08	72
10	VESA 800x600	46.88	75
11	MAC 832x624	49.72	75
12	VESA 1024x768	48.36	60
13	VESA 1024x768	56.48	70
14	VESA 1024x768	60.02	75

AC Adapter

nominal input: AC110~220V 50/60Hz

nominal output: DC12V — 4.5A

(Be sure to use only the product we supplied.)

Installing drivers for the monitor

If you install the driver for the monitor, the resolution and frequency is set for the monitor and you can work in the sharp screen.

- ① Insert the supplied diskette into the drive.
In Windows, click
'My Computer' -> 'Control panel'.

Click 'Display'




- ② This may be different according to the type of the video card.



Click 'Settings'

Click 'Advanced (D)'
or 'Change the type
of Display'

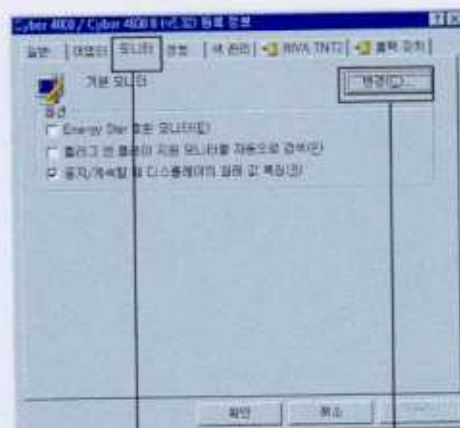


Click 'Settings'

Click 'Change'


- ③ If 'Select device' window appears, click 'Have disk'




Click 'Next'

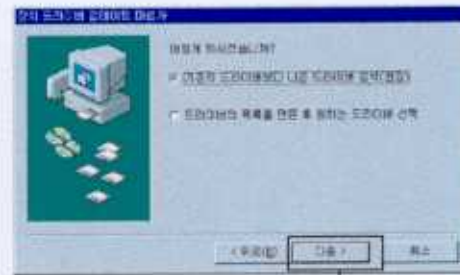

Click 'I want to
select a driver
from the list'

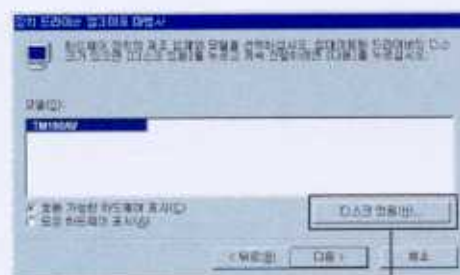

Click 'Have disk'

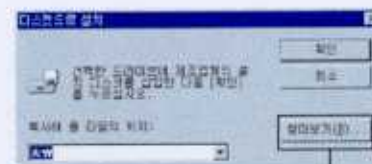


Click 'Browse'

- ⑤ This may be different according to the type of the video card in PC.



Check Modelname.inf


Click OK

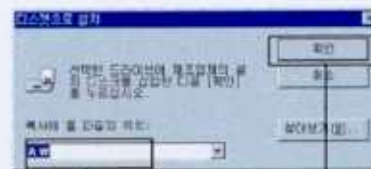

Check the file name

Click OK

- ⑥ If your model doesn't exist in the list, select <Display all hardware>. And then select your model and press 'OK'. (For example, in case you used a different monitor)

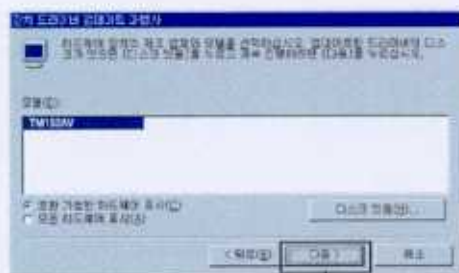

Click 'Next'



Click 'Finish'

- ⑦ If your model doesn't exist in the list, select <Display all hardware>. And then select your model and press 'OK'. (For example, in case you used a different monitor)

Click 'Restart System'

Click 'OK'

