

Size: 420mm x 297mm
Front 1C + Back 1C



8+

Important! Problems?



U.S.A. & Canada
30-Day Limited Warranty
Jada Toys Products

For customer support
please contact us at:
cs@jadatoy.com or
1-800-679-5232
Between the hours of 8:30 am to 5:30 pm :
Pacific Time - Monday – Friday
WWW.JADATOYS.COM

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for thirty (30) days from the date of purchase. Jada Toys will repair or replace the product, at our sole discretion, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the phone numbers listed below. Problems can be solved in this manner. If necessary, you may be asked to return the product for replacement or refund at the place of purchase (please refer to the reliable return policy) or you may be requested to return the product (shipping paid and insured by the consumer) to Jada Toys – address to be provided upon contact via e-mail. Please include your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect. Repair or replacement and return shipping will be free of charge. Please retain the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toys' liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole discretion, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow the exclusion or limitation). This warranty is exclusive, and in no event shall we be liable for any express or implied warranty. **Valid only in U.S.A. and Canada.** This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Expect some delay in January following the holiday season.
Please be patient and keep trying the toll-free number.

EN Industry Canada Warning:
This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device. Under Industry Canada regulations, this transmitter may only operate using an antenna of a type and maximum gain that is listed on the product label. Use of antennas not approved by the manufacturer may cause interference to radio communications. To reduce potential interference to other users, the antenna type and its gain should not be chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with IC RSS-102 radiation exposure limits for an uncontrolled environment.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

FCC WARNING:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Products with batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Les produits électriques ne doivent pas être jetés avec les ordures ménagères. Veuillez les amener dans un centre de recyclage approprié. Vérifiez auprès de vos autorités locales ou de détaillant pour obtenir des conseils de recyclage. Les produits avec des piles ne doivent pas être jetés avec les ordures ménagères. Veuillez les amener dans un centre de recyclage approprié. Vérifiez auprès de vos autorités locales ou de détaillant pour obtenir des conseils de recyclage.

Los productos electrónicos no se deben desechar junto con la basura doméstica. Reciclelos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos. Los aparatos con pilas no se deben desechar junto con la basura doméstica. Reciclelos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos.

Elektrische Produkte sollten nicht mit den Haushaltsabfällen entsorgt werden. Bitte recyceln, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über das Recycling bei Ihrer lokalen Behörde oder Ihrem Fachhändler. Produkte mit Batterien sollten nicht mit den Haushaltsabfällen entsorgt werden. Bitte recyceln, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über das Recycling bei Ihrer lokalen Behörde oder Ihrem Fachhändler.



We reserve the right to improve or amend product specifications. Colors may vary. Jada oval mark is a registered trademark of Jada Toys, Inc.

Nous nous réservons le droit d'améliorer ou de modifier les spécifications des produits. Les couleurs peuvent varier. La marque ovale Jada est une marque déposée de Jada Toys, Inc.

Nos reservamos el derecho de mejorar o modificar las especificaciones del producto. Los colores pueden variar. La marca Jada Oval es una marca comercial registrada de Jada Toys, Inc.

Wir behalten uns das Recht vor, die Produktspezifikationen zu verbessern oder zu verändern. Abweichungen des Produkts in Farbe und Gestaltung vorbehalten.

Das ovale Jada-Firmenlogo ist ein eingetragenes Warenzeichen von Jada Toys, Inc.

18521 RAILROAD ST., CITY OF INDUSTRY, CA 91748. ©2025 JADA TOYS, INC.

Hereby, JADA TOYS CO. LTD., declares that the product equipment type #84263 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.jadatoy.com>

Important! Un problème se produit ?



États-Unis et Canada
Garantie limitée à 30 jours
Produits Jada Toys

Pour toute assistance à la
clientèle, veuillez nous
contacter à :
cs@jadatoy.com ou
1-800-679-5232
De 8:30h à 17:00h, Temps Pacifique:
du mardi au vendredi
WWW.JADATOYS.COM

Jada Toys, Inc. garantit au consommateur original que ce produit est exempt de tout défaut de matériel et de fabrication pour une période de trente (30) jours à partir de la date d'achat. Jada Toys réparera ou remplacera le produit, à notre seule discrétion, dans le cas d'un tel défaut pendant la période de garantie.

Dans le cas d'un défaut couvert par cette garantie, appelez tout d'abord les numéros de téléphone indiqués ci-dessous. De nombreux problèmes peuvent être résolus de cette manière. Si cela s'avère nécessaire, nous vous demanderons peut-être de retourner le produit pour remplacement ou remboursement à l'endroit de votre achat (veuillez consulter la politique de retour du vendeur) ou de renvoyer le produit à Jada Toys – l'adresse sera fournie si vous contactez par téléphone (frais d'envoi et d'assurance à la charge du consommateur). Indiquez votre nom, adresse, numéros de téléphone, copie de votre chèque de vente et une brève explication du défaut. Le réparateur, le remplacement et le retour du produit seront gratuits. Veuillez conserver le produit défectueux ou le produit, bien emballé. Cette garantie ne couvre pas les dommages résultant d'une modification non autorisée, d'un accident, d'un usage abusif ou d'une mauvaise utilisation ou d'un abus. Si le produit est retourné sans le reçu d'achat daté, le produit pourra être exclu du champ d'application de cette garantie.

La responsabilité de Jada Toys pour les défauts de matériel et de fabrication dans le cadre de cette garantie est limitée à la réparation ou au remplacement, à notre seule discrétion, et en aucun cas, nous ne serons responsables des dommages indirects, consécutifs ou éventuels (sauf dans les états qui ne permettent pas cette exclusion ou limitation). Cette garantie est exclusive et l'entier lue de toute garantie expresse ou implicite. **Valeable uniquement aux États-Unis et au Canada.** Cette garantie vous donne des droits légaux spécifiques, et vous pouvez avoir d'autres droits qui varient d'état en état. Certains états n'autorisent pas l'exclusion des dommages directs ou indirects, et les exclusions ou limitations ci-dessus peuvent ne pas s'appliquer à vous.

Sauf un certain délai possible en janvier après la saison des fêtes.
Veuillez être patient(e) et continuez à appeler le numéro gratuit.

FR Note de l'IC (Industry Canada) pour les utilisateurs résidents au Canada:
Cet appareil renferme un ou plusieurs émetteur(s)/récepteur(s) exempt(s) de licence et conforme(s) aux CNR/exceptions de licence d'Innovation, Science et Développement Économique Canada. L'utilisation de l'appareil est soumise aux deux conditions suivantes: 1. Cet appareil ne doit pas causer d'interférences. 2. Cet appareil doit accepter toute interférence, y compris les interférences pouvant affecter son fonctionnement. Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain autorisé. L'utilisation d'antennes non approuvées par le fabricant peut causer des interférences nuisibles aux communications radio. Pour réduire les risques d'interférences nuisibles à l'interférence des autres utilisateurs, il faut choisir le type d'antenne et le gain de son qui ne dépassent pas les limites équivalentes (e.i.r.p.) et ne dépassent pas l'intensité recommandée à l'établissement d'une communication satisfaisante.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé sans restriction dans des conditions d'exposition normales.

FCC AVERTISSEMENT:
Cet appareil respecte l'article 15 des réglementations de la FCC. Son fonctionnement doit satisfaire aux deux conditions suivantes:

1. Cet appareil ne doit pas provoquer d'interférences nuisibles.
2. Cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant affecter son fonctionnement.

Attention: Les changements ou modifications n'approuvés par les limites d'exposition approuvées par la partie responsable de la conformité peuvent annuler l'autorisation de l'utilisateur à manipuler cet équipement.

REMARQUE: Cet équipement a été testé et déclaré conforme aux exigences numériques de classe B définies par l'article 15 du règlement de la FCC. Ces limites correspondent à une protection raisonnable contre les interférences nuisibles dans une installation en milieu résidentiel. Cet équipement génère, utilise et peut émettre de l'énergie radioélectrique. S'il n'est pas installé et utilisé conformément aux instructions fournies, il peut causer des interférences nuisibles aux communications radio. Cependant, la possibilité d'une interférence dans une installation domotique n'est pas entièrement exclue. Si ces équipements provoquent des interférences nuisibles avec la réception radio ou télévisuelle, l'utilisateur est encouragé à essayer les mesures suivantes pour corriger l'interférence, y compris les mesures suivantes:

- Changer l'orientation de l'antenne de réception.
- Éloigner l'appareil du récepteur.
- Brancher l'appareil sur une autre prise pour faire en sorte que l'appareil et le récepteur se trouvent sur différents circuits de dérivation.
- Contactez un technicien radio-TV expérimenté pour obtenir une assistance complémentaire.

Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Products with batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Les produits électriques ne doivent pas être jetés avec les ordures ménagères. Veuillez les amener dans un centre de recyclage approprié. Vérifiez auprès de vos autorités locales ou de détaillant pour obtenir des conseils de recyclage. Les produits avec des piles ne doivent pas être jetés avec les ordures ménagères. Veuillez les amener dans un centre de recyclage approprié. Vérifiez auprès de vos autorités locales ou de détaillant pour obtenir des conseils de recyclage.

Los productos electrónicos no se deben desechar junto con la basura doméstica. Reciclelos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos. Los aparatos con pilas no se deben desechar junto con la basura doméstica. Reciclelos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos.

Elektrische Produkte sollten nicht mit den Haushaltsabfällen entsorgt werden. Bitte recyceln, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über das Recycling bei Ihrer lokalen Behörde oder Ihrem Fachhändler. Produkte mit Batterien sollten nicht mit den Haushaltsabfällen entsorgt werden. Bitte recyceln, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über das Recycling bei Ihrer lokalen Behörde oder Ihrem Fachhändler.



© Universal City Studios LLC. All Rights Reserved.
© Universal City Studios LLC. Tous droits réservés.
© Universal City Studios LLC. Reservados todos los derechos.
© Universal City Studios LLC. Alle Rechte vorbehalten.

MADE IN CHINA
FABRIQUE EN CHINE
FABRICADO EN CHINA
HERGESTELLT IN CHINA

© Universal City Studios LLC. All Rights Reserved.
© Universal City Studios LLC. Tous droits réservés.
© Universal City Studios LLC. Reservados todos los derechos.
© Universal City Studios LLC. Alle Rechte vorbehalten.

MADE IN CHINA
FABRIQUE EN CHINE
FABRICADO EN CHINA
HERGESTELLT IN CHINA

The product uses 2.4GHz remote control technology.
Fonctionne avec la technologie radiocommandée 2.4GHz.
Funciona con la tecnología radiocontrol de 2.4GHz.
Das Produkt nutzt eine 2.4-GHz-Fernsteuerungs-Technologie.

Hereby, JADA TOYS CO. LTD., declares that the product equipment type #84263 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.jadatoy.com>

INSTRUCTIONS SHEET MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION.

These operating, installation, and safety instructions are integral parts of the product.

IMPORTANT:
Please read all "CONSUMER INFORMATION" before operating this toy vehicle.
ADULT SUPERVISION REQUIRED.

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety tips in the CONSUMER INFORMATION section with your child.

— CONSUMER INFORMATION —

CONTENTS:
1. 1 x Vehicle
1 x Remote Control, 2 x AA Batteries

SAFETY TIPS:
• Toy surface may become hot and cause burns if the electronics get wet. DO NOT OPERATE this vehicle near or through water, snow, sand, grass or any wet or muddy surface.
• Never play this vehicle on streets! The streets are for real cars!
• Do not pick up vehicle with one hand.
• Always place the car gently on the floor by hand. Never throw the car onto the floor.
• Avoid collisions with walls, any hard objects, or human/animal bodies.
• Keep fingers, hair and loose clothing away from fire and other flames.
• To avoid accidental operation, remove batteries from controller when not in use.
• Do not connect this toy with other power supplies.
• Do not insert any wire or object into electrical outlets.
• Be sure to test your vehicle for at least 5 minutes after every 15 minutes of operation.
• Stay clear of obstacles and hazards to avoid injury and damage.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

INSTALL BATTERIES INTO CONTROLLER (See Diagram 2)
Requires 2 (two) "AA" batteries.
1. Press the lock button down with a screwdriver and slide the door open.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER):
• Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
• Remove controller batteries if RC will not be used for a long period of time to prevent possible battery leakage.
• Dispose of batteries safely. Do not dispose of batteries or products containing non-replaceable batteries in fire. Batteries may explode or leak.
• Rechargeable batteries are to be removed from the toy before being charged.
• Rechargeable batteries are to be charged by adult only.
• Non-rechargeable batteries are not to be recharged.

YOUR NEW RC IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES. BATTERIES ARE INCLUDED.

WARNING: Rechargeable battery is not replaceable.

DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED.

Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
The vehicle includes a non-replaceable battery. Do not open, disassemble or alter the vehicle in anyway.
Built-in USB adapter is permanently attached to the vehicle. To protect your vehicle, only connect to USB certified port.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.
Charge battery in shaded area. Keep away from flammable materials.
Do not recharge the toy by hand. How to avoid further damage.
Do not drop or subject to strong impacts.
Do not throw the batteries to get wet.
In the unlikely event of damage or explosion use care and a chemical fire extinguisher for the battery.
Rechargeable batteries are only to be charged under adult supervision.
Routine examination for damage to the plug and cord under the car.
Do not expose or detach the battery.