

RE0012 – System Remote Control



Appearanc

INTRODUCTION :

This remote can be used with 6 channel power control switched. For example a outdoor power switch (our model RE0011) and indoor power switch (our model 2023) etc. With the remote Control system you can operate electrical appliances (e.g. lamps, coffee-maker etc.) in or around your house via the remote control.



Installing
battery

BATTERY INSTALLATION :

Your new remote controller use one “ “ battery (Alkaline battery recommended). Open the battery cover on the back side and install battery follow the correct polarity (+) and (-) marked.

Note :

Remove the battery when the remote control is not going to be used for a long period time.
Battery in the remote control should be replaced if the transmission range of the remote control reduces drastically.

OPERATION :

To operate the 6 channel power switch ON/OFF by pressing the toggle switch with unit code engraved on the key knob.
Press the toggle switch to turn ON and repeat to turn OFF the corresponsive power switch.

INFORMATION TO USER:

CAUTION: Changes or modifications not expressly approved by All-line are could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.