

# User's Manual

## Product over view

In order to make sure you get the best possible results from your new Visor Speaker, please thoroughly read and carefully follow all instructions in this User's Manual or on the product. Keep this User's Manual in a convenient location for future reference.


### Package contents

- Visor speaker x 1
- Car charger x 1
- Micro USB charging cable x 1
- User's Manual x 1

If any of these were missing or damaged, please visit [bemwireless.com](http://bemwireless.com) to obtain replacement.

## Meet the Visor Speaker

Before learning your visor speaker, take a moment to look it over and familiarize yourself with its features.

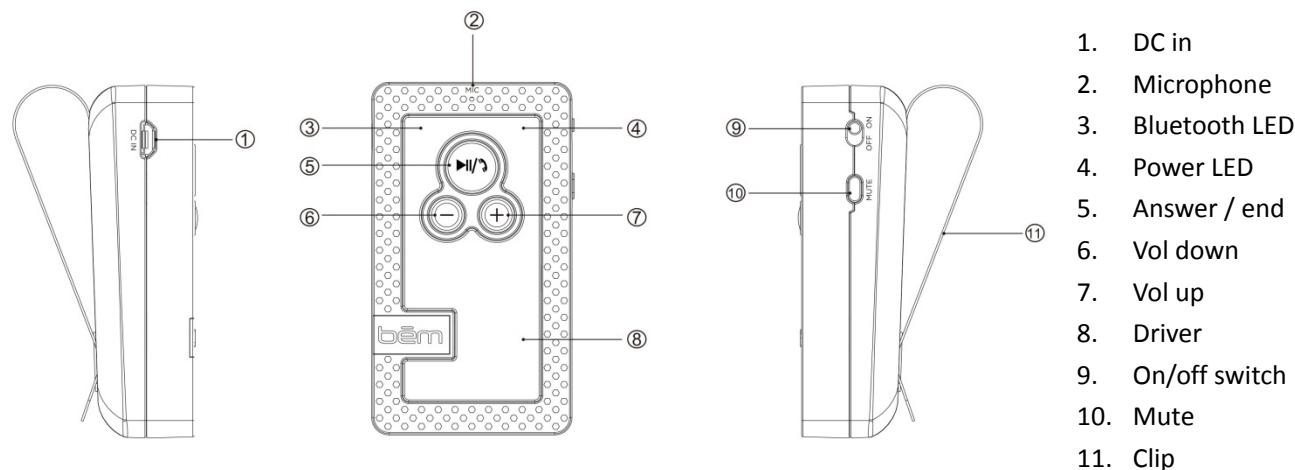

## Pair with your mobile phone

### First time pairing

Turn on the visor speaker by slide the on/off switch to “on”, and the Bluetooth LED with lights up with a beep. Activate Bluetooth on your mobile phone and select “visor speaker”.

After paired for the first time, the Visor Speaker can pair to your mobile phone automatically.

### Pair with the 2<sup>nd</sup> mobile phone

Turn on the visor speaker, activate Bluetooth on your 2<sup>nd</sup> mobile phone and select “visor speaker”,

#### Tips:

*If the 2<sup>nd</sup> mobile phone cannot find the visor in the Bluetooth list, disconnect the Bluetooth connection from the 1<sup>st</sup> mobile phone will help.*

## Position the Visor Speaker

Clip the Visor Speaker to the sun visor in your vehicle

#### Tips:

*Visor speaker can turn off automatically when you leave the car and when you enter it again, hit the Answer / end button to reconnect the visor speaker.*

## Using the Visor speaker

|              |                         |  |
|--------------|-------------------------|--|
| Answer / end | Make call               | Call will automatically transfer to the speakerphone. If not, tap Answer/ end button |
|              | Answer call             | Tap answer/end button to answer the incoming call                                    |
|              | End call                | Tap answer/end button during the call to end the call                                |
|              | Reject call             | Hold answer/end button to reject the incoming call                                   |
|              | Redial last number      | Hold answer/end button to redial last number when it is not in a call                |
|              | Play / pause            | Tap answer/end button to play and pause the music play                               |
|              | Voice Commands*         | Double tap answer/end button to activate the voice command in your mobile phone      |
| - / +        | Volume down / up        | Tap volume up or volume down button  |
| Mute         | Mute/un-mute microphone | Tap mute button  |

\*phone dependent

### Music and GPS

Music or GPS on your mobile phone will automatically play on the Visor speaker when connected.

### Charging the Visor Speaker

The power LED will flash when the battery is low.

Use the supplied car charger or other USB power source to charge Visor speaker, just connect the power source and visor speaker with the micro USB charging cable, the power LED become solid. Then you have an immediately success for charging the device.

The Power LED will goes off when it is fully charged.

## Trouble shooting

No connection:

- Make sure the Bluetooth connection of your mobile phone is on
- Make sure the speaker is on
- Tap the answer/end button to wake up the visor speaker
- Pair the speaker again

## Maintenance

### Cleaning the Case:

To clean the case, first unplug the power cable. To remove dirt or dust, wipe the casing with a soft, dry, lint-free cloth. To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral detergent and then wipe the casing.

Do not use alcohol, benzene, thinners or other chemical detergents as these can cause the casing to be warped or discolored.

### Storage

Always power off the visor speaker when you finish using it.

If the unit will not be used for an extended period, be sure to follow these guidelines:

Do not store the unit in a damp environment

- Avoid exposing the unit to very high or low temperatures
- Avoid prolonged exposure to direct sunlight.
- Charge it before use it again.

## Technical Specifications

Note: All specifications are subject to change without notice

- Product Name : Visor Speaker
- Model Number :HL2068
- Power Supply: USB 5V,1A
- Working Temperature: 0°C-40°C
- Working Humidity: 20%-90%RH

# CE 2200

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.