

SONY®

User guide

USB Type-C Stereo Headset
STH50C

Contents

 
Introduction.....	3
Function overview.....	3
Hardware overview.....	3
Using your headset.....	4
Using the remote.....	4
Attaching the clip.....	5
Legal information.....	6
General.....	6
FCC Statement.....	6

Introduction

Function overview

The USB Type-C Stereo Headset STH50C lets you listen to music in Hi-Res by directly connecting the headset to the USB Type-C port of your device. You can also use the voice assistant when connected to a compatible Android or iOS device.

Hardware overview

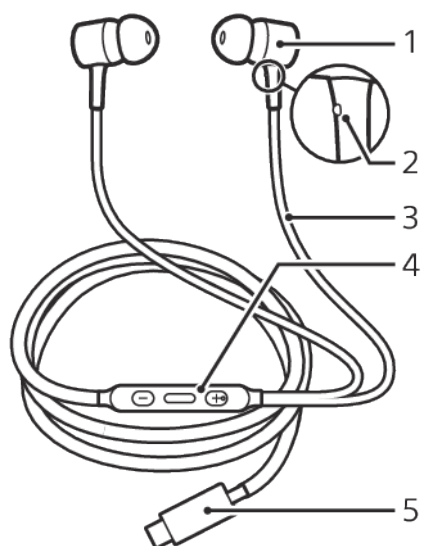

1	Headphone
2	Tactile dot
3	Cable
4	Remote
5	USB Type-C plug

 
Hint

There is a tactile dot (small bump) on the left headphone. Use this as an indicator when checking which headphone is the right and which is the left.

Using your headset

Using the remote

Remote overview

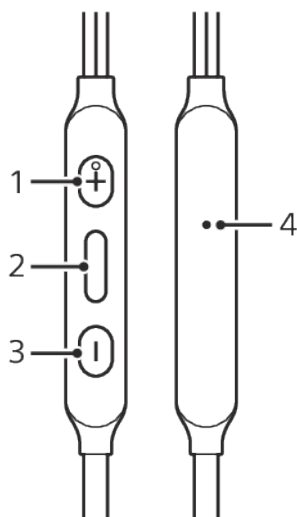

- | | |
|---|--------------------|
| 1 | Volume key + |
| 2 | Multi-function key |
| 3 | Volume key - |
| 4 | Microphone |

To change the volume

- During a call or when listening to music, press volume key + or volume key - to increase or decrease the volume.

Hint

There is a tactile dot (small bump) on the volume key +. Use this as an indicator when using the remote.

To answer a call

- When you hear an incoming call signal, short press the multi-function key.

To reject a call

- When you hear an incoming call signal, long press the multi-function key for 1 second.

To mute the microphone during a call

- Long press the multi-function key for 1 second. To unmute the microphone, long press the key again for 1 second.

To pause or skip music tracks

 
- 1 When listening to music, press the multi-function key to pause the music track. Press it again to resume.
- 2 Quickly press the multi-function key twice to skip to the next track.
- 3 Quickly press the multi-function key three times to restart the current song. To return to the previous track press it three times again.

To start the voice assistant

- Long press the multi-function key for 1 second to start to talk to the voice assistant.

Attaching the clip

To attach the clip

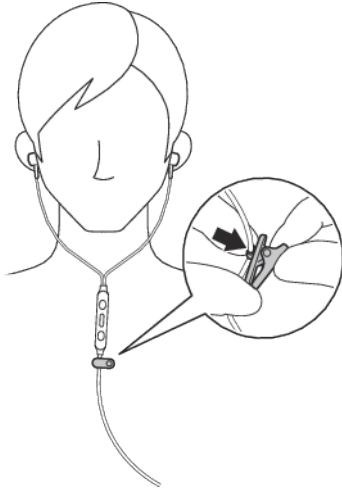

- Attach the clip to the headset cable below the remote. Position the clip so that you can speak into the microphone for taking calls hands-free, once the headset is fastened to your clothes.

Note

If you need to adjust the clip, remove the clip and reposition it on the headset cable.

Hint

Use the clip to stop your headphones and remote from moving around. This makes the headset more comfortable to use.

Legal information

General

Prior to use, please read the Important information leaflet separately provided.

This User guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

Some functions described in this User guide may not be available for all regions.

©2019 Sony Mobile Communications Inc.

4-12-3 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002, Japan

Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincilaan 7-D1, 1930 Zaventem, Belgium

Sony is the trademark or registered trademark of Sony Corporation.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.