



MY FIRST HOUR

Sony Ericsson

XPERIA
PLAY

Startup guide

Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden
www.sonyericsson.com



1237-1153.2

Welcome

Digital User guide for the environment

 
As a step toward a more environment-friendly approach we have focused on what you need to get started in this Startup guide, and added a full digital User Guide, one of our GreenHeart™ innovations, in the phone and on our support web. We hope you enjoy our efforts!

Important information

Please read the *Important information* leaflet before you use your mobile phone.


Assembly

To remove the battery cover

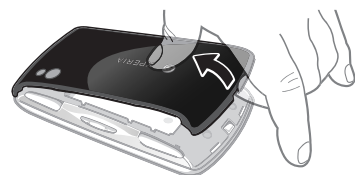


! You may need to press quite firmly when you're removing the cover.

 To insert the SIM card and the battery

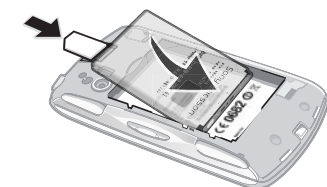


To attach the battery cover

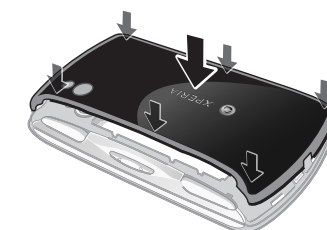 

Phone basics

 
Phone overview

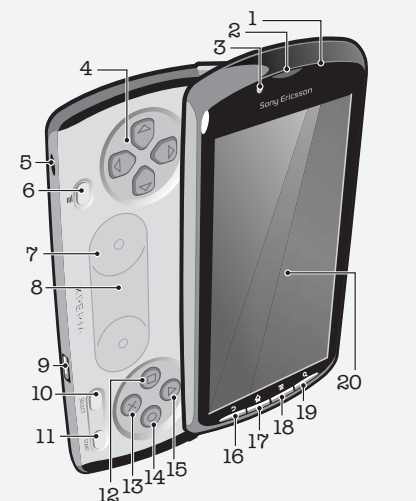

- | | |
|------------------------------------|------------------|
| 1. Light sensor/Proximity sensor | 11. Start key |
| 2. Ear speaker | 12. □ Button |
| 3. Front camera | 13. ✕ Button |
| 4. Directional buttons | 14. ○ Button |
| 5. Headset connector | 15. △ Button |
| 6. Game menu | 16. Back key |
| 7. Joystick | 17. Home key |
| 8. Touch pad | 18. Menu key |
| 9. Connector for charger/USB cable | 19. Search key |
| 10. Select key | 20. Touch screen |

Turning on the phone

 To turn on the phone

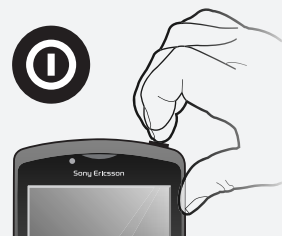

To enter your SIM card PIN code

- Tap the numbers on the screen to enter the personal identification number (PIN) for your SIM card.

- 💡 To correct a mistake made while entering your PIN, press ✕.

Waking up the screen

To activate the screen

- Press ⏻ or press ○ briefly.

To unlock the screen



- Drag the 🔒 icon to the right across the screen.

Using the keys



- | | |
|----------|---|
| ↶ Back | <ul style="list-style-type: none">• Go back to the previous screen• Close the on-screen keypad, a dialog box, an options menu, or the Notification panel |
| 🏠 Home | <ul style="list-style-type: none">• Go to the Home screen from any application or screen• Open a window showing your most recently used applications |
| ☰ Menu | <ul style="list-style-type: none">• Open a list of options available in the current screen or application |
| 🔍 Search | <ul style="list-style-type: none">• Shortcut to Google™ Search |

Using the touch screen

To open or highlight an item

- Tap the item.

 
To scroll



- Drag your finger in the direction you want to scroll on the screen.

- 💡 To scroll more quickly, flick your finger in the direction you want to go on the screen.

To zoom with two fingers

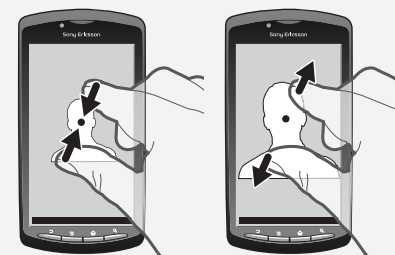


- Place two fingers on the screen at once and pinch them together (to zoom out) or spread them apart (to zoom in).
- 💡 Use the zoom function when viewing photos and maps, or when browsing the web.

Typing text

To display the keyboard to enter text

- Tap a text entry field.

 Using the keyboard

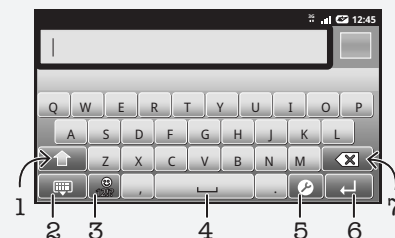

- 1 Change the character case and turn on the caps lock. For some languages, this key is used to access extra characters in the language
- 2 Close the keyboard view
- 3 Display numbers and symbols. Touch and hold to display smileys
- 4 Enter a space
- 5 Open the input settings menu to change, for example, the **Writing languages** or Quick text settings
- 6 Enter a carriage return or confirm text input
- 7 Delete a character before the cursor

To change writing language

- 1 When you enter text, tap ⌵, or touch and hold 🌐 if you have already selected more than one input language.
 - 2 Tap **Writing languages** and select the languages you want to use for writing.
- 💡 If you have selected more than one input language, tap 🌐 to switch between the selected writing languages.

To change quick text settings

- 1 When you enter text, tap ⌵, or touch and hold 🌐.
- 2 Tap **Quick text settings**.
- 3 Select the desired settings.

Gaming

To launch the PlayStation® Pocket

- From your Home screen, tap ⌵, then find and tap **PlayStation® Pocket**.
 - From your Home screen, slide out the gaming keypad. The PlayStation® Pocket starts automatically.
- 💡 If you don't want the PlayStation® Pocket to start when you slide out gaming keypad, you can disable this option in the PlayStation® Pocket menu.

Set up your phone



The first time you start your phone, a setup guide explains basic phone functions and helps you enter essential settings. You can also access the setup guide later.

To access the setup guide

- 1 From the Home screen, tap ⌵.
- 2 Tap **Setup guide**.

Android™ – what and why?

An Android™ phone is based on an open source platform, and is pre-loaded with Google™ services. To make the best out of any provided Google™ services, you should create a Google™ account and sign in to it when you first start your phone. With the account, you can extend the functionality of the phone by downloading applications and games from a constantly growing collection at Android Market™. You need to have Internet access for many of the features in Android.

Accounts and services

Use online services in your phone. Sign in with your existing account or sign up and create an account.

Google™ account

Use Gmail™ to send emails, Google Talk™ to chat with friends, and Android Market™ to download applications.

Sony Ericsson account

Store your phone contacts on a secure Sony Ericsson server, and you'll always have a backup online. You can also store your phone calendar and Internet bookmarks in your Sony Ericsson account.

Exchange Active Sync account

Synchronize your phone with your corporate Exchange Active Sync account. This way, you keep your work email, contacts and calendar events with you at all times.

To add an account

- 1 From your Home screen, tap ⌵.
- 2 Tap **Settings > Accounts & sync > Add account**.
- 3 Tap the account type you want to add and then follow the registration wizard.

Getting contacts into your phone

The first time you open the Phonebook, you get hints on how to start adding contacts to your phone. This is a good time to choose a method that suits your situation and setup. View all import options on www.sonyericsson.com/support/contacts. Example of methods:

-  Synchronize your phone with contacts already stored with an online synchronization service, such as Sony Ericsson Sync or Google Sync™.
-  Import contacts from a SIM card. You may not be able to transfer all information from one phone to another using this method because of limited memory on the SIM card.

! The online synchronization method works best for most users. This way, you always have a backup online.

To synchronize your phone contacts with a synchronization account

- 1 From your Home screen, tap , then tap **Phonebook**.
- 2 Press  then tap **Settings > Accounts & sync**.
- 3 To set up a synchronization account, tap **Add account** and follow the on-screen instructions. If you have already set up a synchronization account and you want to sync with that account, tap the account, press  and tap **Sync now**.

To import contacts from a SIM card

- 1 From your Home screen, tap , then tap **Phonebook**.
- 2 Press  then tap **Import contacts > SIM card**.
- 3 If you have set up a synchronization account, you can choose to add the SIM card contacts under that account. Or you can choose to only use these contacts in the phone. Select your desired option.
- 4 To import an individual contact, find and tap the contact. To import all contacts, press  then tap **Import all**.

Finding your way

Home screen

Your phone's Home screen is the equivalent of the desktop on a computer. It's your gateway to the main features in your phone. You can customize your Home screen with widgets, shortcuts, wallpaper, and other items. The Home screen extends beyond the regular screen display width, so you need to flick left or right to view content in one of the screen's four extensions.  shows which part of the Home screen you are in.



The items in the bar at the bottom of the screen are always available for quick access.

To go to the Home screen

- Press .

To browse the Home screen

- Flick right or left.

To change your Home screen wallpaper

- 1 From your Home screen, press .
- 2 Tap **Wallpaper**, then select a wallpaper.

Widgets

Widgets are small applications that you can use directly on your Home screen. For example, the **Music player** widget allows you to start playing music directly and the Sony Ericsson Timescape™ widget displays incoming messages.

Application screen

The Application screen, which you open from your Home screen, contains the applications that come installed with your phone as well as the applications you download. The Application screen extends beyond the regular screen width, so you need to flick left and right to view all content.

To open the Application screen



- From your Home screen, tap .

To open an application

- From your Home screen or the Application screen, tap the application.

Applications

An application is a phone program that helps you perform a task. For example, there are applications to make calls, take photos and download more applications.

Status and notifications

The status bar at the top of your screen shows what's going on in your phone. To the left you get notifications when there is something new or ongoing. For example, new message and calendar notifications appear here. The right side shows the signal strength, battery status, and other information.



Checking notifications and ongoing activities

You can drag down the status bar to open the Notification panel and get more information. For example, open a new message or view a calendar event from the Notification panel. You can also open running applications, such as the music player.

To open the Notification panel



- Drag the status bar downwards.

Phone settings menu

View and change your phone settings from the Settings menu.

To access the phone settings

- 1 From the Home screen, tap .
- 2 Tap **Settings**.

More basics

Calling

To make a call

- 1 From your Home screen, tap .
- 2 Enter the number of the recipient and tap **Call**. To delete a number, tap .

To end a call

- Tap **End call**.

To answer a call



- Drag  to the right across the screen.

! If you are using regular headphones without a microphone, you have to remove the headphones from the headset connector to be able to answer the call.

To decline a call

- Drag  to the left across the screen.

Multimedia and text messaging

To create and send a message

- 1 From your Home screen, tap , then find and tap .
- 2 Tap **New message**.
- 3 Tap **Write message** and enter your message text.
- 4 To add a recipient, tap **Add recipient**, then select a contact or enter the full number manually.
- 5 If you want to add a media file, tap  and select an option.
- 6 If you want to add or remove recipients before sending the message, press . To add a recipient, tap **Add recipient**. To remove a recipient, tap **Edit recipients** and tap  next to a recipient field. When you are finished, tap **Done**.
- 7 To send the message, tap **Send**.

Legal information

! Android Market™ is not available in all countries. Some of the services and features described in this Startup guide are not supported in all countries/regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Sony Ericsson R800i/R800a

This Startup guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2011

Publication number: 1237-1153.2

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

This Startup guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guarantee the availability or performance of any third-party websites or offered services.

Remove the battery to see regulatory information such as the CE mark.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonyericsson.com/cws/corporate/common/legal/disclaimer for more information.

All illustrations are for illustration only and may not accurately depict the actual phone.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Explore more and get support



Support in the phone

User guide

The User guide is available in the support application in your phone and at www.sonyericsson.com/support.

Support application

User guide – read and search the User guide.
Phone optimizer – enhance battery and software performance, and improve connectivity.
Educate yourself – read tips and tricks, get the latest news, and watch how-to videos.
Email support – send an email to our support team.
Software updates – download the latest software.

To access the support application

- 1 From the Application screen, find and tap **User support** .
- 2 Find and tap the required support item.

Support on the web

Visit www.sonyericsson.com/support from your computer to get the most from your phone.

Contacts center

Contacts center – if all else fails. The relevant number is listed on the web and in the supplied *Important information* leaflet.

