

 


**Full Function
Radio Control**



GDG Toys Co. Ltd.

Av. Dr. Rodrigo Rodrigues, S/N
Edif. First International C. Centre
23 Andar, Macau

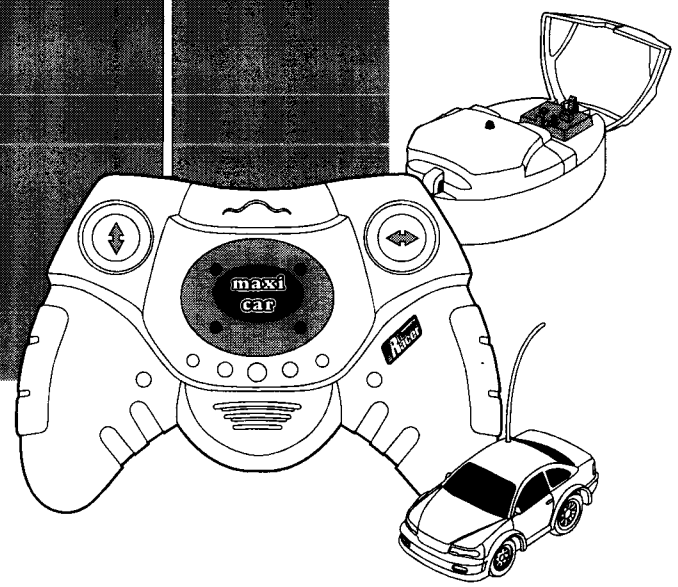

A Subsidiary of Golden
Dragon
Group

 
Entire Contents ©Copyright 2003 All Rights Reserved

Printed in China

www.maxicar-gdg.com

Quick Tips

1. When your vehicle starts to lose power, it may lose functions or performance. It is time for fresh batteries (or a recharge). Your vehicle's running time may vary depending on your driving style.
2. Radio interference can make your vehicle run poor. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires; large building; or CB radios. Try to stay away from these.
3. Point your transmitter antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
4. Don't drive your vehicle in sand or through water or snow.
5. Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

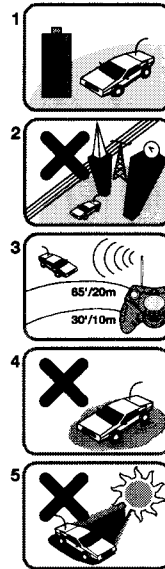


Safety Precautions

Adults, this toy is recommended for children 8 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

Caution

 
- Never drive your vehicle on streets! They are for real cars!
- Do not pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the wheels while the vehicle is switched on.
- If this toy is being operated by children under 8 years of age, adult supervision is recommended.
- To avoid accidental operation, remove all batteries when not in use.




Contents

- 1 x Micro Radio Control Car
- 1 x Transmitter
- 1 x Car Charger
- 1 x Antenna

 
Chassis



Transmitter

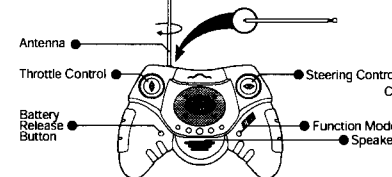 

Car Charger

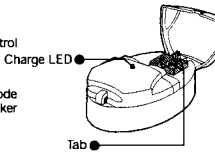 

Features

- Full function radio control car with 6 way movements
- Super micro size : Length x Width x Height = 56mm x 32mm x 23mm
- Function Mode :
Press once: the engine sound and 4 LED flashing lights are on
Press twice : only engine sound is on
Press 3 times : only 4 LED lights are flashing
Press 4 times : no sound or light

Mode	Mode 1	Mode 2	Mode 3	Mode 4
Beep Indicator	1 Beep	2 Beep	3 Beep	4 Beep
Sound	✓	✓	✗	✗
LED	✓	✗	✓	✗

- LED light for charging
- Only 2 minutes of charging for 7-10 minutes running time
- Ni-MH (Nickel Metal Hydride) battery inside the car can be charged up to 500 times
- Front suspension & adjustable front wheel alignment
- Range up to 8-12 meters
- 27, 35, 40, 49 or 57 MHz depending on the export countries (27 and 49MHz are only for the US)

BATTERY REQUIREMENT

 
3xAAA
Alkaline Batteries
for Transmitter

3xAAA
Alkaline Batteries
for Car Charger

Battery Installation (Transmitter)


1. Press battery release button.
2. Slide battery compartment out.
3. Unscrew and remove cover.
4. Install 3xAAA alkaline batteries with the correct polarity (+/-) as shown inside battery compartment.
5. Replace battery door.
6. Slide back the battery compartment. A "Beep" sound will be activated to assure the installment is completed.

CAUTION: To avoid sudden disruption while playing, please make sure the BATT. button will not be pressed.

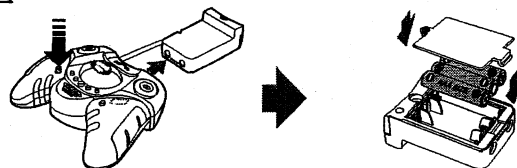


Battery Installation (Charger)

 1. Unscrew and remove cover.
2. Install 3xAAA alkaline batteries with the correct polarity (+/-) as shown inside battery compartment.
3. Replace battery door.

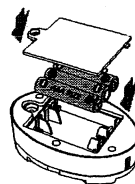

How to Charge the Thumb Racer

 1. Open the door as shown in the diagram.
2. Position the car with the headlights pointing up. Align the tab with the notch in the chassis and snap the vehicle onto the charger.
3. The metal contacts on the car and the charger must make contact. Then, the CHARGE light is on.
4. When the CHARGE light is off, the battery has completed charging.

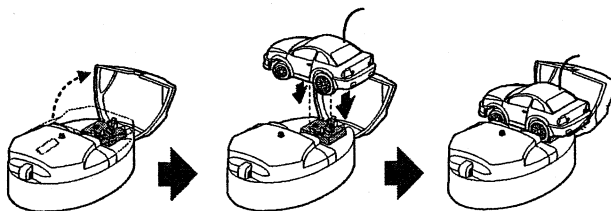

2

Car Battery Care

A rechargeable battery has been built in to the main body of the car. Using the battery incorrectly will cause it to leak, rupture or ignite. Follow these precautions:

- If your Thumb Racer has not been used for a long period or you are charging its built-in battery for the first time, the battery may not charge to full capacity. This does not indicate battery failure. Recharging and running the model 4 or 5 times will gradually lengthen run times.
- Fully discharge the battery by running the car before recharging.
- Recharge the battery only with the provided charger.
- Charge the battery only when the car is not running.
- To prevent overcharging, never recharge a battery which has already been fully charged. This will not increase running time or speed.

 
This product uses a Ni-MH battery. Ni-MH batteries are recyclable, and a valuable resource. To dispose of the battery, remove it and take it to a recycling center.

Important Battery Information

CAUTION
WHEN USING BATTERIES!

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent)
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove dead batteries immediately. Remove batteries if vehicle will not be used for a long period.
- For best performance use alkaline batteries. Battery life may vary depending on battery brand. Toy performance may decrease as batteries weaken.
- Do not short-circuit terminals.
- Recharge batteries only under adult supervision
- Dispose of batteries safely. Do not dispose of batteries in fire, as batteries may explode or leak.

Special Controls and Driving Modes

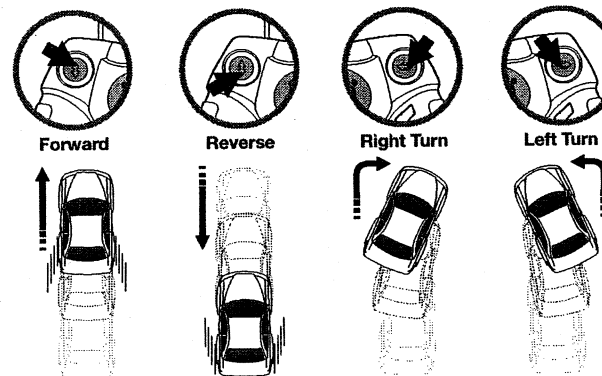

3

Thank you for choosing Maxicar.
Please read through these instructions
before playing and retain for future reference.

APPLICATION

1. This product may be used as a toy only.
2. When this product is exported from China, its use has to be approved by the Radio Law of the country of destination.
3. Maxicar is not responsible for unauthorized modification, adjustment and replacement of any parts of this product.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: this equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio / TV technician for help

No part of this manual may be reproduced in any form without prior permission. The contents of this manual are subject to change without prior notice. This manual has been carefully written. Please write to Maxicar if you feel that any corrections or clarifications should be made. Maxicar is not responsible for the use of this product.

Please keep all information for future reference.



Trouble Shooting

13

Problems	Causes	Solutions
Vehicle runs slowly or will not run (stop running)	• Loose battery connection or vehicle switch not on. • Weak AA batteries. • Batteries are not alkaline, are miss matched or are old. • Radio signals don't seem to reach the model.	• Check battery connector and vehicle switch • Charge battery or replace • Replace with fresh alkaline battery • Fully extend the antennas (vehicle and transmitter)
Vehicle moves by itself.	• There is radio interference in the area. • Another R/C vehicle with the same frequency is close by.	• Change location
Vehicle does not run smoothly	• No setting of the trim lever	• Adjust the trim lever to align wheels so that the car runs in a straight line.
Power indicator light on charger does not light.	• Charger battery weak or not connected	• Check connections and replace battery if required.
Vehicle does not work after going through water or snow	• Water in the electronic area	• Vehicle will take several hours to dry. Allow to dry overnight before trying again. • Avoid driving in water and snow.