




Westinghouse

PHOTO FRAME BABY MONITOR

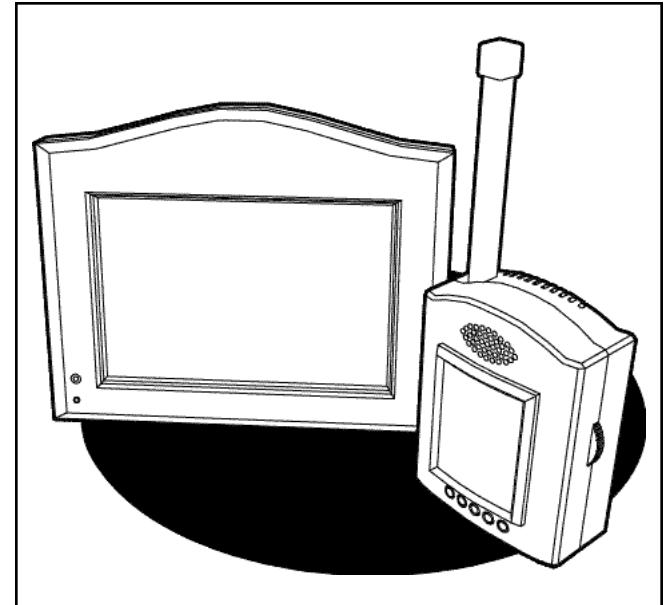

DA1084PT "Playtime" • DA1084BL "Bunny Luv"

You can be sure...if it's Westinghouse



Westinghouse, (W) and "YOU CAN BE SURE... IF IT'S WESTINGHOUSE" are trademarks of Westinghouse Electric Corporation used under license by Salton, Inc

CAUTION

This product cannot replace responsible adult supervision.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Keep a distance of at least three feet between transmitter and child when using the system for baby monitoring.
3. This system cannot replace responsible adult supervision of a child or person requiring care, but act only as a support!
4. This product is not intended to be used as a medical monitor and its use should not replace adult supervision.
5. Test sound reception of receiver before first-time use and whenever you change the location of the transmitter.
6. To prevent entanglement:
 - ◆ Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
 - ◆ Never use extension cords with the AC adaptor.
7. Never use transmitter or receiver near water (i.e., bathtub, sink, laundry tub, wet basement, etc.).
8. Always use transmitter and receiver where there is adequate ventilation. To prevent overheating, keep transmitter and receiver away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances that produce heat.
9. Excess dirt in transmitter microphone will hamper transmission of sound. Clean outer surface of transmitter and receiver with a cloth lightly dampened with a mild cleaning solution.
10. Never immerse transmitter, receiver, or AC adaptors in water.

BATTERY SAFEGUARDS

- ◆ Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage this product. Dispose of battery safely.
- ◆ Do not dispose of battery in a fire. The battery may explode or leak.
- ◆ Never short circuit the battery terminals.
- ◆ A non-rechargeable battery is not to be recharged.
- ◆ If removable rechargeable battery is used, it is only to be charged under adult supervision.
- ◆ A rechargeable battery is to be removed from the product before it is charged.
- ◆ If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

SAVE THESE INSTRUCTIONS — For Household Use Only

Thank you for purchasing this Baby Monitor with Picture Frame!

For proper set up and use, please read these instructions.

Please keep this instruction booklet for future reference as it contains important information.

CONSUMER INFORMATION

Occasionally, a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Westinghouse® Consumer Information at (800) 934-7455.

TECHNICAL DATA

Channel 1 frequency: 49.830 MHz

Channel 2 frequency: 48.873 MHz


AC adaptor: 9 volt 100MA / 120v ~, 60 Hz

Transmitter battery: 9 volt Block / Alkaline (not included)

Receiver battery: 9 volt Block / Alkaline (not included)

The maximum operating distance is 150m (open area) in ideal conditions.

INSTRUCTIONS FOR USE

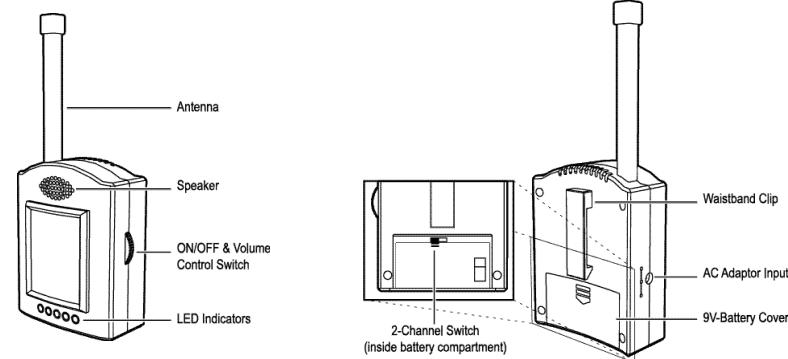

Power Options

This product includes two AC adaptors to power transmitter and receiver (plugs into standard household outlets – 120V AC). Both transmitter and receiver also run on DC battery power (9V alkaline battery – not included).

Setup and Use

1. Connect the appliance plug of the power adaptor to the power supply bushes of the transmitter and receiver.
2. Devices can also operate by DC battery power. Open the battery door and insert a 9V battery into the battery compartment.



Note: When the unit is operated by DC battery, if static is transmitted more frequently, please replace battery with a fresh 9V alkaline battery.

3. Make sure to connect the power supply (either AC power or DC battery) before use.
4. Set transmitter channel switch (located on back panel above the AC adaptor) to the same channel as receiver.
5. Turn on the power of the transmitter. The RED power indicator lights.
6. Turn on the power of the receiver. The RED power indicator lights (one of five LEDs shown on the front of the transmitter).

Testing Sound Reception

Test transmitter transmission and receiver reception each time you change location of use.

1. Place transmitter in room in which you intend to use it. Turn on the transmitter power. Turn on a radio for testing assistance.
2. Place receiver in room in which you intend to use it, or carry it along with you (if operating in DC power mode). Turn on the receiver power. Adjust the volume level by rotating the volume switch.
3. Variable light display will light when sound is received by receiver.
4. Keep the units away from other electronic appliances to avoid interference.

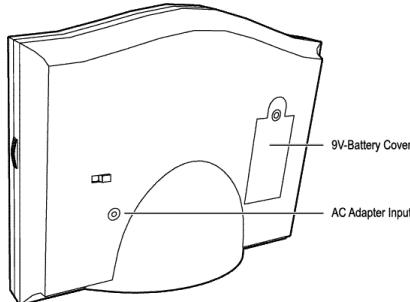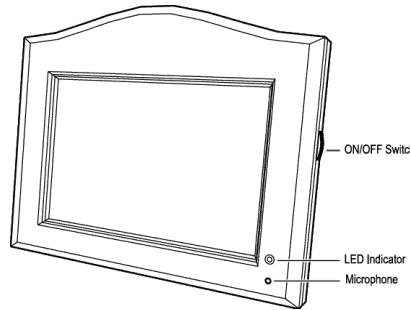

Note: If buzzing or static can be heard on the channel selected in the receiver, switch both units to the other channel. Selecting a channel is usually a one-time adjustment. Since transmission takes place on the 49 MHz frequency range, other baby monitors or radio installations might use the same frequency, disturbance can occur on rare occasions. In this case, please change the channel. Disturbances due to other radio installations are not a device fault and are unavoidable.

Tips

On Transmission: When sound is detected by the built-in microphone, the transmitter unit starts transmitting automatically. The transmission stops when sound is no longer detected.

On Receiver: When the receiver is not receiving sound signals, the four RED receiver indicators (not including the power light) go out and the loudspeaker is silent. If the sound quality is too poor, the signal might be blocked. In this case, move the receiver unit closer to the transmitter unit to restore sound reception again.

Picture Frame

You may insert a photo (approximate size 5.79" x 3.78") into the transmitter and a photo (approximate size 2.28" x 1.73") into the receiver.

Inserting Photos

Transmitter:

- ◆ Press and push the two OPEN knobs at the bottom and open the panel.
- ◆ Insert a photo and fix it into the frame.
- ◆ Press the front panel back against the rear case until you hear a click.

Receiver:

- ◆ Simply slide in a photo from the top of the frame.

PROBLEMS AND SOLUTIONS

Problem	Solution
Transmitter power indicator is not lit.	Check if power supply has been connected and the power switch has been turned on.
Receiver power indicator is not lit.	Check if power supply has been connected and the power switch has been turned on.
You hear static or buzzing from the receiver.	<ol style="list-style-type: none"> 1. Make sure channel switches on both transmitter and receiver are set to the same channel. 2. Receiver is out of transmission range. <p>Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.</p>

Hints

- ◆ Do not use more than one transmitter and one receiver at the same time in the same household.
- ◆ Always remember that you are using public airways when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside of your home. To protect privacy in your home, always turn transmitter off when not in use.

FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Playtime Baby Monitor

Model Number: DA1084PT

-and -

Bunny Luv Baby Monitor

Model Number: DA1084BL

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Playtime Baby Monitor or Bunny Luv Baby Monitor

Salton, Inc.

P.O. Box 1637

Columbia, MO 65205-1637

(800) 934-7455

Email: Salton@Saltonusa.com

Limited One Year Warranty

Warranty: This Westinghouse® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA. Warranty does not extend to any units which have been used in violation of written instructions furnished with the product, or to units which have been altered or modified, or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranty: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free (800) 934-7455 between the hours of 9am and 5pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number DA1084PT "Playtime" or DA1084BL "Bunny Luv" (as appropriate) when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (800) 934-7455.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include (US) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty/brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty/brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

Attn: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 1637
Columbia, MO 65205-1637
(800) 934-7455
Email: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to: negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Westinghouse, (W) and "YOU CAN BE SURE... IF IT'S WESTINGHOUSE" are trademarks of Westinghouse Electric Corporation used under license by Salton, Inc.

For more information on Salton products: visit our website at www.eSalton.com.

© 2003 Salton, Inc. All Rights Reserved

Printed in China